

## INSTALLATION INSTRUCTIONS

### PREMIUM SOFT TRI-FOLD TONNEAU COVER

*Before starting the installation please read these instructions*

#### COMPONENT LIST

- 1 x Soft Vinyl Cover Assembly
- 2 x Front and Rear self-adhesive foam Dust Seal strips.
- 2 x Screw clamps ( installed on cover assembly)
- 2 x Lever Clamps ( Installed on cover assembly)


#### STEP 1.

Wash and thoroughly dry the truck bed, paying particular attention to the front and rear bed rails, remove and excess oil or grease with a soft cloth and an automotive degreaser.


#### STEP 2.

##### CHECK FIT TONNEAU COVER

- Place the tonneau on the front of the truck bed with the tie down straps facing forward.
- Unclip the tie-down straps.

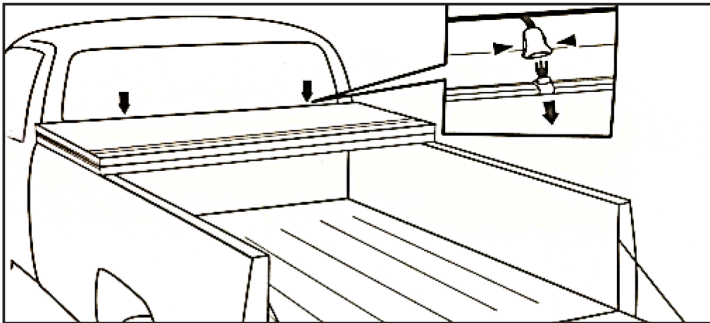


- Unfold the cover and check that the cover lies flat on the rails with no overhang, but wide enough that the clamps are able to hook up under the bed rails to create an airtight seal all around the bed.
- The cover should be long enough to at least partially cover (but not overhang) the bulk head and tailgate rails.

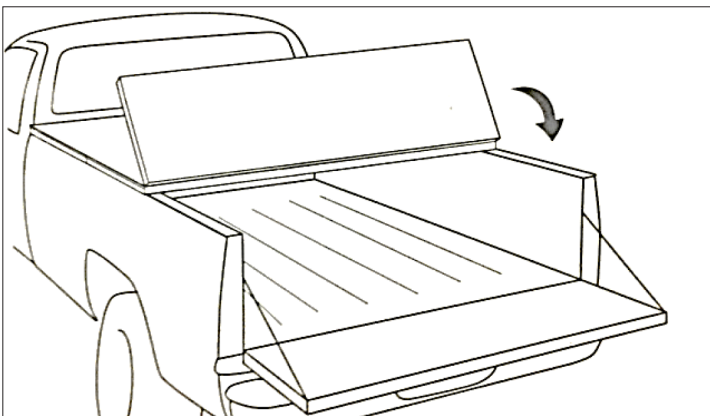

#### STEP 3.

##### INSTALL THE FRONT AND TAILGATE DUST AND MOISTURE SEALS

- Trim the Dust seal to the exact width of the bulkhead and tailgate rails.
- Remove the protective backing from the seal and locate them so that they are centered and running parallel along the bed rails.
- Make sure that the seals lie flat on the bed with no kinks that may affect the tightness of the seal.

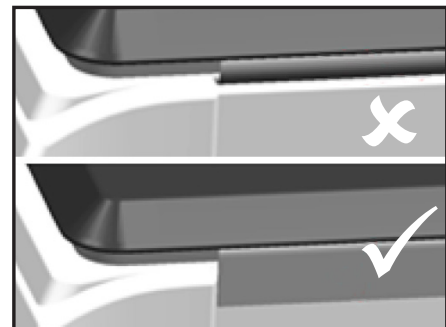


# BLACK HORSE



## STEP 4.

### FRONT CLAMP MOUNTING


- Pull down the clamp until the 'Jaws' hook under the bedrail section. The clamp pressure can be increased by turning the knob clockwise
- The clamp should be tightened down until the 'Q' seals along both sides of the bed are slightly compressed. Do not over-tighten the 'Q' seal should not be squashed flat on the truck bed.

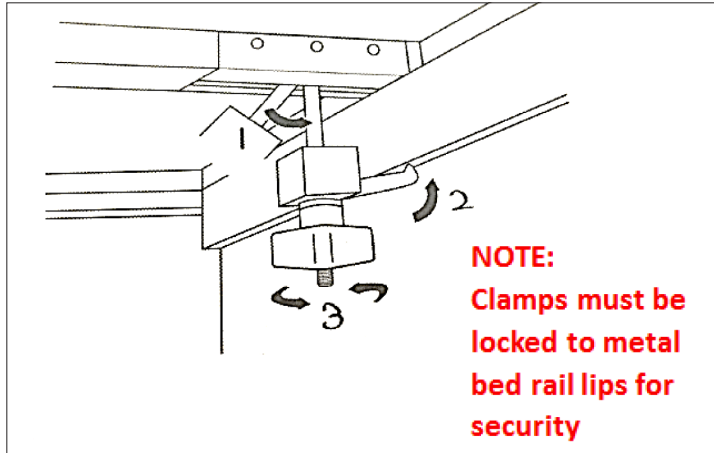

## STEP 5.

### REAR CLAMP MOUNTING


- Once the front clamps are installed, unfold the cover and check that it is even on both sides ( any minor adjustments can be made by loosening the front clamps and re-aligning)
- The cover need not cover to the outside edge of the bed rails, but ensure that it is wide enough that the 'Q' seals can be compressed.
- Pull down on the latches and place the 'Jaw' section under the bed rail lip. The tension can be adjusted by rotating the lever. To lock the cover into place, pull the lever into a vertical position. Adjust the tension if the 'Q' seals are not compressed, but do not over-tighten, the 'Q' seals should not be compressed flat.

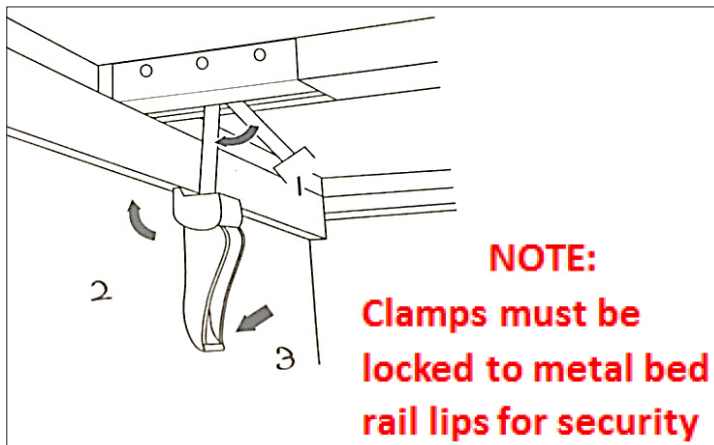

## STEP 6.

### SECURITY PIN

- Remove the locking pins from inside the handle cavity, and insert in the pinhole

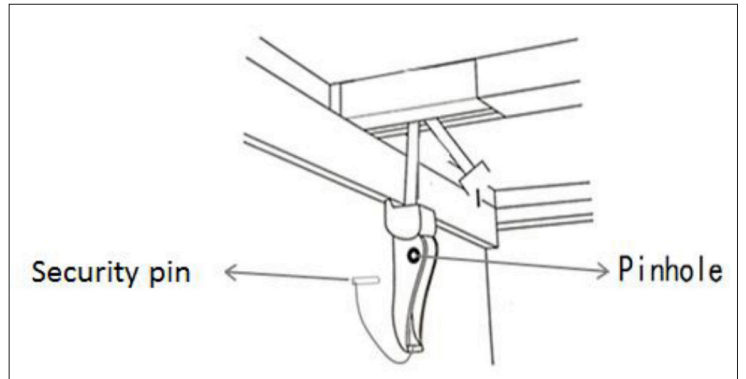

## CHECK LIST

- Check that there is no movement in the cover, and adjust the clamps tension if necessary.
- Check that the cover is mounted square on the truck bed.
- Check that the clamps are clamped to the metal lip of the rails, not to any plastic parts.
- Check that the rear locking pins are in the 'locked' position.
- Regularly check the 4 locking clamps for tightness

## CARE OF YOUR TONNEAU

Use only mild soap and water to clean your tonneau. Do not use vinyl conditioner or any silicone based products.

## SAFETY NOTES

- *All Clamps Must Be Secured Prior To Vehicle Operation.*
- *Never Place The Clamps Under The Plastic Bed Rail Cap Lips.*
- *Never Drive With the Cover Fold Open and the Safety Srraps Unbuckled.*