







Installation Instructions

JLT 3.0 Oil Separator Passenger Side (1999-2004 Ford Lightning; 2002-03 F150 Harley Davidson)
#3027P

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) JLT angled mounting bracket, (2) fine thread machine screws, (2) Course mounting screws, (2) 3/8 hose kits with fitting installed
2	<p>Gather all of the following tools needed for the installation: Drill with small bit, Phillips screw driver, light oil.</p> <p>Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel directly above the PCV connection. It must be mounted low enough so it doesn't come in contact with the hood and in a location where you can still unscrew the can and remove it.</p> <p>Hold the bracket in position and mark the holes to be drilled Drill 2 holes smaller than the mounting screws and attach the mount.</p> <p style="text-align: center;">Here is where we recommend:</p> 
3	<p>Now you will need to install the hoses onto the Separator. Use light oil on the fittings to aide in installation of the hoses. No clamps are needed as these are a very tight fit.</p> <p>The short hose will go onto the T side of the can, the long hose will go onto the J side of the can:</p> 
4	

5	<p>Use the 2 supplied fine thread screws to attach the Oil Separator to the JLT mounting bracket. Mount the Separator so the JLT LOGO IS LINED UP WITH THE JLT ON THE BRACKET.</p>
6	<p>Pull the hard plastic PCV hose out of the rubber at the IAC valve and at the rubber T towards the valve cover.</p> 
7	<p>Once the can is mounted, the short hose will run to the rubber T. The long hose will loop around the Separator to the Idle air control valve (IAC).</p> 

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail info@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

Warranty: JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.

