













Installation Instructions

09-18 DODGE RAM 1500 Quad & Crew Cab

PARTS LIST

#	PICTURE	Description	QTY	#	PICTURE	Description	QTY
1		M10 T-bolt with M8 nut	6	2		M8 Flange bolts	6
3		M10 Flange nut	6	4		Space plate for 09-14 mode (drive side front bracket)	1
5		Plastic retainer T-bolt holder (remove before tighten)	6	6		M8 Flange nut	6
7		Drive side Front bracket	1	8		Drive side middle & rear bracket	2
9		Passenger side bracket	3	10		T-Bolt	6

Passenger/Right
Rear Mounting
Bracket



Passenger/Right
Center Mounting
Bracket



Passenger/Right
Front Mounting
Bracket



Driver/Left Front
Mounting Bracket



Drive/Left Center
Mounting Bracket











Driver/Left Rear
Mounting Bracket



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

Drive Side Installation

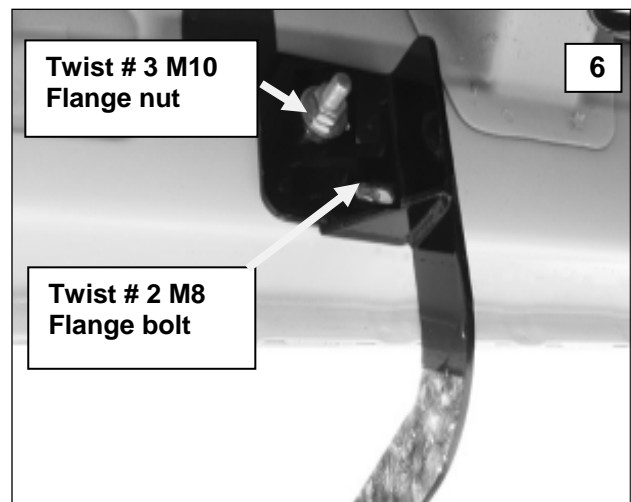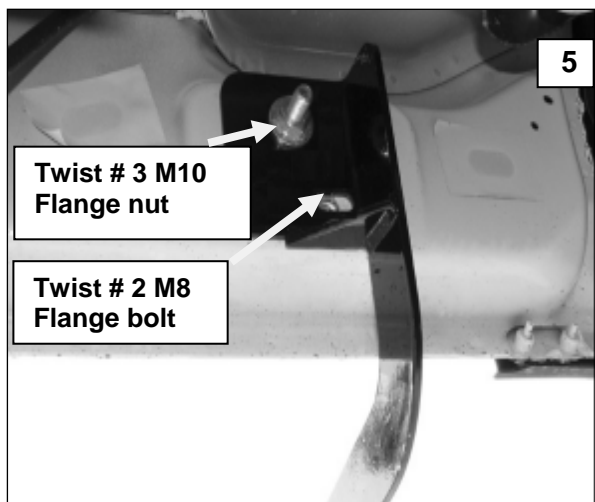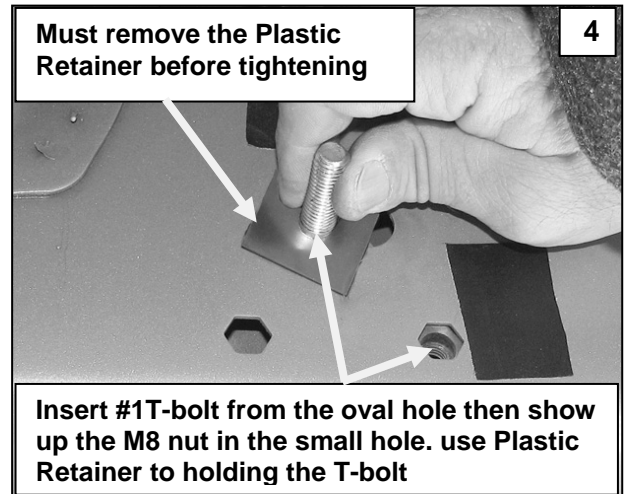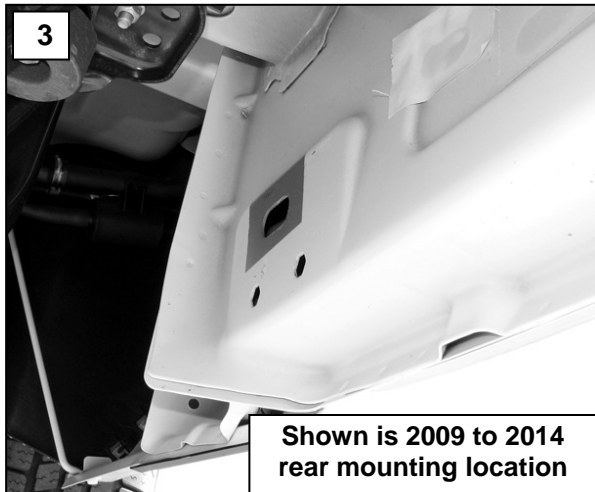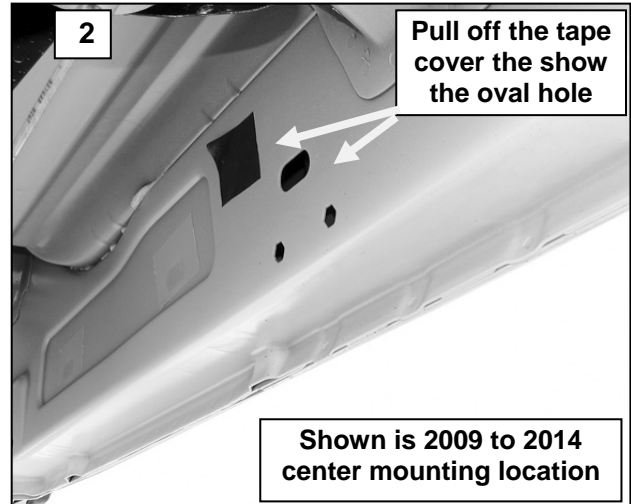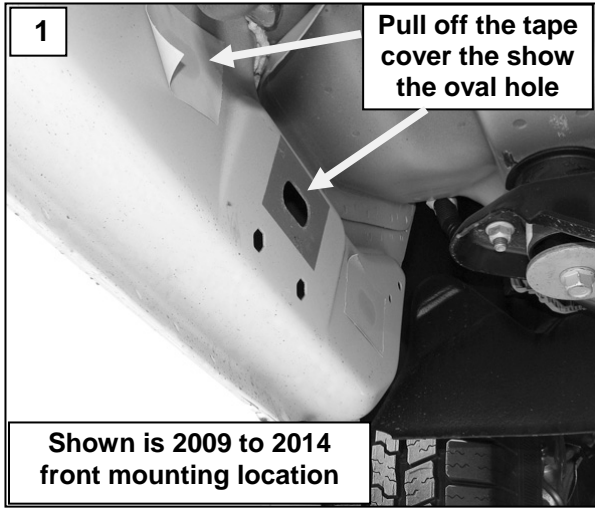

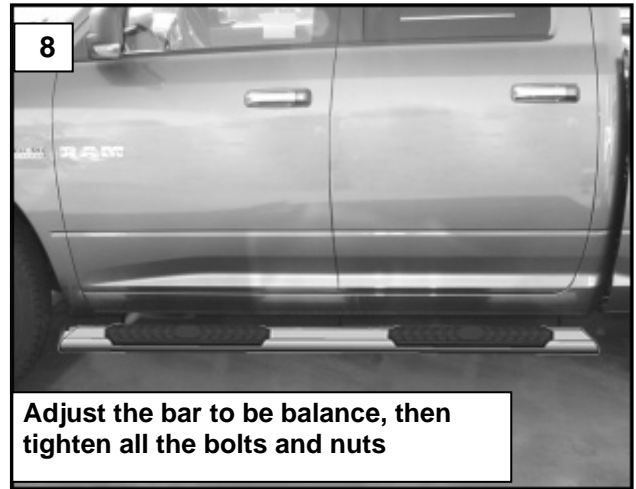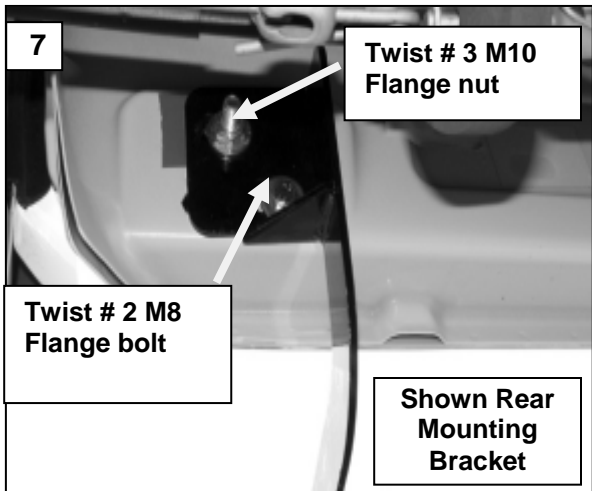

9.Repeat steps 1-8 for passenger side installation.

Additional installation for 2015+ Models

