













Installation Instructions

09-18 DODGE RAM 1500 Quad & Crew Cab

PARTS LIST

| # | PICTURE | Description | QTY | # | PICTURE | Description | QTY |
|---|--|---|-----|----|---|---|-----|
| 1 |  | M10 T-bolt with M8 nut | 6 | 2 |  | M8 Flange bolts | 6 |
| 3 |  | M10 Flange nut | 6 | 4 |  | Space plate for 09-14 mode (drive side front bracket) | 1 |
| 5 |  | Plastic retainer T-bolt holder (remove before tighten) | 6 | 6 |  | M8 Flange nut | 6 |
| 7 |  | Drive side Front bracket | 1 | 8 |  | Drive side middle & rear bracket | 2 |
| 9 |  | Passenger side bracket | 3 | 10 |  | T-Bolt | 6 |

Passenger/Right
Rear Mounting
Bracket

Passenger/Right
Center Mounting
Bracket

Passenger/Right
Front Mounting
Bracket

Driver/Left Front
Mounting Bracket







Drive/Left Center
Mounting Bracket



Driver/Left Rear
Mounting Bracket



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

Drive Side Installation

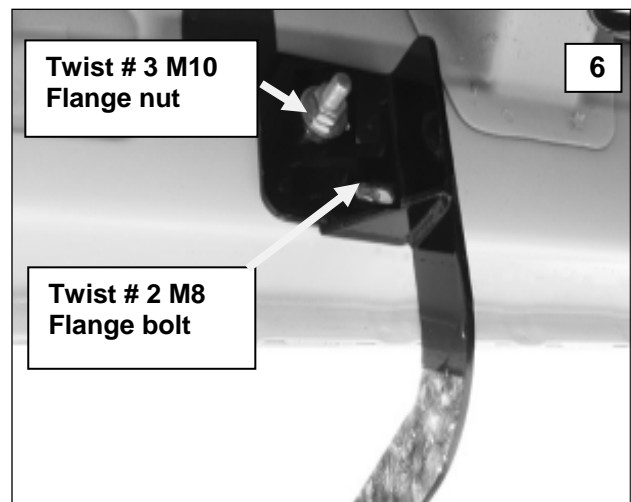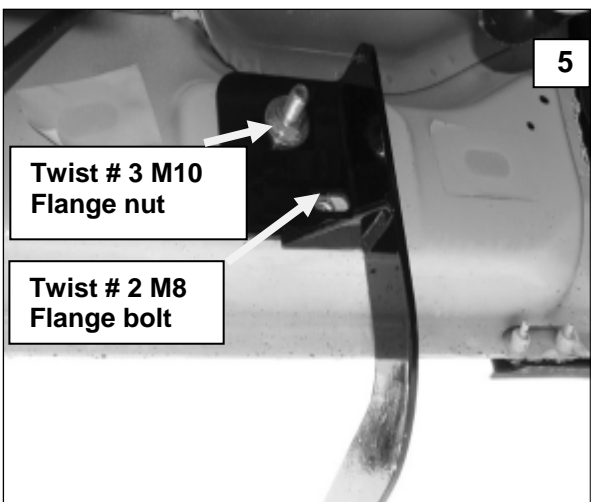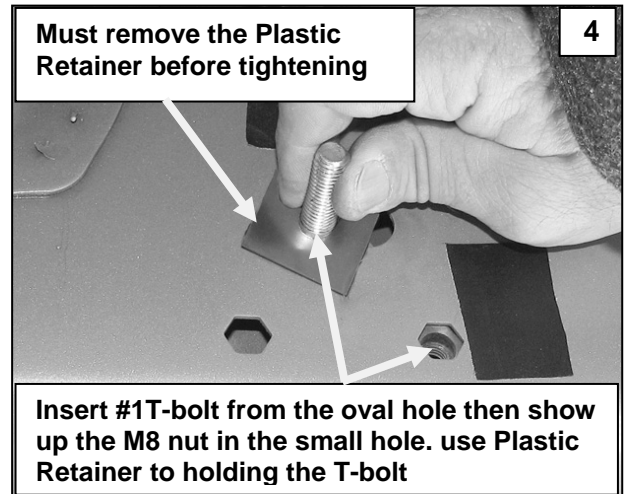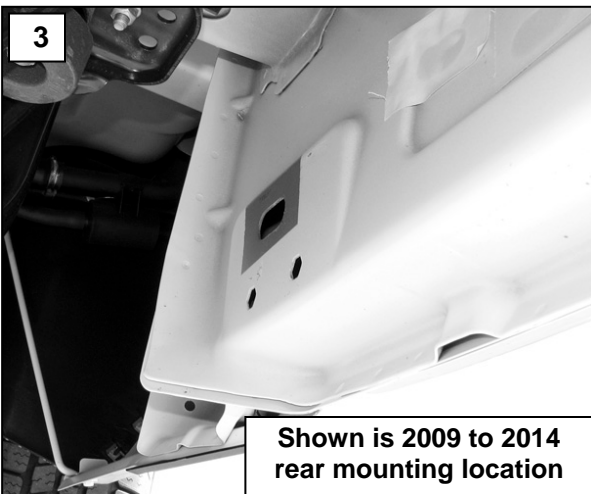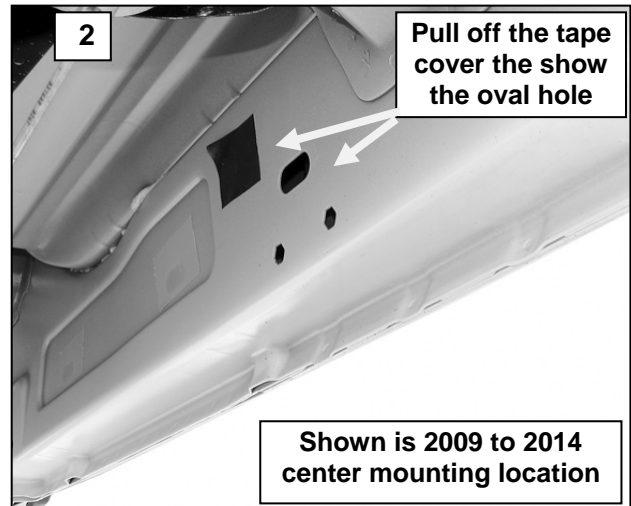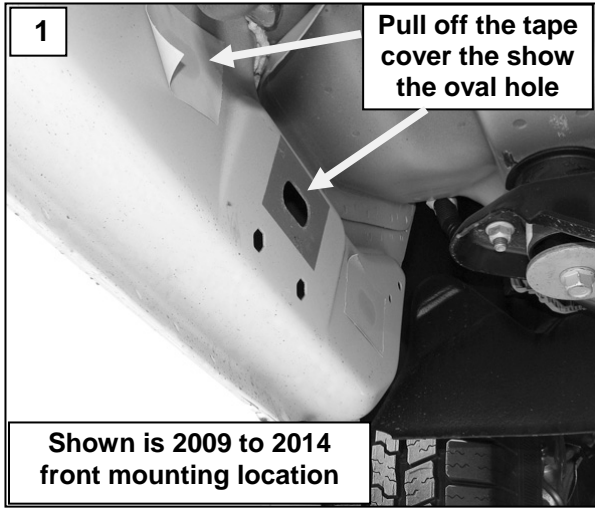

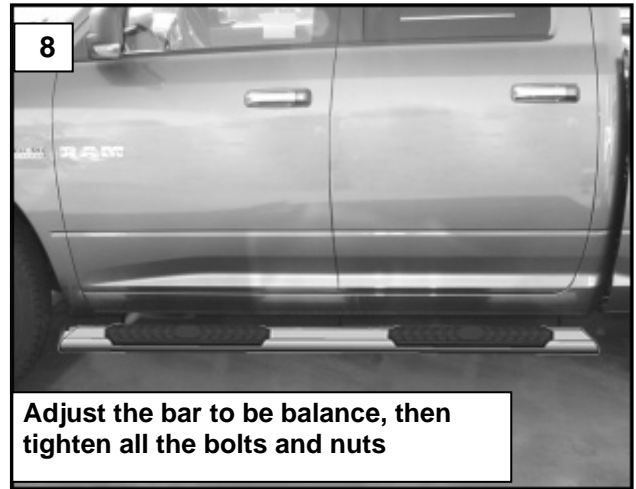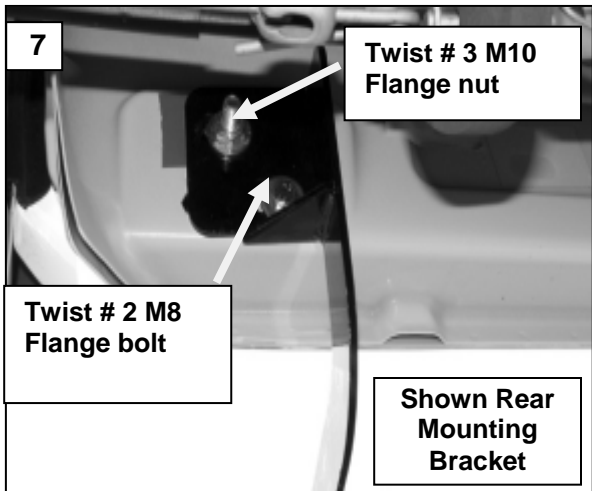

9.Repeat steps 1-8 for passenger side installation.

Additional installation for 2015+ Models

