

54" Curved LED Light Bar Mount

(2002-2008) Ram 1500

Contents :


- (1) Driver Mount
- (1) Passenger Mount
- (2) Gaskets
- (4) 3/16" Rivets

Tools Required:

- T15 Torx Bit
- 3/16" Drill Bit
- Drill
- Rivet Gun
- Helper

Installation Instructions:

1. Open the doors and pull back the weather stripping from the top of the door jam on both sides of the truck.

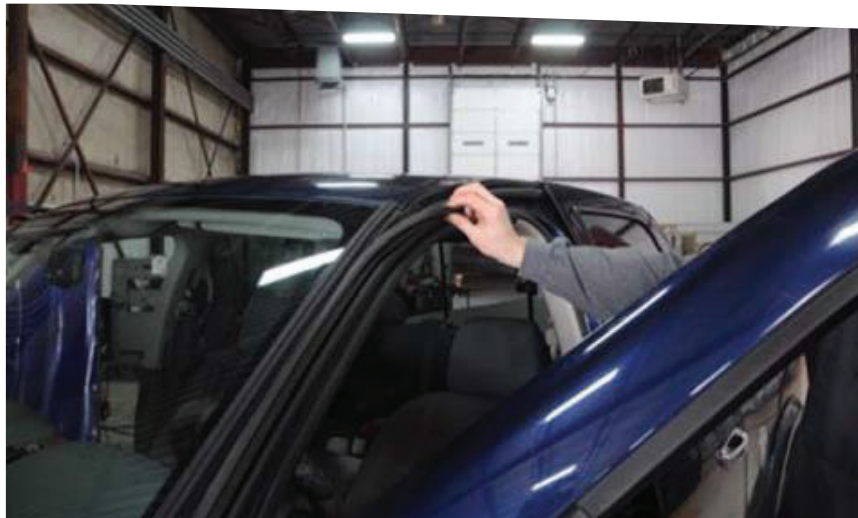

2. Remove the factory screw using a T15 Torx bit.



3. Place the light mount on the truck with the first hole lined up with the factory screw opening, re-install the factory T15 Torx screw.



4. With the bracket in place drill the remaining holes with a 3/16" drill bit.



5. Using the supplied 3/16" rivets, rivet the bracket to the vehicle.



6. Repeat the same steps for the other side of the truck.
7. With a helper loosely install the light bar.



8. Adjust the light bar to the desired position prior to tightening the bolts.
9. Remove the remaining T15 Torx screws holding down the plastic molding and pull away from truck.



10. Run the light bar's wire under the mount and behind the A-pillar's plastic molding.
11. Reinstall the removed T15 Torx screws to secure plastic molding and weather stripping back in the factory location.