

BILLET GRILLE INSTRUCTIONS

PN: R109974/ R109977


09-12 DODGE RAM (ST/SLT) 1PC BUMER

Hardware

2 -- Screws 2 --Clip Nuts

NOTE: Be Careful not to scratch the grills Surface.

The picture for hardware together with the grille

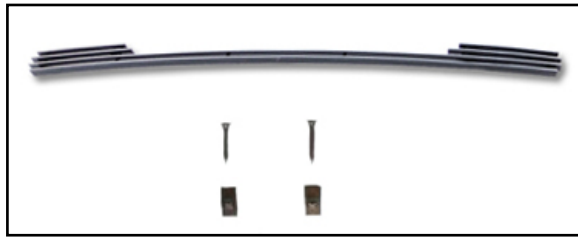

- (1) Remove the new billet packing and take out hardware.
- (2) Put the new billet grille into OEM opening grille shell stock to test it fitment.
- (3) Center the billet grille into the bumper opening. Mark sign on the stock grille according to weld tabs holes.
- (4) Drill 3mm hole in marked.
- (5) Re-center billet grille into opening grille shell, insert screws from front of grille weld tab, then place "K"nut in the back and tight it complete installation.(Notice: be sure the new billet is center then tight each screws is ok)

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!