
SOFT ROLL-UP TONNEAU COVER

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Soft Roll-Up Tonneau Cover
(2) Tonneau Cover Rails
(6) Clamps
(6) Weather Strip

TOOLS REQUIRED


Scissors
Phillips Head Screwdriver
10mm Socket
Socket Wrench

STEP 1



Position the tonneau cover rails on the vehicle. The hook and loop will face away from the bed. The end with the black plastic cap/latch faces the rear of the vehicle.

STEP 2

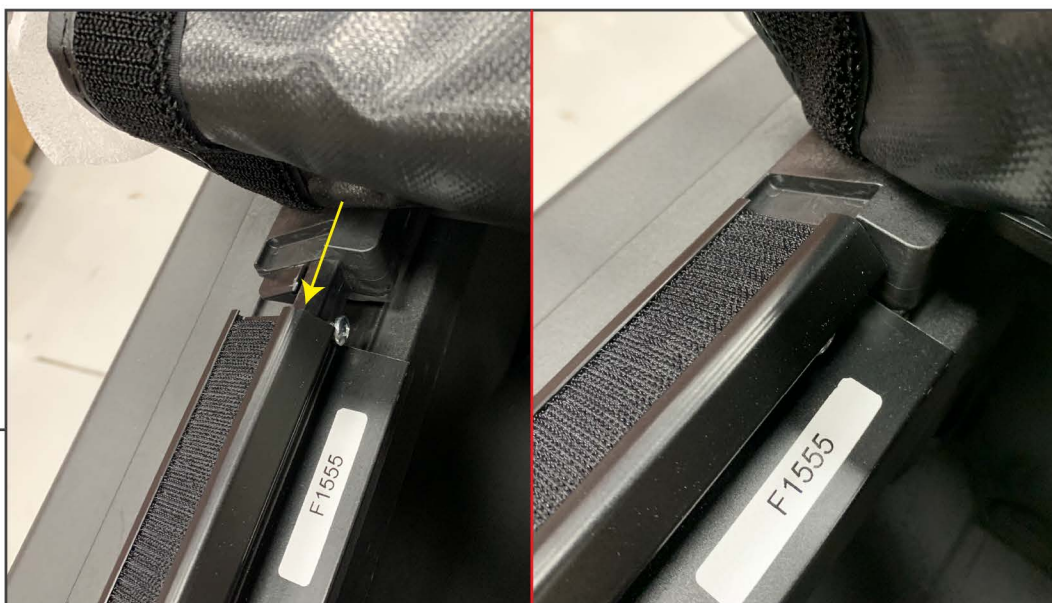


Place the tonneau cover at the front of the bed. Slide the tabs of the tonneau cover into the open end of the tonneau cover rails. Using a Phillips head screwdriver, secure the rails to the tonneau cover.

STEP 3



For vehicles with factory bed rails that sit higher than the front edge of the bed, apply the supplied weather strip to fill the gap. This will help reduce water intrusion. For vehicles where their front edge is flush with the bed rails this step is not required.

STEP 4

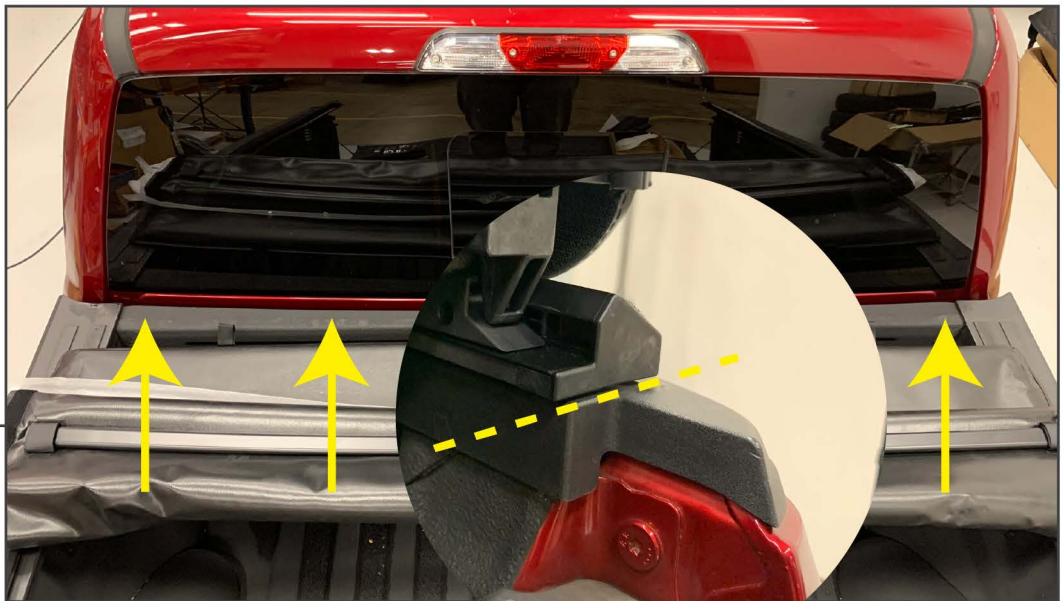

Push the tonneau cover forward to cover the front of the bed. Evenly space the bed rails at the back of the bed so that the tonneau cover is square.

STEP 5



Evenly space (3) of the supplied bed rail clamps along each side of the bed. The clamp will engage the factory bed rail and the tonneau cover rail. Do not fully tighten these at this time.

STEP 6



Hook the tonneau cover into the black latch at the end of the tonneau cover rail. The tonneau cover rails may need to be adjusted to get tonneau cover to lock into place.

STEP 7



With the tonneau cover installed, loosen and re-position as needed for best fit. Tighten all clamps once the tonneau cover is in its final position.

STEP 8



Fold the tailgate down to access the lock release, gently pull down while folding the tonneau cover back.

STEP 9



Fold the tonneau cover back when not in use. Secure the tonneau cover to the using the attached nylon strap and hook. Installation is now complete.