



FENDER TRIM


Installation Instructions

7545 Rosecrans Ave. | Paramount, CA 90723 | Toll: 866-303-4714 | Fax: 562-724-9668
Email: info@carrichs.com | www.carrichs.com




Users are responsible for all compliance of state and local laws while operating a motor vehicle. Users assume all risks.


STEP 1. Place fender trim over fender to be installed and align properly from edge to edge

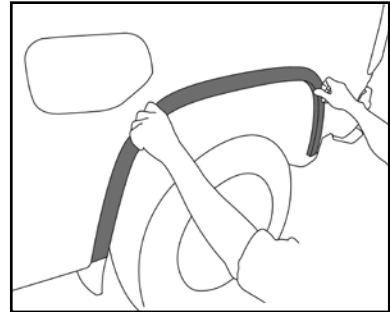

STEP 2 . Firmly press Carrichs' fender trim onto vehicle's fender and mark reference points located on fender trim. Do this to all pilot holes on fender trim.

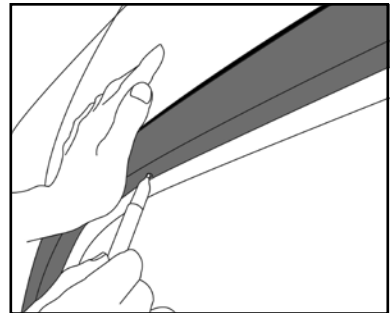

STEP 3 . With fender trim removed, make pilot holes using 7/64 drill bit at designated reference points marked from previous step. Do this to all marked reference points.

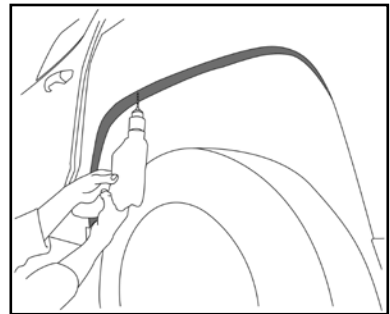

STEP 4 . Drive the supplied stainless steel screws to fender trim with a Phillips screwdriver. Repeat for all other pilot holes.

