

REDROCK^{4X4}

07-18 Silverado / Sierra Tailgate Assist

Contents:

- (1) - Shock
- (1) - Upper Ball Mount Plate
- (1) - Lower Ball Mount Plate
- (1) - Nutsert Tool
- (1) - M6 x 1.0 x 20mm Bolt
- (1) - Torx Wrench

Tools Required:

- Ratchet
- 10mm Wrench
- T-30 Torx bit
- 13mm socket
- Torque Wrench

**Note:

Install on Driver Side only.



Step 2\\

Install the upper bracket behind the upper lift gate bolt. Reinstall lift gate strap.



Step 4\\

Place the nutsert assembly in the tail gate, if it is a tight fit gently tap the assembly in with a rubber mallet. Mark the nut for a visual reference when turning. Hold the Allen head bolt steady and turn the nut (9) full rotations. **Note: Do not turn the Allen bolt. Over-tightening the nutsert will damage it.



Step 1\\

Remove the lift gate strap and loosen the 13mm lift gate bolt.




Step 3\\

Assemble the nutsert tool as follows: nutsert, washer, bearing, washer, nut, Allen bolt. Adjust the tool so that there is 3/4" between the flat washer and the head of the Allen bolt.



Step 5\\

Apply blue thread lock to the threads of the (1) M6 x 1.0 x 20mm bolt, and secure the lower ball mount plate to the tailgate. Torque the bolt to 8ft-lbs.

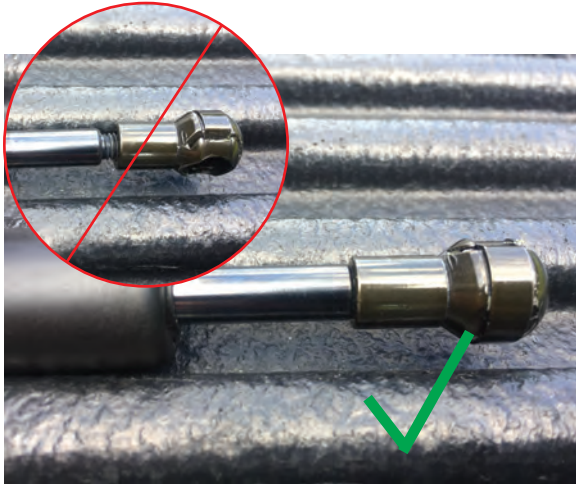

Step 6\\

Before installing the shock ensure both of the shock ends are screwed on all the way.



Step 7\\

Press the shock onto the ball stud mounts.