

Bug Deflector Install Guide

(07-13) Silverado

Contents:

- (1) Bug Deflector
- (2) Rubber Well Nuts
- (3) Machine Screws
- (4) Rubber Bumpers
- (1) Prep Pad

Tools Required:

Phillips Head Screw Driver



Step 1//

Begin by opening the hood and locating the (3) mounting locations.




Step 3//

Attach the Bug Deflector to the hood using the supplied machine screws. ****Note:** If the well nuts spin while installing the screws, apply firm pressure to the Bug Deflector. This will help prevent the well nut from spinning until the well nut takes hold on the hood.



Step 2//

Press the well nuts into the factory holes. If the holes are slightly oversized, use tape to hold well nut in place. If tape is used, the hole in the well nut needs to remain open. ****Note:** Well nuts work with pressure. As you tighten the screw it pulls the well nut onto itself effectively clamping itself to the hole its inserted into.

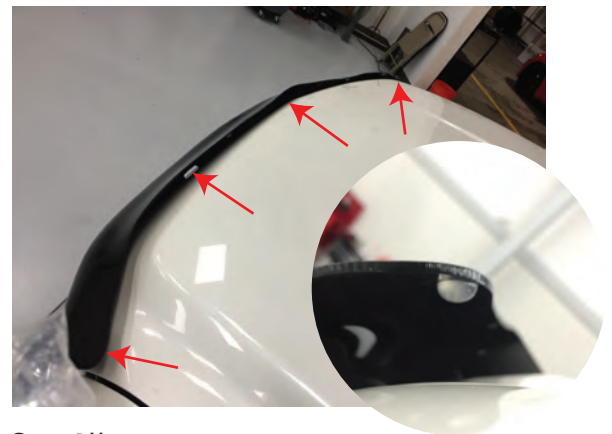

Step 4//

Finish the installation by installing the supplied rubber bumpers to protect the paint anywhere the Bug Deflector may make contact with the hood.