

BILLET GRILLE INSTRUCTIONS

PN: S112436/ S112437

03-06 CHEVY SILVERADO AIR DAM 1500/2500/3500 (2PC)

Hardware

2 -- "Z" Brackets

4 -- Bolts


4--Nuts

4 -- Flat Washers

4 -- Lock Washers

NOTE: Be Careful not to scratch the grills Surface.

(1) Identify the left and right bumper inserts.

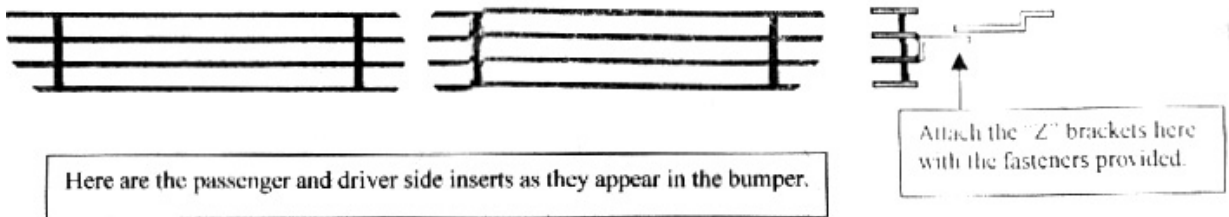

(2) Attach the brackets as pictured in the diagram on the right. The brackets then mount to holes on top of the bumper. Make sure the billets are centered and tighten the fasteners.

(3) Installation is now complete.

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!