

## BILLET GRILLE INSTRUCTIONS

**PN: S112463/ S112465**


**2014-2015 Chevy Silverado 1500 All models bumper**

### Hardware

2-- Bolts    2 -- Flat tabs    2 -- Lock nuts

**NOTE:** Be Careful not to scratch the grills surface.

- (1) Identify the grille & hardware with parts list.
  - (2) Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the bumper.
  - (3) Center the billet grille into the opening of the factory plastic shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the plastic shell.
  - (4) Secure billet grille using the lock nuts and flat tabs from the back side of the plastic shell.
- See below:

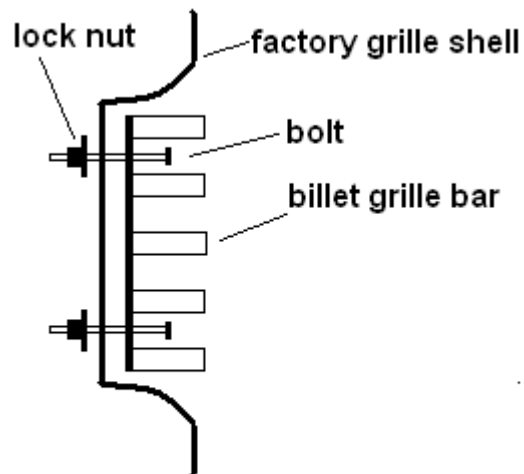

**installation diagram**

- (5) Make sure the billet grille is centered and tighten the fasteners.
- (6) Reinstall the black plastic cover which was removed in step 1.
- (7) Installation completed

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!