

# 50"/54" Curved LED Light Bar Mount

(2014-2015) Silverado/ Sierra 1500

**Contents :**


- (1) Driver Mount
- (1) Passenger Mount
- (2) Gaskets
- (6) 3/16" Rivets

**Tools Required:**

- 3/16" Drill Bit
- Drill
- Rivet Gun
- Tape measure
- Permanent Marker

## Installation Instructions:

1. Install the gaskets on the back side of the light mounts.
2. Open the driver's door and measure 16" from the top of the fender to the edge of the light mount. Once in place mark the position of the light mount.
3. With the light mount in position, drill three holes through the metal with a 3/16" drill bit. NOTE: Placing a piece of tape on the drill bit about 1/2" from the end of the bit (closer to the drill's chuck) will aid in not drilling too far into the cab of the truck.

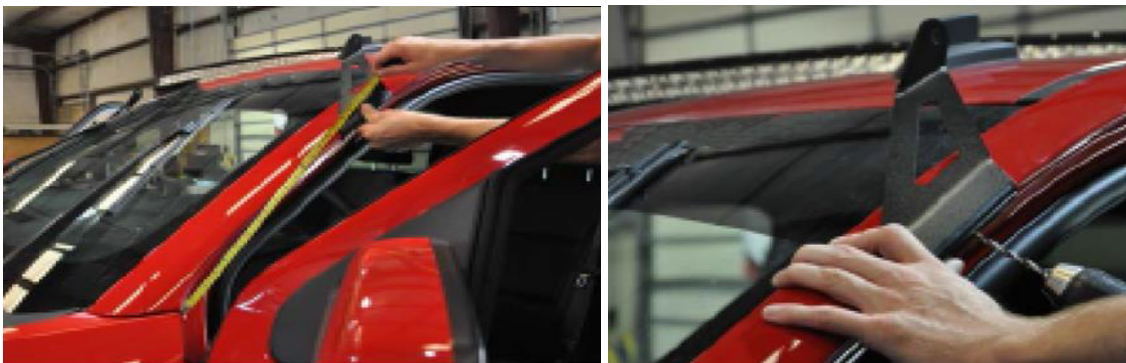

4. Use the supplied 3/16" rivets to secure the light brackets. NOTE: Repeat steps on the driver side.
5. Install the lightbar with the light bar provided hardware. Run the wiring down the side of the windshield. using a small amount of silicone on the back side of the wiring will secure the wiring to the vehicle.

