


**Step 1**  
**\*\*Remove Negative Battery Terminal\*\***  
Remove the (2) 8mm bolts securing the tail light.



**Step 2**  
Remove the tail light by applying firm pressure rearward.



**Step 3**  
Disconnect the factory plugs from the stock tail light.

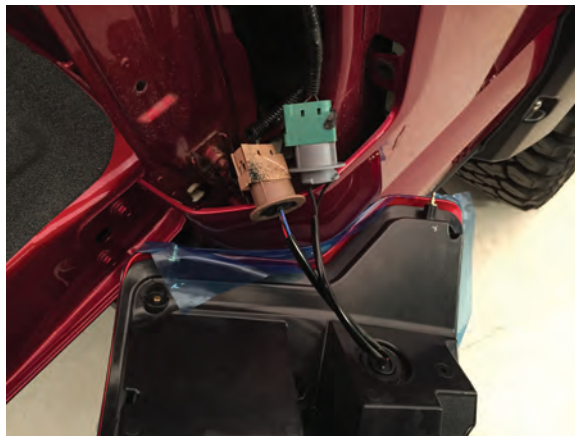

**Step 4**  
Connect the Raxiom tail light plugs to the factory harness.

Brown plug to the Brown plug.

Gray plug to the Green plug.



**Step 5**  
Re-install the new tail lights in reverse order.