


15-18 F150 Super Crew Cab HD Rocker Step

PARTS LIST:

1	Driver/left Rocker Step	18	8mm x 24mm x 2mm Washer
1	Passenger/right Rocker Step	18	8-1.25mm Nylon Lock Nut
		18	8mm Plastic Washer

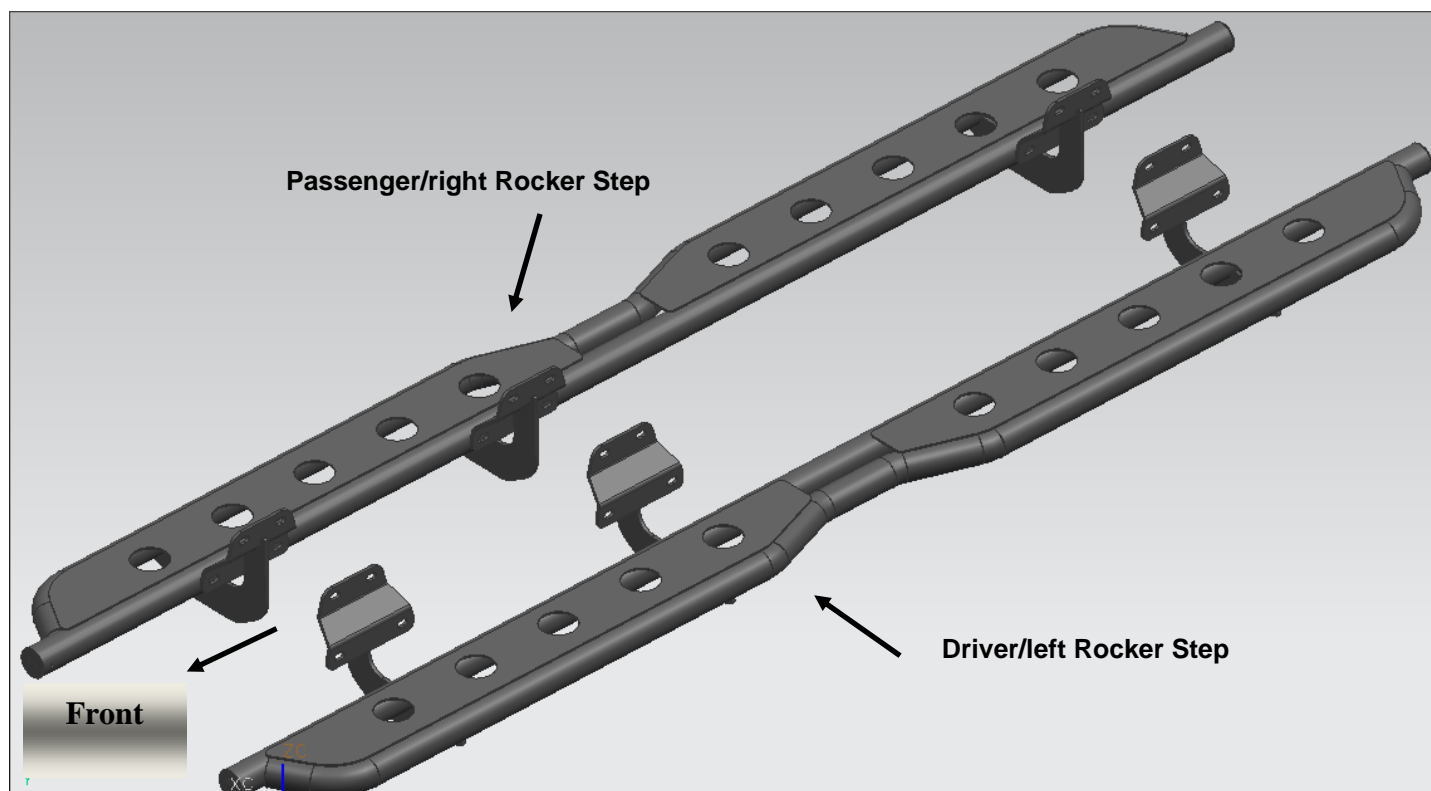


PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.


1. Start the installation under the driver side of the vehicle. Locate the front factory running board mounting location along the inner side of the body, **(Figure 1)**.
2. Slide (1) Plastic Washer over each of the (3) factory mounting studs in the body panel, **(Figures 2 & 3)**. **IMPORTANT:** The Plastic Washers are designed to prevent corrosion between the aluminum body panel and the steel mounting brackets. **Do not install the Brackets without the Plastic Washers.**
3. Carefully unwrap and select the driver/left rocker step. With assistance, place the step over the factory threaded studs. Attach the side step to the threaded studs with (9) 8mm Flat Washers and (9) 8mm Nylon Lock Nuts, **(Figures 5-7)**. Do not fully tighten hardware at this time.
4. Once the step is installed and the bolts snug tightened, check the fitment and alignment. Once everything is verified, torque the bolts down to 20ft-lbs.
5. Repeat **Steps 1-7** for the passenger side rocker step installation.
6. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Running Board.


Driver/left Side Installation Pictured

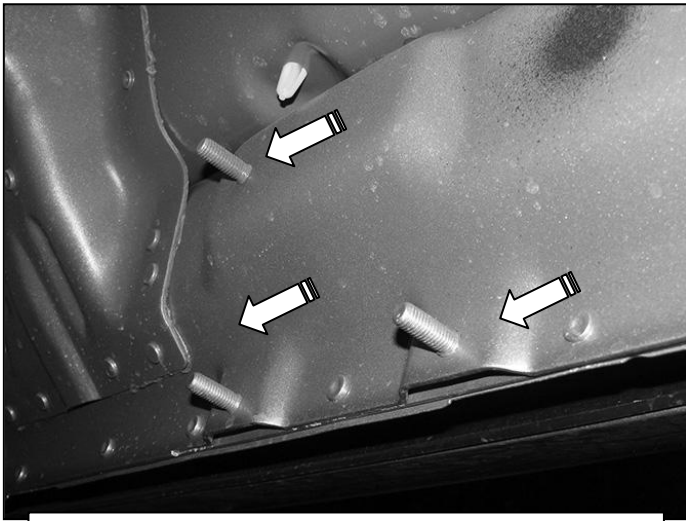


(Fig 1) Driver/left side front mounting location

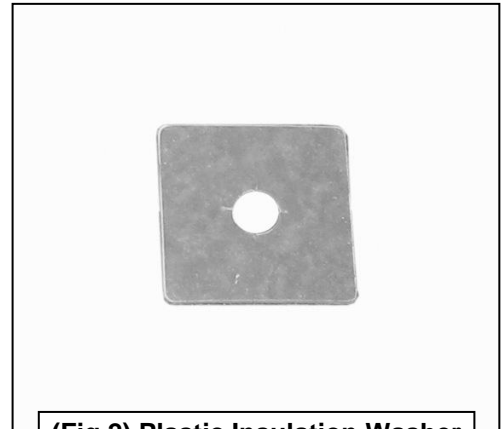


(Fig 2) Plastic Insulation Washer

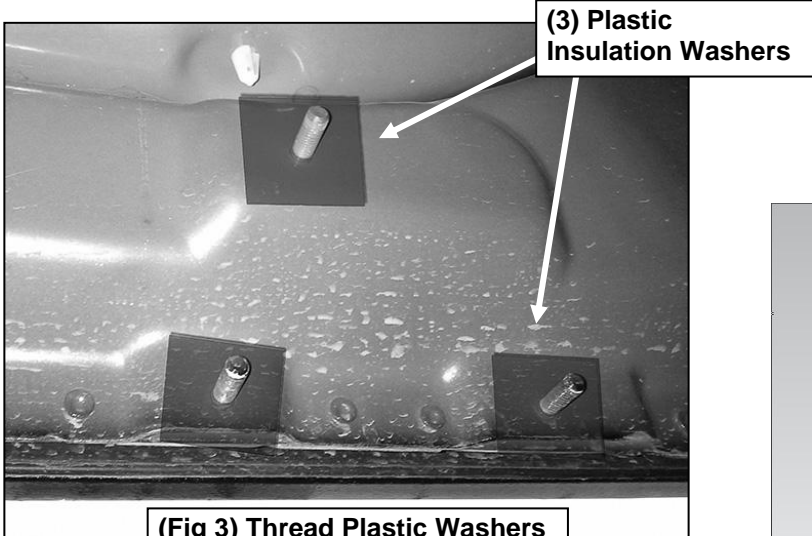

(Fig 3) Thread Plastic Washers onto all mounting studs

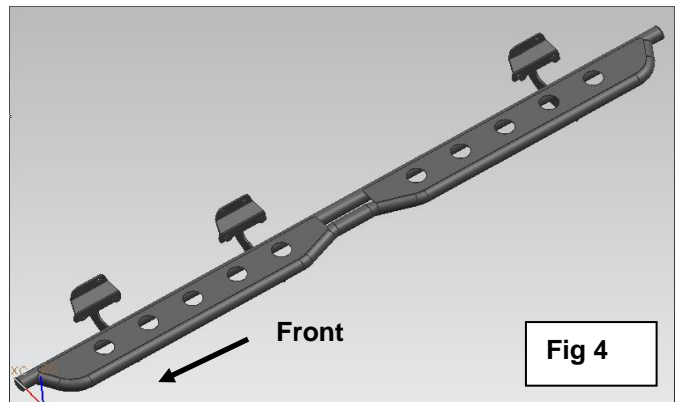

- (3) 8mm Plastic Washers
- (3) 8mm Flat Washers
- (3) 8mm Nylon Lock Nuts

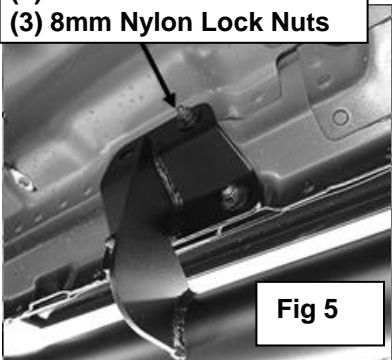

Front Installed

- (3) 8mm Plastic Washers
- (3) 8mm Flat Washers
- (3) 8mm Nylon Lock Nuts

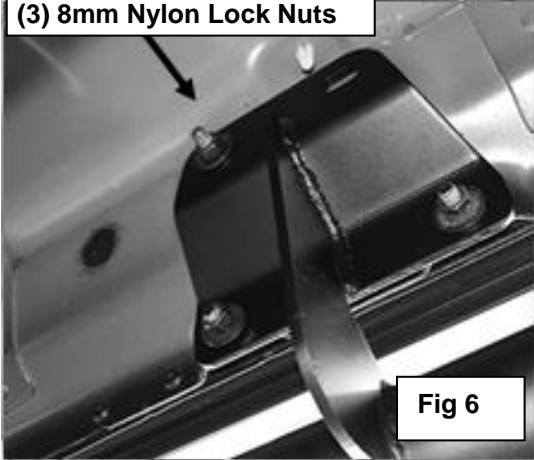


Fig 6

Center Installed

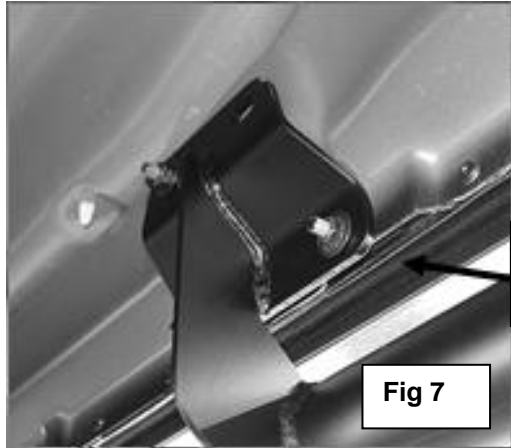


Fig 7

Rear Installed

- (3) 8mm Plastic Washers
- (3) 8mm Flat Washers
- (3) 8mm Nylon Lock Nuts



Complete Installation