20015-2017 Ford F150


Wire Mesh Grille Insert Overlay w/Frame, Rivets, and LED Lighting - Black Stainless



Step 1Using a panel removal tool, remove the (12) push clips holding the plastic radiator cover to the grille.



Step 2Remove the (4) 8mm bolts holding the top of the grille to the radiator support.

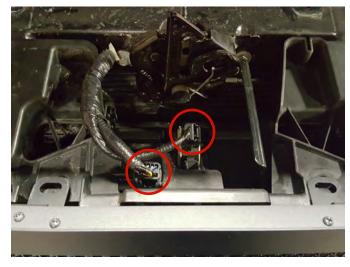

Step 3Unplug the (2) wire connections by the hood latch.



Step 4Carefully pull back on the headlight trim, and remove the (2) 8mm bolts holding the grille in.

20015-2017 Ford F150

Wire Mesh Grille Insert Overlay w/Frame, Rivets, and LED Lighting - Black Stainless



Step 5\\
With a panel removal tool, remove the (6) push clips holding the side cover in place. Then remove the grille completely from the vehicle.



Step 6Remove the factory grille by removing the (4) push clips on the top, and (2) 8mm screws on the bottom.




Step 7Mark and cut out your factory grille using a rotary tool as shown above.



Next, lay the new cutout grille on the factory grille and mark your (12) holes using a marker. Using a 5/16 drill bit and drill, drill out your holes. Then install the (12) M4 screws and nuts securing the grille to the frame.

20015-2017 Ford F150

Wire Mesh Grille Insert Overlay w/Frame, Rivets, and LED Lighting - Black Stainless

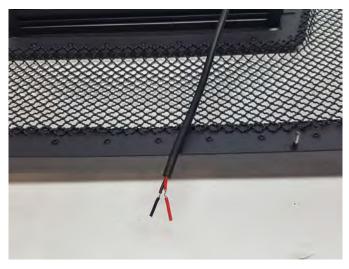

Step 9Optional LED Wiring Diagram:
Red- Switch ignition 12Volt
Black- Chassis Ground



Step 10Reinstall the grille by reversing steps 1-5.