

by UnderCover

# **MODEL SPECIFIC GUIDE**

**Hidden Hinge Version** 

# Model 2148 Ford F150 Ext/Crew Cab 5.5' Short Bed 2009-Current



Note: This Cover will work with or without a tailgate step.



## **Program Your Key**






REMOVE LABEL, FULLY INSERT KEY



ROTATE CLOCKWISE 180 DEGREES

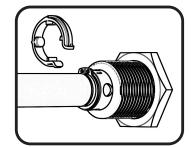

STEP THREE
REMOVE PLASTIC CLIP
BY PUSHING ON TABS.
DISCARD CLIP.


Form # AS2148II Created April 2014 For Warranty Issues, Contact UnderCover Directly (866) 900-8800 www.undercoverinfo.com



### MODEL SPECIFIC GUIDE Hidden Hinge Version Model 2148 Ford F-150 5.5' Short Bed 2009-Current

#### RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 39 7/8" from the back side of the bulkhead to the front edge of the bracket.

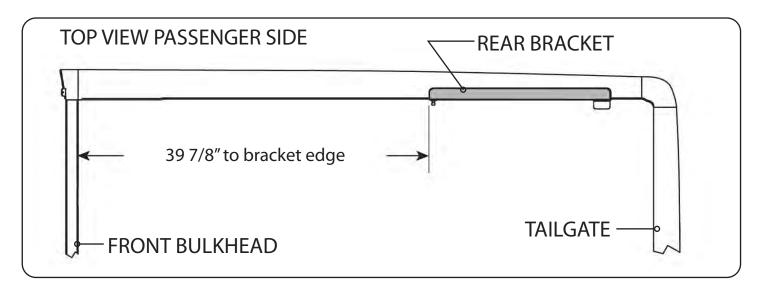

#### RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 17 1/8" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

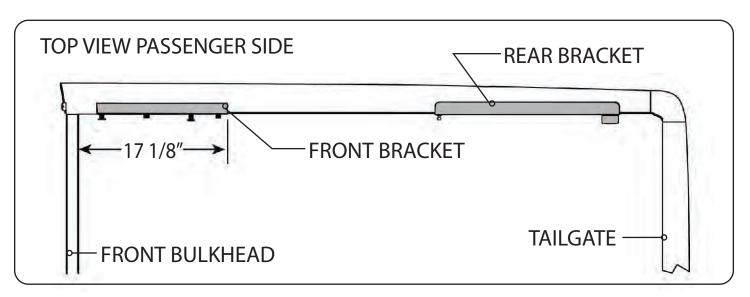

UnderCover, Inc. P.O. Box 620 Rogersville, MO 65742 (417) 753-8000 (866) 900-8800

www.undercoverinfo.com sales@undercoverinfo.com