



MODEL SPECIFIC GUIDE

Hidden Hinge Version

2160


Model 2160 Ford F150 Std/Ext/Crew Cab 6.5' Short Bed 2015-Current



Note: This Cover will work with or without a tailgate step.

RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 51 1/4" from the back side of the bulkhead to the front edge of the bracket.

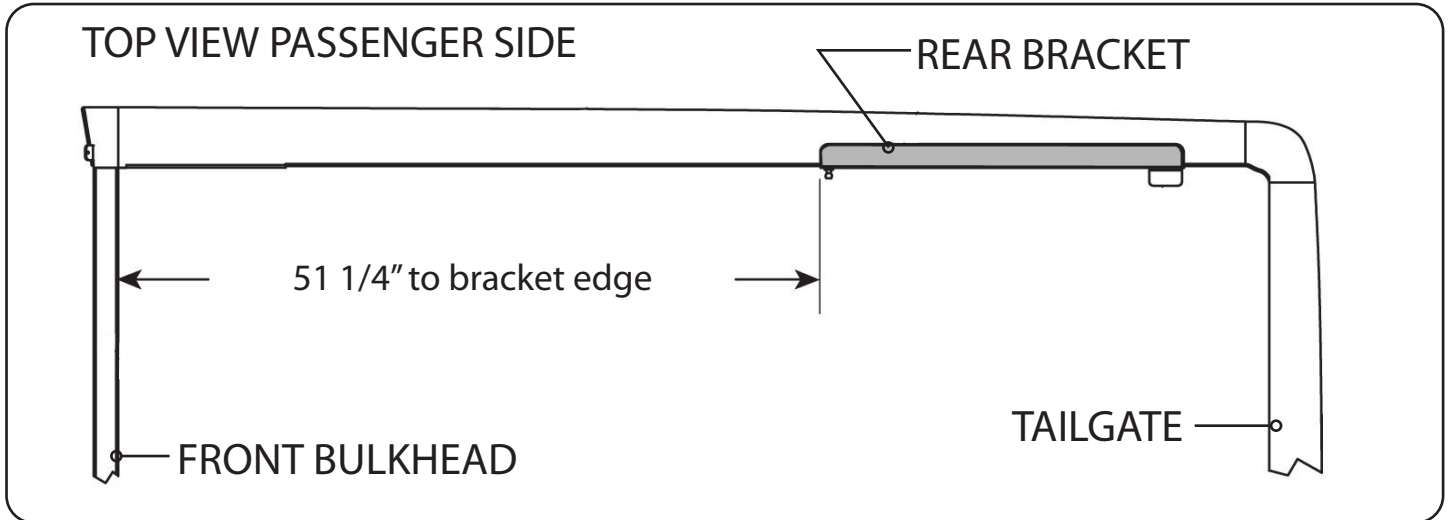

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 16 1/2" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

