


Installation Instructions
FIT-FF892
Bolt-On Fender Flares
Ford F150 (04-14)

REAR FENDER FLARE INSTALLATION



STEP 7: Clean the body areas where the Fender Flares will make contact. Use the supplied alcohol wipe.

For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal.

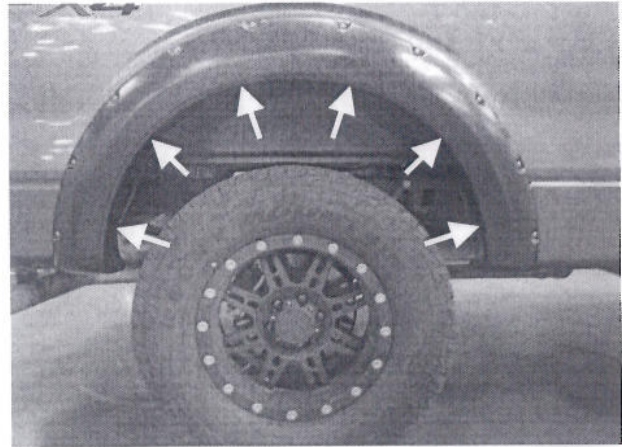

STEP 8: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body. Use twelve (12) of the .6mm clips (six (6) per side) to secure the Fender Flare to the body. Make sure the dimple in the clip securely attaches in the slot on the Fender Flare.



STEP 9: Double check the front and rear Fender Flares to make sure all bolts are tight and clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.

For Technical Support/Warranty Information please call 1-855-419-3557
or go to AmericanTrucks.com

Installation Instructions

FIT-FF892

Bolt-On Fender Flares

Ford F150 (04-14)

Please read instructions entirely before installing this product.

Hardware Included	QTY
EXTRUSION	29.5ft
RETAINING CLIP .9mm	6
CLIP .6mm	16
SCRIVET	2

Hardware Included	QTY
ALCOHOL TOWELETTE	4

Bolt Kit Included	QTY
BLACK HEX BOLT	38
NUT	38

Ensure that both left and right hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion.

No drilling of vehicle is required for Bolt-On Look Fender Flares. This is a non-drill product.



STEP 1: Clean the body areas where the Fender Flares will make contact using a clean cloth.



STEP 2: Remove four (4) 5.5mm bolts and retain for installation of Fender Flares. For 2007-2013 vehicles, only 3 bolts are removed.

For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal.


**For Technical Support/Warranty Information please call 1-855-419-3557
or go to AmericanTrucks.com**

Installation Instructions


FIT-FF892

Bolt-On Fender Flares

Ford F150 (04-14)

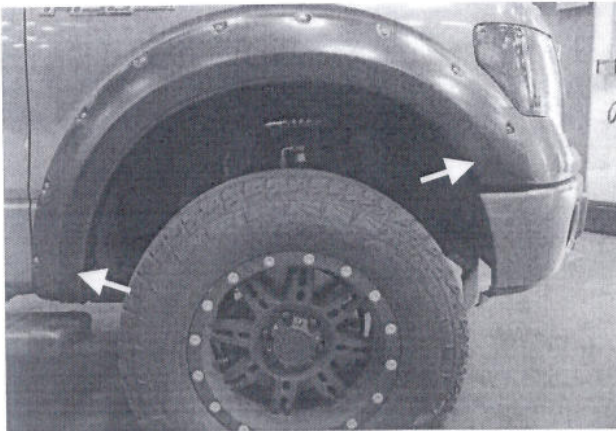

STEP 3: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body. Use four (4) of the .6mm clips (two (2) per side) to secure the Fender Flare to the body. Make sure the dimple in the clip securely attaches in the slot on the Fender Flare.

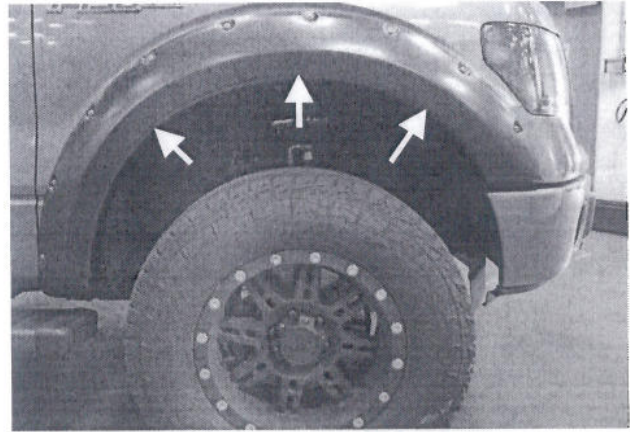

STEP 4: Insert six (6) of the .9mm lever retaining clips (three (3) per side) into the Fender Flare. Make sure the tab in the clip securely attaches in the slot on the Fender Flare. Secure with four (4) bolts removed in Step 6. For 2007-2013 vehicles, secure the center clip with the included scrivet.