

# Bug Deflector Install Guide

## (09-14) F150

### Contents:

- (1) Bug Deflector
- (2) Screws
- (4) Rubber Bumpers
- (1) Prep Pad


### Tools Required:

- Drill with Drill Bits
- Phillips Head Screw Driver



### Step 1//

Begin by thoroughly cleaning the bottom edge of the upper grille to remove any and all dirt, oil, grease, etc. This is essential for proper adhesion of the double sided tape. Once clean and dry wipe the surface with the supplied prep pad allow time for the grille to dry.

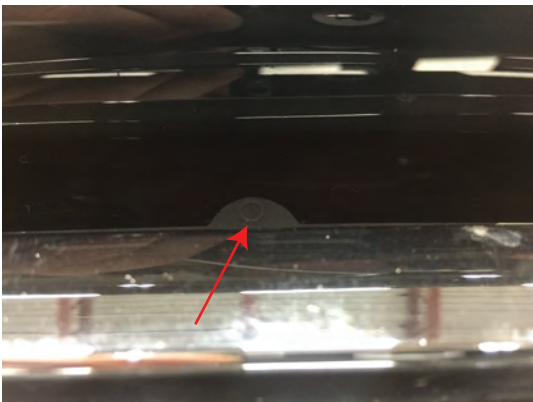

### Step 2//

Once the grille is clean and dry, center the Bug Deflector on the grille. You will notice there is a "circle" on the factory grille. This is the center. Line this circle up with the center of the Bug Deflector.



### Step 3//

Remove the tape backing from the Bug Deflector, center it to the grille. Ensure it is as far back into the grille as possible. Apply firm even pressure on the taped surfaces to ensure proper adhesion.



### Step 4//

With the Bug Deflector wrapped around to the back of the hood, mark and drill a pilot hole. Then install the supplied Phillips head screws (one per side).

Finish the installation by installing the supplied rubber bumpers to protect the paint anywhere the Bug Deflector may make contact with the hood.