



EZ HARD FOLD TONNEAU COVER

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) EZ Hard Fold Tonneau Cover
- (4) Bed Rail Clamps
- (4) Cotter Pins

TOOLS REQUIRED

N/A



STEP 1

Place the tonneau cover on the bed of the vehicle. The shorter latch component will be closest to the cab. The longer strap component will be on top.



STEP 2


Fold the cover back so that it covers the bed of the vehicle. Center the cover side-to-side and front-to-back. **Note: the cover will lift off the bed rails until it is clamped down.

STEP 3



Once centered, carefully fold the cover back to access the latches closet to the cab. There are several slot location for adjustment. Adjust the latches as needed for your application. **If your vehicle has factory utility rail see the last page of the install guide.

STEP 4

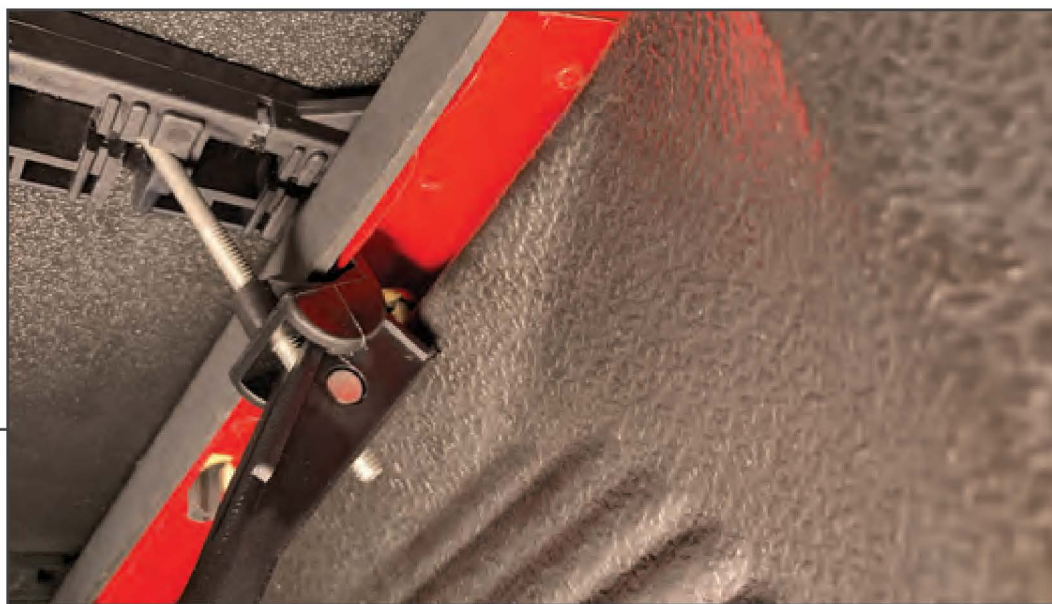

When adjusting the latches, the latch must catch the metal on the factory bed rail. If your vehicle has plastic bed rail covers, you will need to trim the plastic cover at the latch locations.



STEP 5

With the latches secured, install the supplied cotter pins to lock them in place.



STEP 6

Repeat the process at all latch locations.

STEP 7



When the tonneau cover is not in use, secure the cover to the first panel using the pre-installed nylon straps. The latches on the first panel (closest to the cab) will always remain installed.

**Factory Utility
Rails**



For vehicles with factory bed rails, remove the rail end caps and install the supplied utility rail clamps. There are several styles of clamps (2) are shown above.