


Low Pro Hard Tonneau Cover

Contents:

- (1) Low Pro Hard Tonneau Cover
- (2) Bed Rail Channels
- (2) Drain Tubes
- (1) Foam Strip
- (4) Bed Rail Clamps
- (2) Screw Stud w/ Wing Nut

Tools Required:

- 14, 17mm Wrench
- Razor Knife
- Phillips Head Screw Driver

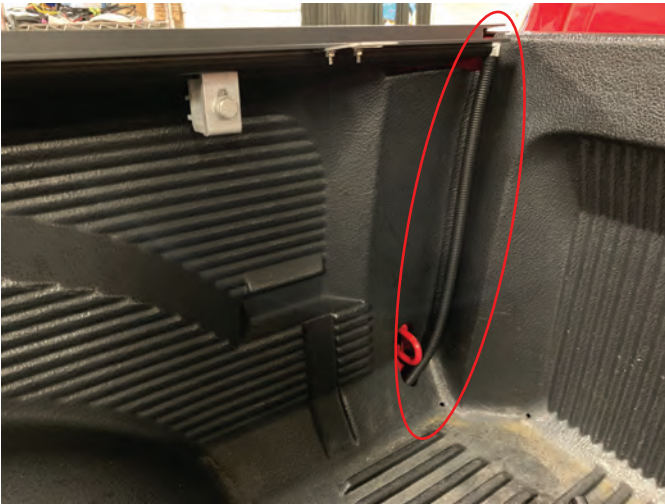

Step 1\\

Begin by installing the drain tubes on the tonneau cover rails. The drains are located on the cab side of the rails.



Step 2\\

Slide the rail clamps into the bed rails as shown. Place one clamp at the front of the rail and one at the rear most point. Push the rail as far forward as possible while tightening the clamps. Place the drain tubes through the bed grommets or suitable hole. **Note: For Vehicles with utility rails see note at end of install.




Step 3\\

On vehicles where the factory bed rails are higher than the front edge of the bed, install the appropriate size foam supplied with the cover. This foam is cut to size. **Note: Not all vehicles will require this foam.



Step 4\\

With help, place the cover onto the vehicle. The panel with (2) holes and the plastic clips is placed towards the cab of the vehicle. Adjust the cover front-to-back and side- to-side so it sits in the channel created by the bed rail channels.

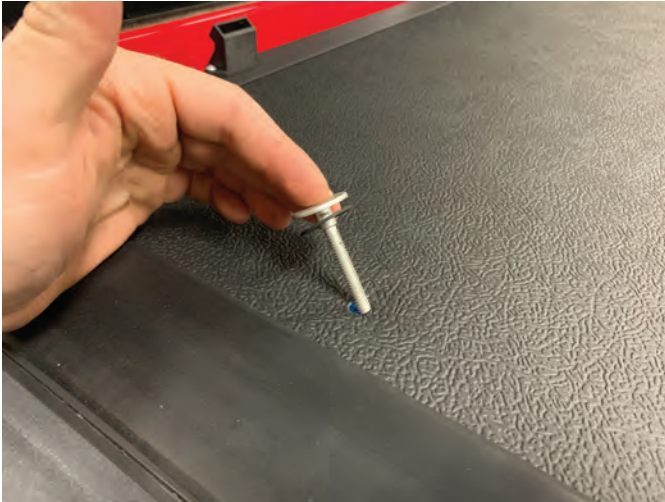

Step 5\\

Fold the cover down to and install the mounting stud. Place the stud through the tonneau cover and through the metal bracket coming off the previously installed bed rail Channels. Loosely install the plastic wing nut.

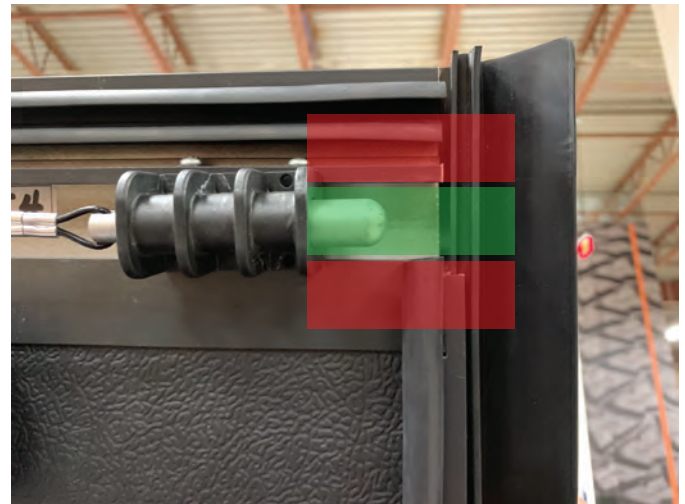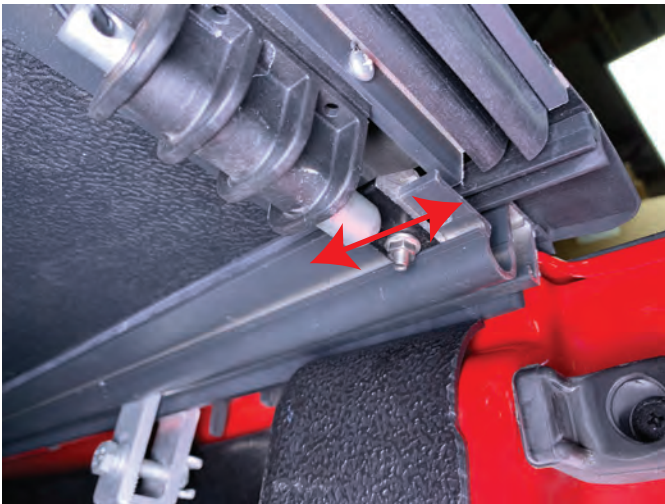


Step 6\\

Fold the cover to the rear of the vehicle. Ensure the cover locks into place. If the cover does not lock into place, loosen the phillips screw securing the wedge shaped bracket to the bed rail. Align the wedge so that it does not come in contact with the frame of the cover.

Step 7\\

Fold the tonneau cover back and secure the cover using the pre-installed straps when not in use.

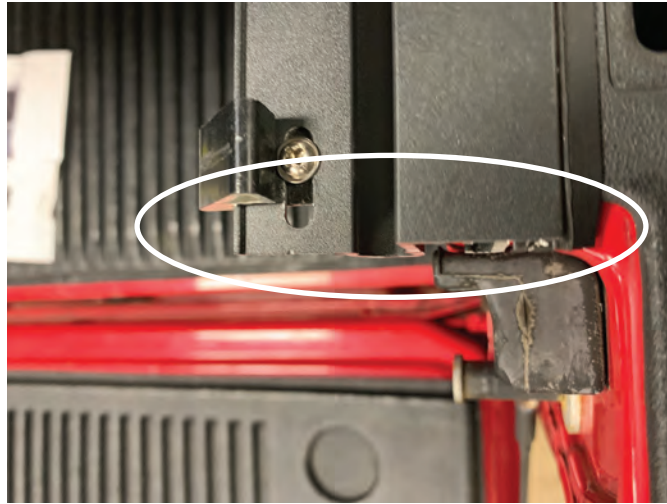

Trouble Shooting-

If the vehicle has a bed liner and the tailgate doesn't close as easily as it prior to the tonneau cover installation, you may have some interference between the bed rail channels and the tail gate. It is recommended that the bed liner of the rail ends get trimmed to allow more clearance.

Toyota and Nissan Trucks with Factory Utility Rails



Utility Rails\\

Remove the rail end caps and install the supplied utility rail clamps. There are several different clamp styles depending on the tonneau cover style. Above are (2) different examples.