

15-17 F-150 (w/ OEM Fender Flares) Mud Guards Installation Guide

Contents:

- (2) Front Mud Guards
- (2) Rear Mud Guards
- (6) Plastic Push Clips
- (12) Metal Clips
- (4) Screw Clips
- (8) Phillips Screws
- (2) Metal Brackets

Tools Required:

- 10mm socket
- Phillips screwdriver
- Pry tool



//Step 2:
Hold the mud guard into place. Using (1) plastic push clip, push the clip through the mud guard into the original location on the vehicle. Then use (4) metal clips to secure the mud guard to the original flare.

****Note:** The metal clips are very tight by design.




//Step 4 (Rear):
Remove the (2) push clips and (1) 10mm bolt. (1) clip is in the wheel well and the other is under the bed. The (1) 10mm bolt is at the end of the wheel arch attached to the fender flare.



// Step 1 (Front):
Remove (1) plastic push clip from the bottom of the factory flare.



//Step 3:
Once the clips are installed, front installation is complete. Repeat procedure to install mud guards to opposite side of vehicle.

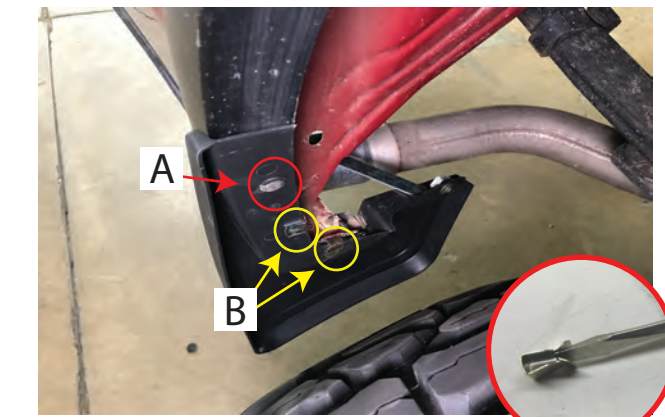

//Step 5:
Install (1) push clip through the mud guard into fender [A]. Then install (2) metal clips to attach the mud guard to the fender [B].

****Note:** The metal clips are tight by design.



//Step 6:

Using provided bracket, install the (2) supplied screw clips to the bracket. Using provided Phillips head screws, attach bracket to vehicle as shown. Repeat procedure to install mud guards to opposite side of vehicle.