



LOW PROFILE HARD TRI-FOLD TONNEAU COVER

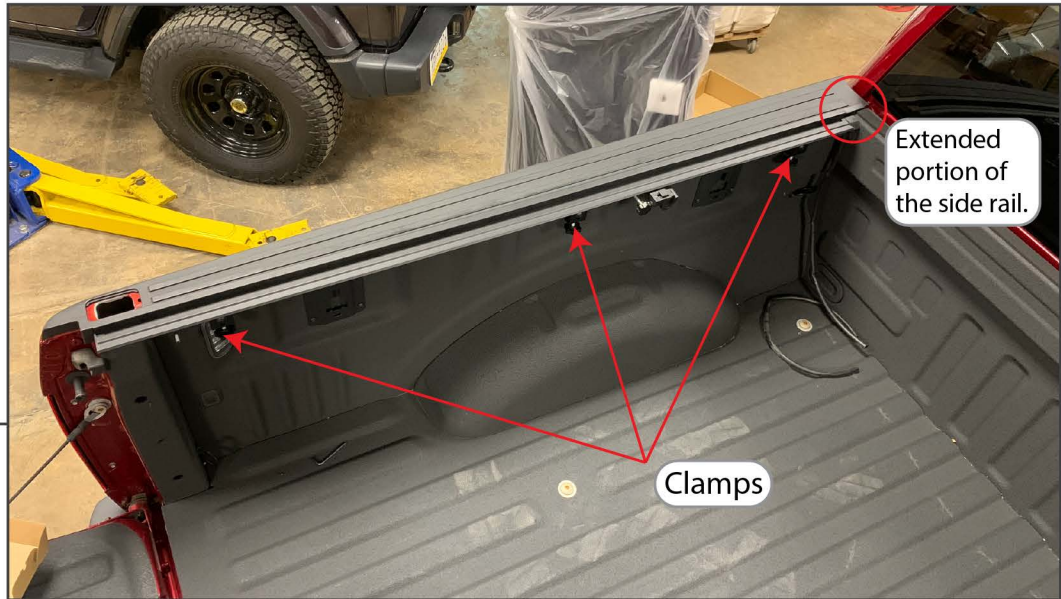
INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Low Profile Hard Tri-Fold Tonneau Cover
- (2) Side Rails
- (6) Clamp Clamps with Thumb Screw
- (2) Thumb Screws
- (2) Aluminum Clamp Blocks
- (6) Allen Bolts
- (2) Wing Nuts
- (2) Caps
- (2) Drain Tubes
- (2) Prop-Rods
- (1) Weather Stripping
- (1) Battery Powered LED Light

TOOLS REQUIRED

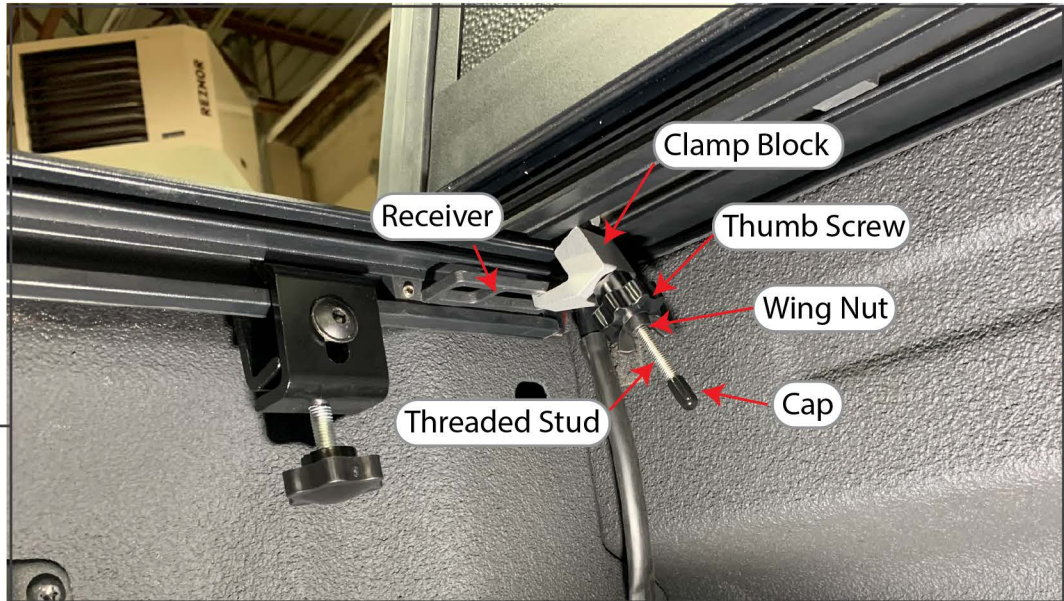
- Allen Key (Provided)
- Razor Knife

STEP 1

Identify and mount the side rails, the extended portion of the rail will face forward. Using the supplied clamps and Allen bolts, clamp the rails to the bed. While tightening the Allen bolt, use the thumb screw on the bottom of the clamps to level the rail to the top of the bed.

STEP 2

Install the supplied drain tubes onto the front of the side rails. If your vehicle has the bed grommets installed, you will need to cut a small hole and push the drain hose through to the outside of the bed.

STEP 3

With a helper, place the tonneau cover on the vehicle. The panel with the pre-installed threaded stud will be all the way at the front of the bed. Pull the stud down out of channel. Center the tonneau cover between the bed rails and install the aluminum clamp block. The hook on the clamp block will catch the receiver on the side rail as shown. Use the supplied thumb screw to tighten the clamp block to the side rail. Loosely install the wing nut and rubber cap.

STEP 4

Fold back the tonneau cover. The tonneau cover will lock into the side rails at the tail gate. Adjust the bed rails/tonneau cover forward as needed to clear the tailgate. Once adjusted, tighten the clamp block thumb screw and wingnut. Pull the release cable on the underside of the tonneau cover to release the locks.

STEP 5

Install the supplied prop-rods. These will hold the tonneau up and out of the way when the bed is in use. Press the prop-rod ball socket onto the tonneau cover ball stud. Clip the other end of the prop-rod into the rail lock. Adjust the rail lock front-to-back so that the tonneau cover is perpendicular to the bed then tighten the thumb screw. When prop-rods are not in use, unclip them from the bed rail and rotate them 90° and clip them into the tonneau cover for storage.

STEP 6

To secure the tonneau cover flat, clip the nylon strap into the receiver at the front of the tonneau cover.

**STEP 7**

Install the supplied weather stripping around the tail gate to help reduce water intrusion.

**STEP 8**

Optional: Install the supplied bed light. Ensure the mounting surface is clean and free of dirt/debris prior to removing the double sided mounting tape. Installation is now complete.