

ACS LIGHT BRACKET INSTRUCTION

APPLICABLE MODELS:
 ALL

PACKAGE CONTENTS



Light Bracket
(QTY.2)




M8 T-Bolt
(QTY.4)



M8 Locknut
(QTY.4)

TOOLS REQUIRED

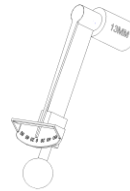

TORQUE WRENCH
 WITH 13MM DEEP
 SOCKET

BEFORE INSTALLATION

READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING.

1 ATTACH LIGHT BRACKET TO RAIL

- 1) INSTALL TWO T-BOLT INTO RAIL. USING TWO M8 LOCKNUTS FASTEN LIGHT BRACKET TO RAIL. TIGHTEN TO 16 LB-FT (FIG 1).
- 2) THE LIGHT BRACKET CAN BE INSTALLED IN MANY CONFIGURATIONS. SHOWN ARE A FEW OF THE MOST POPULAR. (FIG 2)
- 3) INSTALL LED LIGHT ONTO BRACKET (FIG 3)(FIG 4)

