


CGS Installation Instructions

Please direct all installation questions to CGS Motorsports at (909) 444-5536. DO NOT call the retailer in which you purchased your CGS System.

Thank you for choosing a CGS Catback Exhaust System™ to power your vehicle. These instructions will take you through the installation of your new catback exhaust system.

Kit includes:

Qty.	Description	Part#
1	Headpipe	300-1047
1	CGS Muffler	83001
3	3" Clamps	
1	2 3/4" Clamp	
1	over the axel pipe	300-1042
1	exit pipe	300-1043
1	3 1/2" Stainless Steel Tip	93530

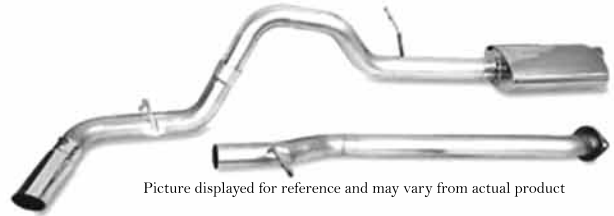

Picture displayed for reference and may vary from actual product

1) Remove stock exhaust system

First start by removing the stock pipe by unbolting the clamp at the headpipe. Then slide the complete system carefully towards the rear off of the rubber hangers. Remove the system from under the truck. Cutting may be required for removal for certain models.

2) Installing your catback exhaust system

Make sure that all existing rubber Hangers are still in place. Slide the smaller end of your new headpipe onto the stock pipe while the two brackets slide into the rubber hangers. Proceed to install muffler onto headpipe with the offset in the inlet and closest to the trucks frame the center in the outlet. Next install the overaxle pipe onto the muffler and insert the brackets into the rubber hangers. Now the exit pipe will install and insert the bracket into the rubber hanger. Once the exhaust system is positioned and lined up correctly, install clamps at all connections. Install the stainless steel tip and tighten bolts.

3) Final checklist

Once completed, check to make sure all the clamps and bolts have been securely fastened. That's it, a simple install with a lot of results. **Congratulations!** You just installed more horsepower to your truck by allowing it to breathe easier with a CGS Catback Exhaust System™.

Ask your CGS dealer about our Air Intake System for your Truck

Thank you again and enjoy your new CGS Catback Exhaust System™.

