

# IMPORTANT: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE



## 2002-05 DODGE RAM FINE & "HEAVY METAL" STAINLESS STEEL MESH GRILLE INSTALLATION INSTRUCTIONS G 28 G6R

### Notes to the Technician:

E&G is proud to present this package to you and reminds you that for technical information. Do not attempt in installation any E&G product without first reading the detailed instructions. E&G Classics will not warrant damaged parts or vehicle due to altered installation instructions.

### Fine Mesh 1117-0102-02





Quantity	Description	Part No.
2	"Mesh" Grille Inserts	1117-0020-02
1	Hardware Kit (components listed below)	1117-1902-02
4	1/4-20 x 3/8" Indented Hex Washer Slotted Screws	5999-0023-00
18	1/4-20 x 3/4" Indented Hex Washer Slotted Screws	5999-0014-00
14	7/8" O.D. x 1/4" I.D. Black Plastic Washers	1999-9601-00
2	Center Mounting Brackets	1117-0158-02
4	Top Mounting Brackets	1117-0155-02

### Heavy Metal # 1117-0104-02

Quantity	Description	Part No.
1 Set	"Heavy Metal" Mesh Grille Inserts Right Left	1117-004A-02 1117-004B-02
1	Hardware Kit (components listed below)	1117-1903-02
4	1/4-20 x 3/8" Indented Hex Washer Slotted Screws	5999-0023-00
16	1/4-20 x 3/4" Indented Hex Washer Slotted Screws	5999-0014-00
14	7/8" O.D. x 1/4" I.D. Black Plastic Washers	1999-9601-00
2	Center Mounting Brackets	1117-0158-02
2	Top Mounting Brackets	1117-0155-02

### INSTALLATION INSTRUCTIONS

1. Apply masking tape to the chrome or painted grille surround to protect it from getting scratched while installing the E&G grille inserts.
2. Open the hood and remove the twelve 8mm factory fasteners to remove the factory grille surround from the hood (six 8mm hex bolts across the bottom, six 8mm hex nuts across the top, it may also be necessary to carefully cut through the black sealer between the hood and the grille) and place it onto a clean, flat work area.
3. Remove the factory plastic grille sections from the grille surround by pressing on the center of the retaining pins to release them (not shown). Make sure the retaining pins are completely removed.
4. Align the stainless steel E&G grille left and right sections into the factory grille frame.
5. Install the supplied mounting brackets and 1/4-20 x 3/8" indented hex washer slotted screws at the vertical center (as shown). Make sure that the center mounting brackets are arched enough to keep the mesh tight against the factory grille frame.
6. Install the supplied 1/4-20 x 3/4" indented hex washer slotted screws and black plastic washers across the bottom and center of the mesh section in the factory holes (see arrows). **IMPORTANT:** Do not overtighten the screws or you will strip out the plastic grille frame mounting holes! Trim down a plastic washer for the top outer holes and install it with a 1/4-20 x 3/4" indented hex washer slotted screw to keep the mesh tight against the grille opening.
7. **For the Fine Mesh Grilles:** Install the four (4) top mounting brackets with the supplied 1/4 - 20 x 3/4" indented hex washer slotted screws (where shown).
8. **For the "Heavy Metal" Mesh Grilles:** Install the two (2) top mounting brackets with the supplied 1/4 - 20 x 3/4" indented hex washer slotted screws (where shown).

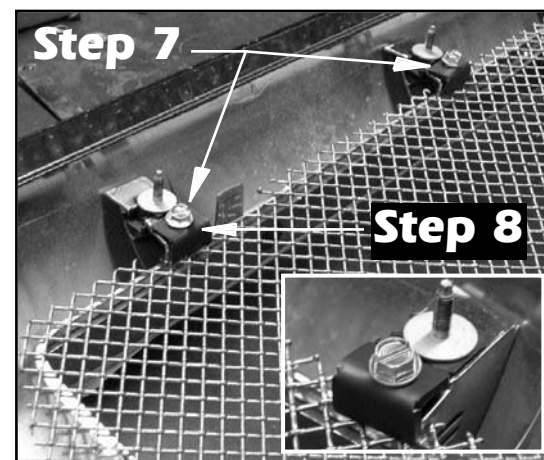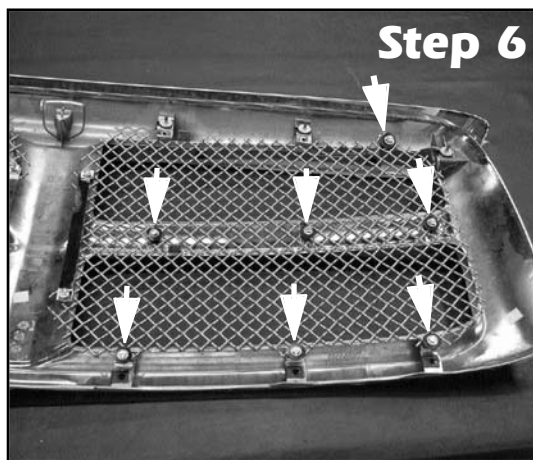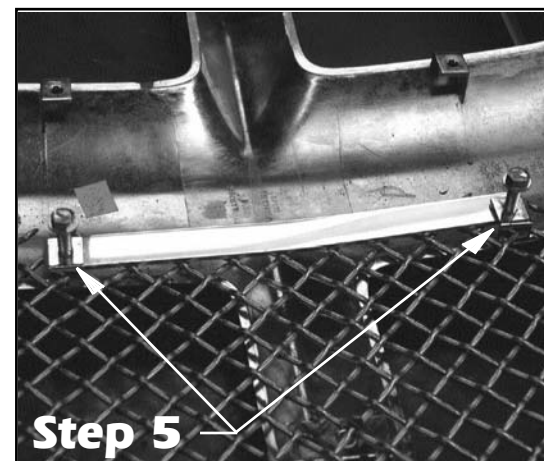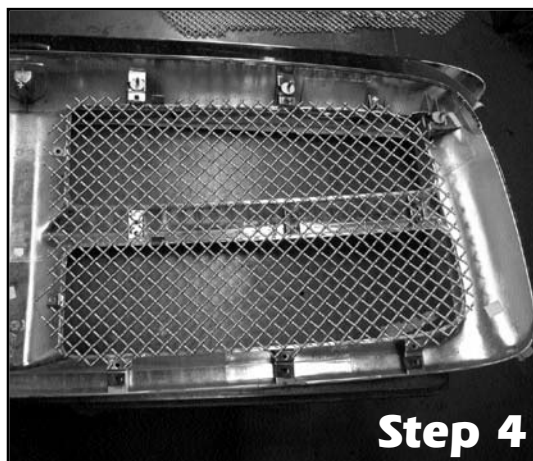



#### INSTALLATION INSTRUCTIONS - continued

9. Use flat or semigloss black paint to black out any bright objects that will be visible behind the grille once it is installed (not shown).
10. Reinstall the assembled grille frame back onto the hood to finish.