



Installation Instructions

Vehicle Application

Make: DODGE/ RAM
Year/Model: 2013 1500,
2009-13 2500/3500
Engine: 5.7L Hemi V8

Tools Required

- 8mm, 10mm, 13mm Wrench & Socket
- Pin Removal Tool or Flat Blade Screwdriver
- 7/16" Wrench and Socket
- 5/16" Nut Driver or Flat Blade Screwdriver
- Phillips Screwdriver

S&B Filter Maintenance

Cleanable (KF-1056). If the enclosed filter is Red, it came pre-oiled from the factory. Please visit www.sbfilters.com for the exact oil amount required after cleaning.

Disposable (KF-1056D). If the enclosed filter is White, it is a disposable filter and should be discarded once it reaches capacity. This filter **(does not require oil)**. For more info on S&B's disposable filter, visit www.sbfilters.com.

Notes

Kit may not fit with the following Aftermarket Parts installed:

- Body Lift or Lowering Kit
- Custom Hood
- Throttle body upgrades

CARB Status - Pending

Product will be submitted to Air Resources Board for approval shortly.

Not Legal for use in CA or other states adopting CA emissions standards
 See Page 3 for more info.

Before You Start

- Please read the entire product guide before proceeding.
- Ensure all components listed on page 4 are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Do not work on your vehicle while engine is hot.
- Make sure the engine is turned off and the vehicle is in Park.


1. With the ignition switched off and the parking brake set, disconnect the negative battery cable on the driver's side.



2. Disconnect the electrical connection for the Temp (IAT) Sensor. *Note the sensor's orientation for the re-install.*



3. Loosen the hose clamp connecting the tube to the air box and the clamp attaching the tube to the throttle body. Then remove intake tube from the truck.

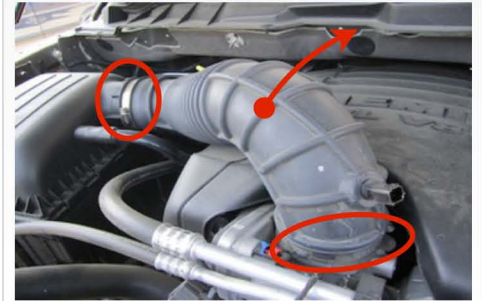

4. Remove the crank case vent tube from the air box.



5. Remove air box by carefully pulling the air box up out of the four pins in the air box tray. Then remove the two bolts mounting the tray to the frame using 13mm socket.




6. Remove the seven screws securing the wheel liner using 8mm socket. Then remove the 3 push pins. *S&B has supplied new panel pins in the event that the OE pins are damaged during removal.*



7. From inside the engine compartment, carefully pull the wiring harness connector out from the wheel liner. Then remove the wheel liner from the truck.



8. Using 13mm socket, remove the other 2 bolts securing the air box tray. Then remove the tray from the truck

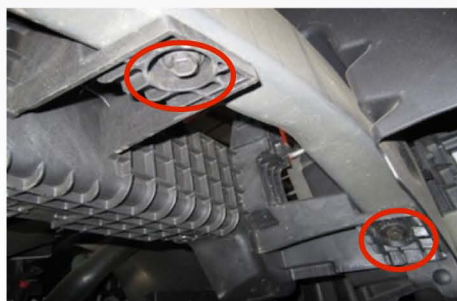

9. Insert the supplied Grommet (D) into the Air Box (M).



SEE EXPLODED VIEW ON PAGE 4



Installation Instructions (continued)

10. Insert the Air Inlet tube (S) onto the Air Box (M) and secure using the supplied 1/4"-20x3/4" screws (V), 1/4" Lock washers (U) and 1/4" Flat washers (W).



11. For those concerned about minimal engine heat; insert the Air Inlet Plug (T) into the end of the Air Inlet tube (S). Attach using the supplied 1/4"-20x3/4" screws (V), 1/4" Lock washers (U) and 1/4" Flat washers (W). For those seeking additional air flow, set the Air Inlet Plug aside and save all the supplied hardware. (See page 3 for more info and test results)



12. **NOTE:** Vehicles equipped with 4x4 can use the provided Screw Cap (O). Cut down and place on top of bolt accordingly to protect the S&B Air Box.



13. Carefully install the air box assembly into the truck at an angle as shown below.



14. Using the OE bolt, secure the air box assembly to the frame. Leave loose for now..



15. From inside the wheel well, attach the air box to frame using the supplied M8 x 40mm Hex bolt (K) and Fender Washer (L). Then secure both bolts mounting the air box to the frame.



16. Reinstall the wheel liner using 5 of the OE screws and 3 supplied Panel Pins (Y). Reinstall wiring harness connector into wheel liner that was removed in Step #7.



17. Secure the wheel liner to the air box using two supplied 1/4"-20x3/4" screws (V) and Flat washers (W) inside the air box. Use the 1/4" Nylock nuts (X) and 1/4" Flat washers (W) under the wheel liner.



18. Insert the S&B Filter (J) onto the Adapter Tube (H) and secure the #104 Hose Clamp (I). Install the assembly into the Air box. Then push the valve cover breather hose onto the stem of the Adapter tube.



19. Install the Clear Lid (N) using the supplied 5/16" S.S. Screws (Q) and Rubber Washers (R) along with the 10-24 Screws (P) and SS Sealing Washers (O). This will secure the Filter Adapter to the Air Box as well. (Do not over tighten!)



20. *Note the OE Temp. Sensor orientation.* Then carefully pull it out of the OE tube. Insert the supplied Grommet (D) into the Intake Tube (E). Carefully push the Temp. sensor into the grommet using a twisting motion. Be sure to match the OE orientation.




SEE EXPLODED VIEW ON PAGE 4



Installation Instructions (continued)

21. Place a #72 Hose clamp (F) over each end of the Hump Coupler (G). Then slide the hump coupler over the end of the Intake Tube (E).

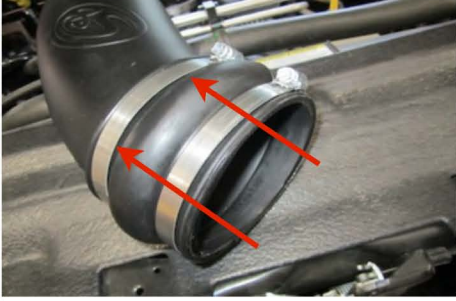

22. Secure the Silicone Step Coupler (B) to the throttle body using a #56 Hose Clamp (A). Place the #60 Hose Clamp (C) around the top of the Silicone coupler.



23. Insert the Intake tube assembly into the Silicone Coupler, then slide the Hump Adapter over the Adapter Tube. Tighten all hose clamps when you are satisfied with the positioning.



24. Reconnect the Temp. Sensor wiring harness.



25. Reconnect the battery. Inspect your installation, make sure the kit is properly positioned and all fasteners are secure. Affix the CARB sticker (if applicable) near the intake kit. The installation is now complete.



Performance Testing

- Engage parking brake and start your engine. Listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be repositioned and tightened.
- S&B FILTERS recommends that you keep your OE intake system in the event it is required in the future.
- Re-tighten all clamps after the first 100 miles of use.
- In order to maintain your warranty, all connections and components must be checked periodically for alignment and for proper tension on all connections. Failure to do so may void your warranty.
- Use only S&B FILTERS cleaning and oil products to service your filter. Using any other brand oil and or cleaners on your S&B air filter may void your warranty.

Air Box End Cap Testing

Stock air boxes are a significant contributor to poor air flow which is why S&B designs custom air boxes with secondary and/or enlarged openings. With that said, S&B recognizes the benefits of cooler air, so we have included a plug to seal off the opening if so desired. For optimal performance, we recommend that the intake be used without the end cap except in conditions of extreme heat.

Related Items to Your Purchase

- Replacement Air Filter (Oiled) (S&B P/N: KF-1056)
- Replacement Air Filter (Dry) (S&B P/N: KF-1056D)
- Air Filter Wrap (S&B P/N: WF-1034)
- Air Scoop (2013 Ram 1500) (S&B P/N: AS-1006)
- Air Scoop (2009-13 Ram 2500/3500) (S&B P/N: AS-1013)

Precision II Filter Cleaning & Oiling



Order online today at www.sbfilters.com or through your local S&B distributor.
Part #: 88-0008

Warning!

If your vehicle has a Vehicle Emission Control Information decal affixed to the factory airbox, a new replacement label must be obtained and installed in a readily visible position in the engine compartment in order to remain CARB compliant. Failure to do so will prevent the vehicle from passing a smog check. Replacement labels can be ordered from your local dealership. Regulations state that the VEI label shall not be affixed to any equipment which is easily detached from the vehicle. Label placement, under the hood on a painted surface is recommended.




Emissions Standard

The California Air Resource Board (CARB) requires that an E.O. identification label be applied to the vehicle in order to pass a smog check inspection when a Performance Intake Kit has been installed. You must place the E.O. label provided on or near the intake kit after installation so that a smog check technician can easily verify the E.O. number. As of April 2009, S&B has never had a product where CARB denied an exemption request; however, the exemption process with CARB can take as long as 18 months. Check the status of the exemption process by looking up a specific part number at www.sbfilters.com. The CARB Exemption number and/or status is listed under the Product Details section for each part number. If the status shows as "Pending," CARB has yet to issue an exemption. Products that have not been issued an EO number are street legal in most states, but may not be used on emission controlled vehicles in the state of California and are for off road use only. If you purchased your kit from S&B Filters directly, we will automatically mail you your Exemption Sticker when it is issued to us. If you purchased your kit from an authorized S&B Filters Dealer, log onto our web site and register to receive your Exemption Sticker.

SEE EXPLODED VIEW ON PAGE 4



Exploded View

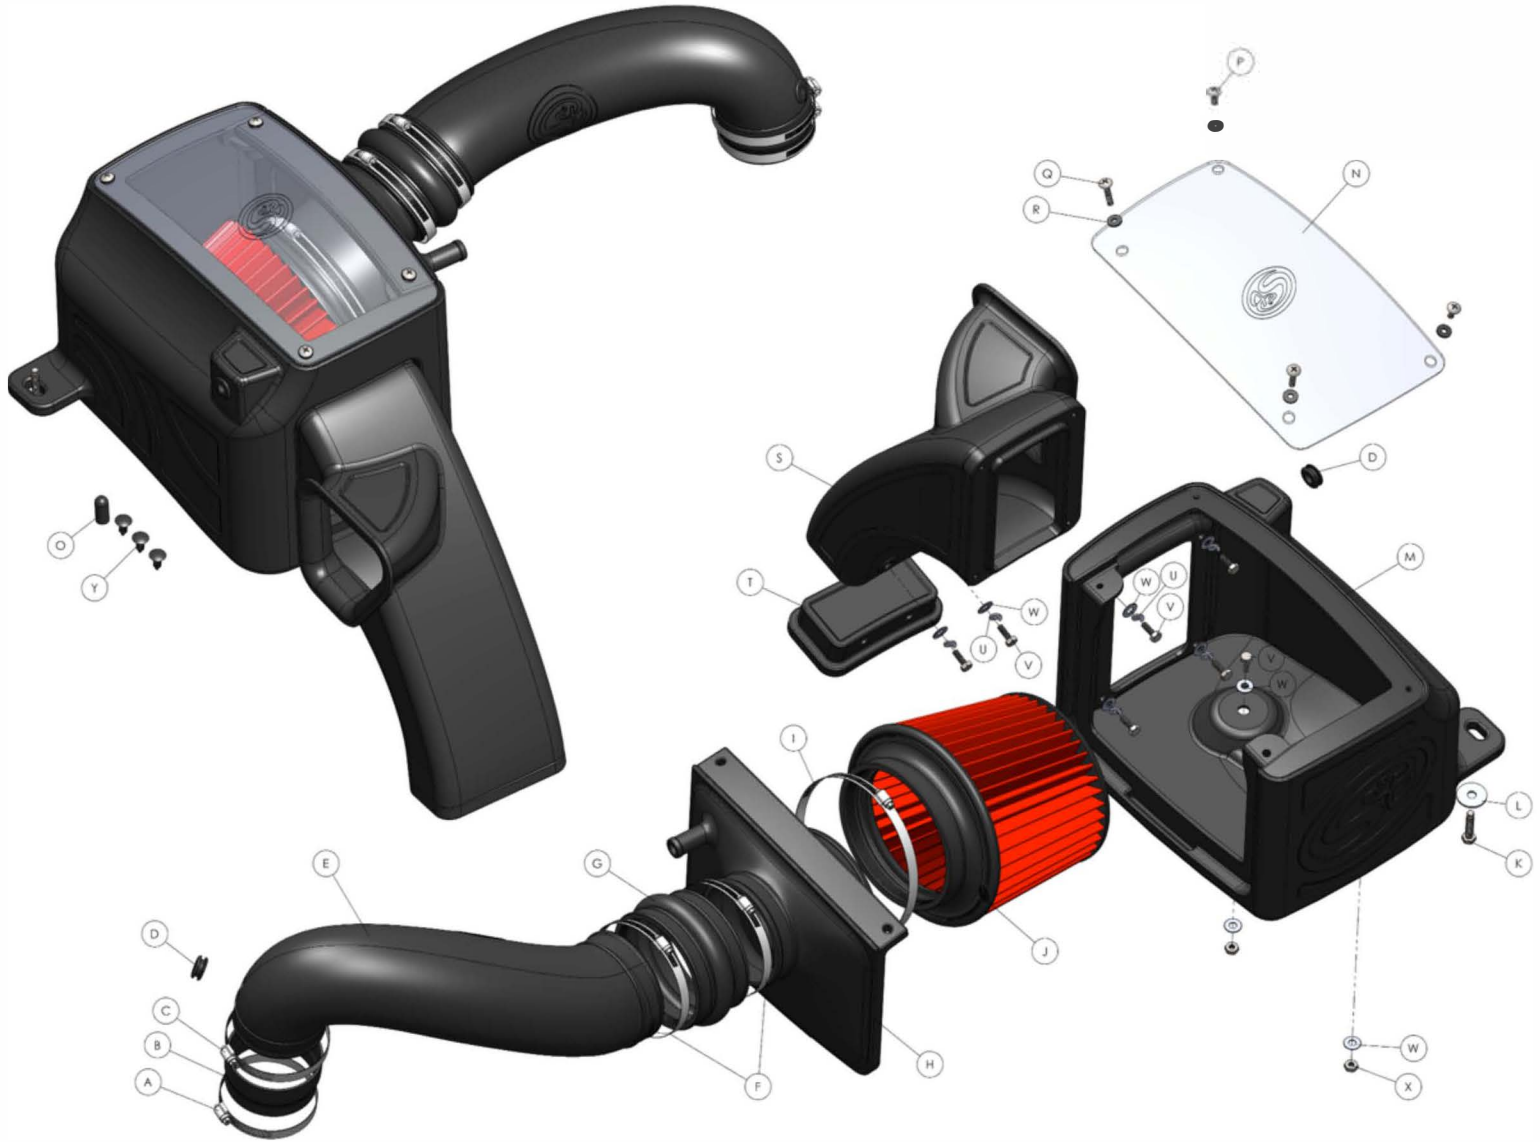

ITEM	QTY.	DESCRIPTION	P/N
A	1	Hose Clamp, #56	AG1019-00
B	1	Silicone Step Coupler	AI1306S-00
C	1	Hose Clamp, #60	AG1008-00
D	2	Grommet	AI1563-00
E	1	Intake Tube	AL1182-00
F	2	Hose Clamp, #72	AG1009-00
G	1	Urethane Hump Coupler	AI1609C-00
H	1	Adapter Tube	AL1212A-00
I	1	Hose Clamp, #104	AG1012-00
J	1	S&B Filter	KF-1056
K	1	Screw, Hex Head, M8x40mm	AI1163-00
L	1	Fender Washer, 1-1/4"OD	AI1080-00
M	1	Air Box	AL1212-00
N	1	Clear Lid	AI1710-00

ITEM	QTY.	DESCRIPTION	P/N
O	1	Screw Cap	AI1629-00
P	2	Truss Head 1/4-20 x 5/8"	AI1569-00
Q	2	Truss Head 1/4-20 x 1-1/4"	AI1568-00
R	4	Washer, Rubber	AI1571-00
S	1	Air Inlet/ Snorkel Tube	AL1213-00
T	1	Air Inlet Plug	AL1184-00
U	6	Washer, Split Lock	AI1309-00
V	8	Screw, Hex Head, 1/4-20x3/4"	AI1068-00
W	10	Washer, Flat, 1/4"	AI1073-00
X	2	Nut, Hex Nylock, 1/4-20	AI1074-00
Y	3	Panel Retainer Pin	AI1567-00

AM0201-00 Rev.B 12/09/13

Warranty

Visit www.sbfilters.com for complete warranty information.