


## ACS HI-LIFT BRACKET INSTRUCTION

APPLICABLE MODELS:  
 ALL

### PACKAGE CONTENTS

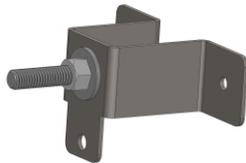

Bracket with stud  
(QTY.2)



Locking Cover bracket  
(QTY.2)



Wing nut  
(QTY.2)



M8 Locknut  
(QTY.4)



M8 T-Bolt  
(QTY.4)

### TOOLS REQUIRED



TORQUE WRENCH  
 WITH 13MM DEEP  
 SOCKET

### BEFORE INSTALLATION

READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING.

#### 1 ATTACH HI-LIFT BRACKET TO RAIL

- 1) INSTALL FOUR T-BOLTS INTO RAIL. USING TWO M8 LOCK NUTS LIGHTLY TIGHTEN BRACKET TO RAIL (FIG 1).
- 2) SLIDE BRACKET INTO POSITION WHERE THE MOUNTING STUD IN THE BRACKET WILL LINE UP WITH THE HOLES IN THE HI-LIFT JACK. TIGHTEN M8 NUTS TO 16FT-LB (FIG 2)
- 3) INSTALL LOCKING COVER BRACKET OVER STUD AND HI-LIFT. HAND TIGHTEN WING NUT. (FIG 3)
- 4) THE HOLE IN THE BRACKETS CAN BE USED TO INSTALL A PADLOCK FOR SECURITY.

