



# CARRICHS ACCESSORIES, LLC.



7545 ROSECRANS AVE. | PARAMOUNT, CA 90723

TEL. 866-303-4714 | FAX 562-724-9668

## INSTALLATION GUIDE

### NO-DRILL FENDER TRIM

#### REQUIRED TOOLS:


- Pliers 
- Phillips Screwdriver\* (optional) 

#### INCLUDED HARDWARE:

- Hooked Clips 
- Phillips Screws\* 

### FENDER TRIM INSTRUCTIONS (NO-DRILL):

1. Place a correct fender trim (fitment sticker can be found on back of fender trim) over fender to be installed.
2. Slide a "hooked clip" through each slot on fender trim. There are seven (7) clips per rear fender trim.
3. Pull the other end of the clip with a pair of pliers and bend the clip toward the wheel well to secure the fender trim (Fig. 3).
4. Repeat step 1-3 for all seven clips per rear fender trim

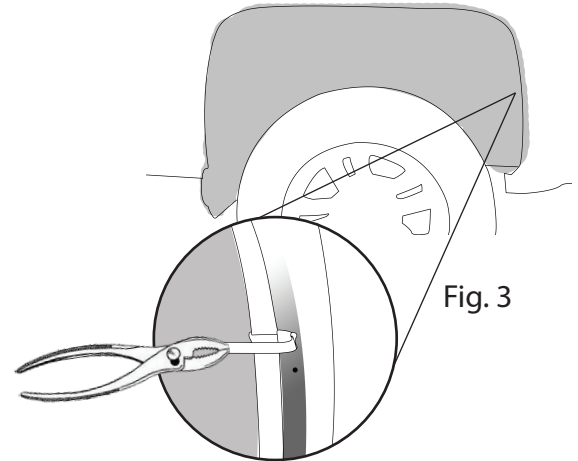

### OPTIONAL FENDER TRIM INSTRUCTIONS (DRILL METHOD\*):

1. Place a correct fender trim (fitment sticker can be found on back of fender trim) over fender to be installed.
2. Align fender trim properly onto fender and use 7/64 a bit to drill into fender well using the pre-drilled hole on fender trim for guidance (Fig. 4).
3. Use the provided screws to screw the fender trim to the fender using a phillips screwdriver.
4. Repeat step 1-3 for each and every fender trim.

