




## Model 6880 BlastMaster™ Air Flow Kit Installation Instructions

1. Remove existing hardware from trumpet inlets
2. Screw solenoids onto each of the three trumpets
3. Set up manifold as shown below
4. Wire solenoids to your horn switch

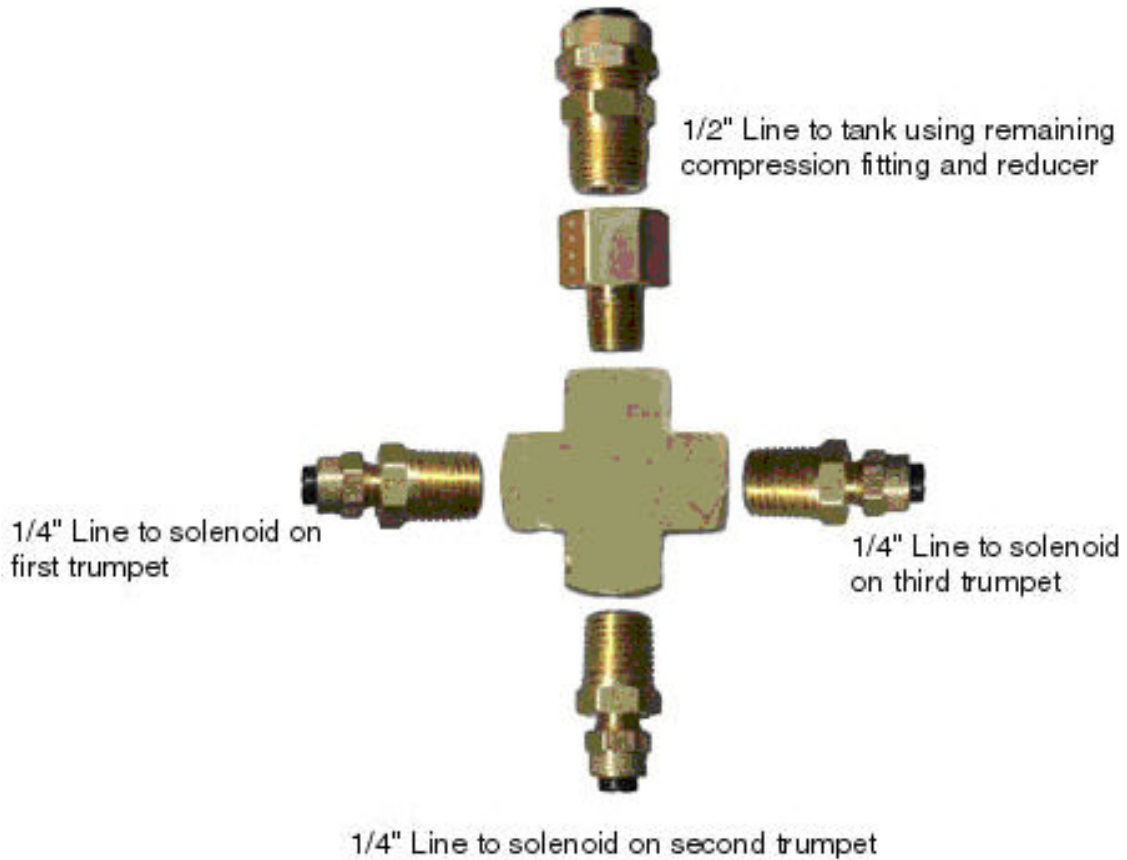

Kleinn Automotive Accessories  
PO Box 91278  
Tucson, AZ 85752  
P: (520) 579-1531 F: (520) 579-1528  
[www.kleinn.com](http://www.kleinn.com)