

INSTALLATION INSTRUCTIONS

PART # BB037411-SP / BB037411A-SP

3 INCH <u>BULL BAR</u> FOR 2015-2016 CADILLAC ESCALADE /
CHEVROLET SUBURBAN / CHEVROLET TAHOE

INSTALLATION INSTRUCTION

ITEM NO.: BB037411-SP/BB037411A-SP

DESCRIPTION: 3 INCH BULL BAR FOR 2015-2016 CADILLAC ESCALADE / CHEVROLET SUBURBAN / CHEVROLET TAHOE


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

PART LIST

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Front Guard	1		(5)	Hexagon Nut	8	M12
2	Bracket	2		6	Large Washer	16	φ12x30x3.0
3	Hexagon Head Bolt	6	M12*35	7	Spring Washer	8	φ12
4	Hexagon Head Bolt (half thread)	2	M12*140*40				


INSTALLATION PICTURES

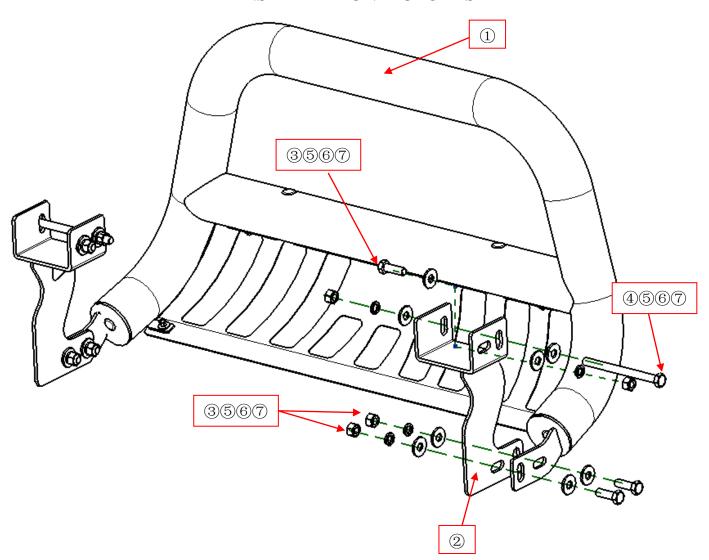


INSTALLATION PROCEDURES

Step 1: Refer to the Part List to check if all the hardware are included.

Pic 2B

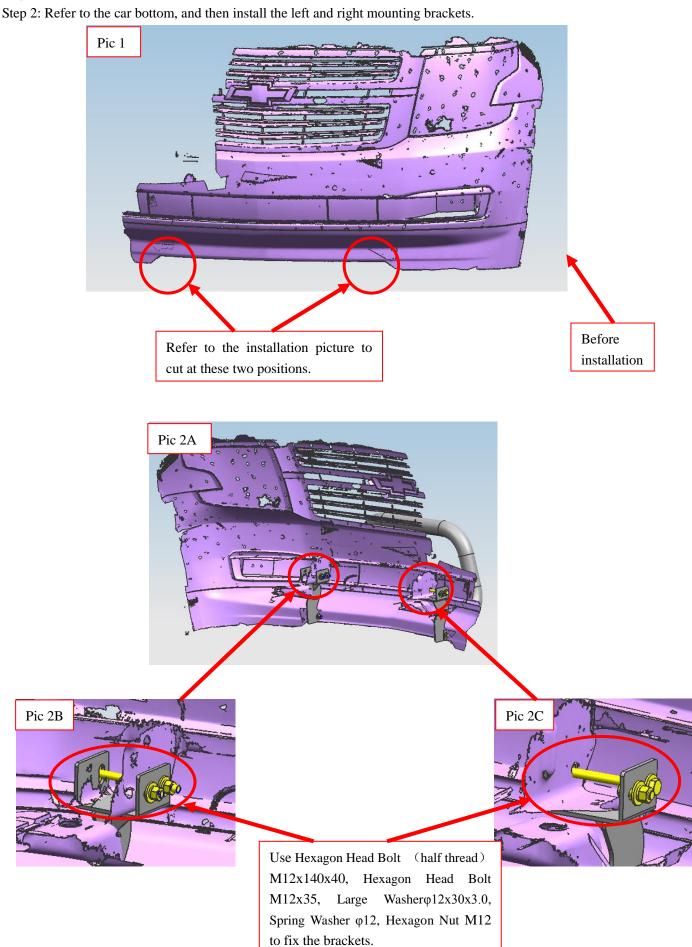

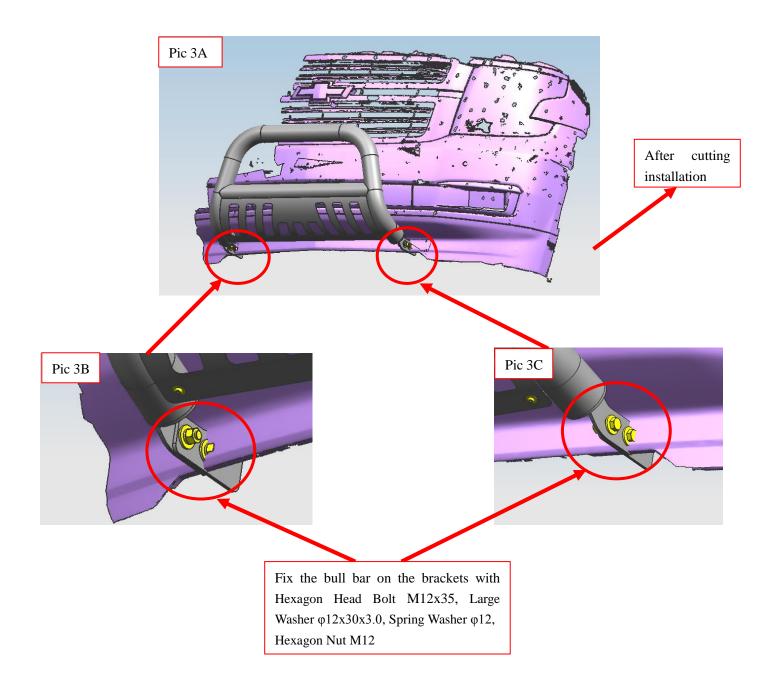

Step 3: Install the bull bar on the brackets and then adjust the brackets to the proper position.

Step 4: Check if all hardware are installed and tighten them up to complete the installation.

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.