

BLACK HORSE ROLL BAR FOR 1/2 TON TRUCKS (SIERRA 07-16, SILVERADO 07-16, F150 09-16, RAM 1500 09-16) FLAT BASE WITH LED BRAKE LIGHT

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	Pipe 1	2	1	Pipe 2
3	1	Decoration plate-L	4	1	Decoration plate-R
(5)	2	Connecting plate (FOR LED LIGHT INSTALLATION)	6	2	Support plate

		INSTALLATION	INSTR	UCTIO	ONS
7	1	Allen wrench S=8	8	4	Gum cover
9	1	Allen wrench S=4	10	20	Flat washer D6
11)	10	Spring washer D6	12	4	Button head allen bolts M12-40
13	10	Hex nut M6	14	2	Button head allen bolts M6-30
15	8	Button head allen bolts M6-20	16	6	Spring washer D12
17	12	Flat Washer D12	18)	6	Hex nut M12
19	6	Hex nut M12*40			TION HOLIMIZ


Installation Fig.

Step 1: Verify all parts are present.


Step 2: Using wrench 9, install 1/2 main pipes and connecting plate 5 together with parts 10/11/13/14 as shown.

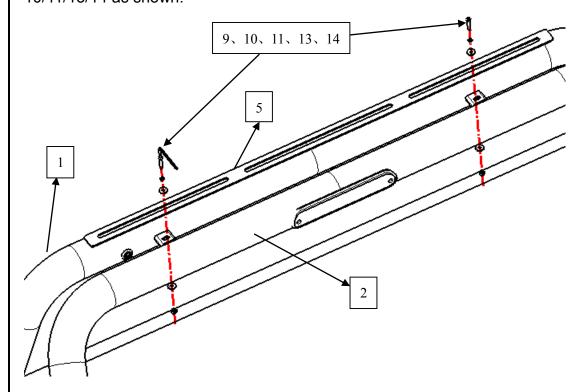


Step3: Using wrench 9, install 3/4 decoration plate together with parts 10/11/13/15 as shown.

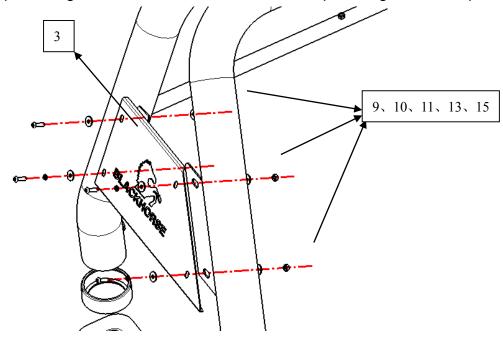


Step4: Using wrench 7, install support plate 6 and gum cover 8 with part 12.

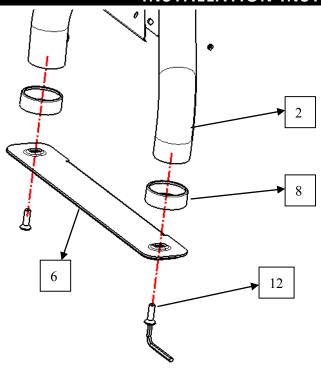

Step 4: Fix the roll bar on the trunk with parts 16/17/18/19 (need to drill the trunk if there's no installation holes). Test and make sure that the roll bar is steadily fixed, and then tighten all the hardware.

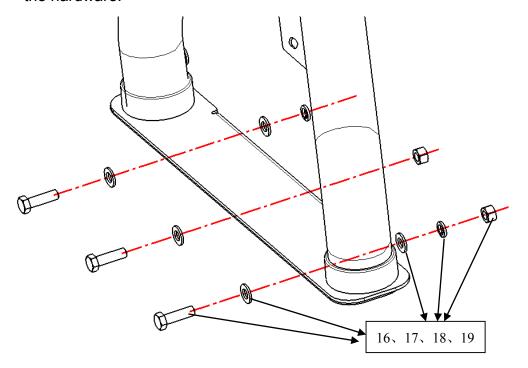

Step 6: Installation is finished, pick up all tools.

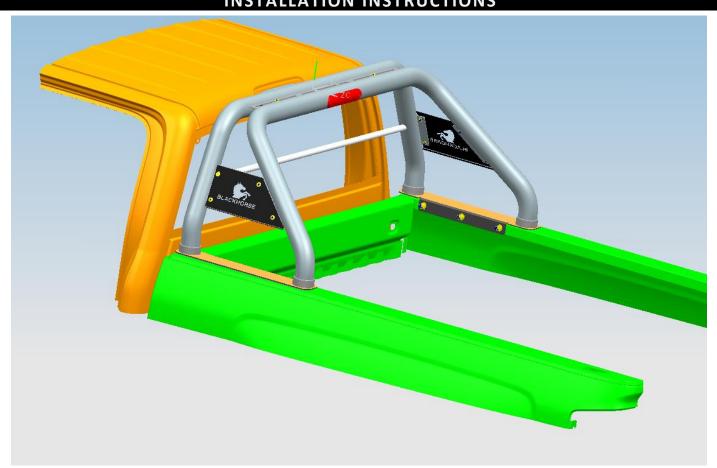

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.