
IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !

Copyright © 2011 by E&G Classics, Inc. All right reserved. The reproduction or utilization of this work in any form or any electronic, mechanical, or other means, no known or hereafter invented, including xerography, photocopying, and recording, and in any information storage retrieval system is forbidden without written permission of owners.




## Notes to the Technician/Installer:


E&G is proud to present this package to you and reminds you that for technical information, contact technical assistance at 410-381-4900. Do not attempt the installation of any E&G product without first reading the detailed instructions. E&G Classics will not warrant damaged parts or the vehicle due to altered installation instructions.

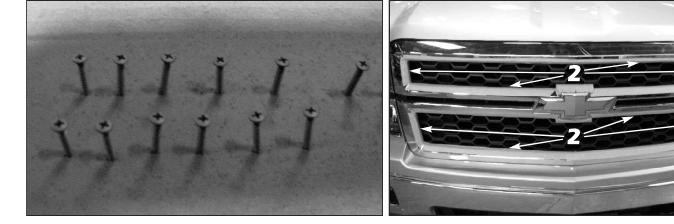


- **1**. Apply flat or semi-gloss black paint to the supplied mounting screws and allow to dry.
- **2.** For LT and LTZ models with silver or chrome factory grille inserts: Apply masking tape to the chromed openings of the factory grilles as shown. Scuff the factory grille inserts with a scotch brite pad or extra line sand paper. Apply flat black paint to the factory center sections to help conceal the factory grille once the E&G mesh grille has been installed. Once the paint is dry, re move the tape.

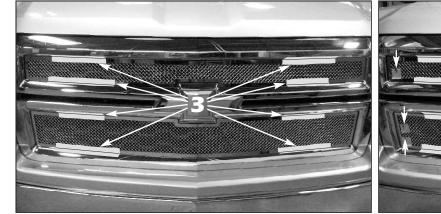

 Align the grille assemblies into place and use enough wide masking tape to hold them in place for the following hardware installation.

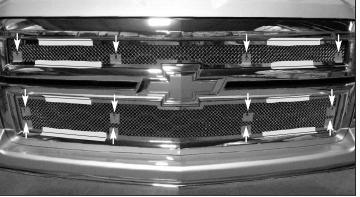

**4.** This photo shows the screw and 4-way mesh retainer locatons that will secure the mesh sections to the factory grille inserts.

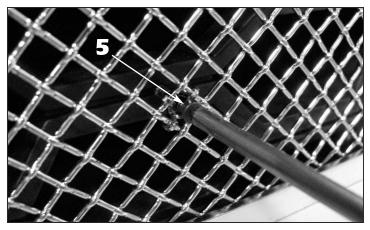

5. Carefully align the supplied 4-way mesh retainers and install the supplied #4 x 3/4" screws painted in step 1 through the centers of the thickest parts of the factory grille insert. You can use a 1/16" drill bit to drill the mounting holes or allow the screws to self-tap into the factory grille inserts.



**6**. Image shows proper placement of the 4-way mesh retainers and mounting screws installed through the thickest part of the factory grille inserts. Do not overtighten or you will strip out the holes in the factory grille inserts!



7. Remove the masking tape and clean grille to remove fingerprints, grease, etc. Use a mild solvent and a soft, clean cloth to remove any glue residue from the polished stainless steel surrounds. Follow with alcohol or glass cleaner and a soft, clean cloth to remove any solvent residue. Finished installation.

## **E&G** Classics Warranty Information:

E&G Classics, Inc. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Thirty-Six (36) months from the date of shipment by E&G. This warranty is limited to the repair or replacement, at E&G Classics option, of the defective part or product.Full E&G Classics warranty information is available online @ www.egclassics.com. Just click on the product warranty icon.

## For E&G Classic Product Returns:

Please contact the authorized E&G Classics Dealer where you purchased our product from in regards to any workmanship or warranty claims. All items returned to E&G Classics must have a return authorization number issued by us for inspection or a defective product and or warranty issue. All merchandise sent back to E&G Classics without proper paperwork or authorization will be rejected and returned.

F	ine Mesh Part #102	22-0102-14
Quantity:	Description:	Part Number:
1	Upper Top Mesh Grille	****
I	Upper Bottom Mesh Grille	****
1	Installation Hardware Kit	1022-1902-14
12	4-Way Mesh Retainers	1999-0719-00
12	#4 x 3/4" Oval Head Screws	2999-9113-00T

Copyright 2011 by E&G Classics, Inc.

Visit us online today at www.egclassics.com

