

IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !

Copyright © 2014 by E&G Corporation, LLC. All right reserved. The reproduction or utilization of this work in any form or any electronic, mechanical, or other means, no known or hereafter invented, including xerography, photocopying, and recording, and in any information storage retrieval system is forbidden without written permission of owners.



2014-15 Chevrolet Silverado 1500 Z71 Mesh & E-Power Mesh Grilles



2-Piece Upper EZ Overlay *Note: Will not fit standard Silverado*

Black Ice Mesh Part #: 1022-B10U-14Z / Chrome Mesh Part #1022-010U-14Z

E-Power Chrome Mesh Part #1022-010U-14ZEPC / E-Power Black Mesh Part #1022-010U-14ZEP



TOOLS REQUIRED

Automotive grade masking tape, razor blade or X-Acto knife, 9mm socket and ratchet, electric drill, 1/16" drill bit, #1 phillips screwdriver, plastic squeegee, mild solvent, glass cleaner and soft, clean cloths.

10/22/2014

Notes to the Technician/Installer:

E&G is proud to present this package to you and reminds you that for technical information, contact technical assistance at 410-381-4900. Do not attempt the installation of any E&G product without first reading the detailed instructions.

E&G Classics will not warrant damaged parts or the vehicle due to altered installation procedures.

Important: If the front of the vehicle you are working on differs from the one shown in this instruction manual, please call technical assistance at 410-381-4900 before proceeding.

E&G Classics Warranty Information:


E&G Corporation, LLC. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Thirty-Six (36) months from the date of shipment by E&G. This warranty is limited to the repair or replacement, at E&G Classics option, of the defective part or product. Full E&G Classics warranty information is available online @ www.egclassics.com. Just click on the product warranty icon.

For E&G Classic Product Returns:

Please contact the authorized E&G Classics Dealer where you purchased our product from in regards to any workmanship or warranty claims. All items returned to E&G Classics must have a return authorization number issued by us for inspection or a defective product and or warranty issue. All merchandise sent back to E&G Classics without proper paperwork or authorization will be rejected and returned.




1. Thread the supplied #4 x 3/4" screws into a piece of cardboard and apply flat or semi-gloss black paint and allow to dry.

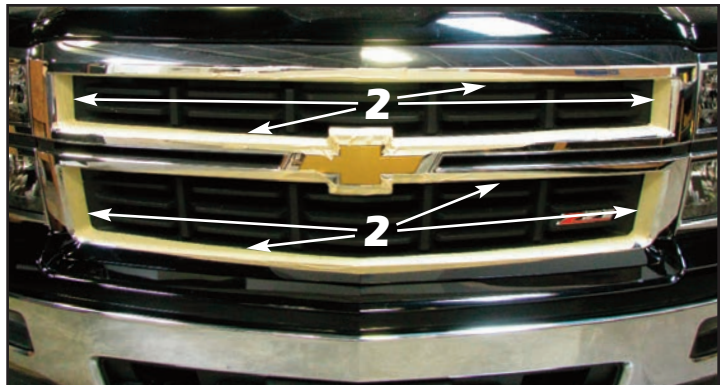

2. Apply masking tape to the chromed portion of the factory grille as shown. This will protect the chrome finish during the E&G mesh grille installation.




3. Use a plastic squeegee to push through the double faced tape securing the "Z71" emblem to the factory grille and remove the emblem. Do not use a metal tool such as a screwdriver or you will damage the emblem.

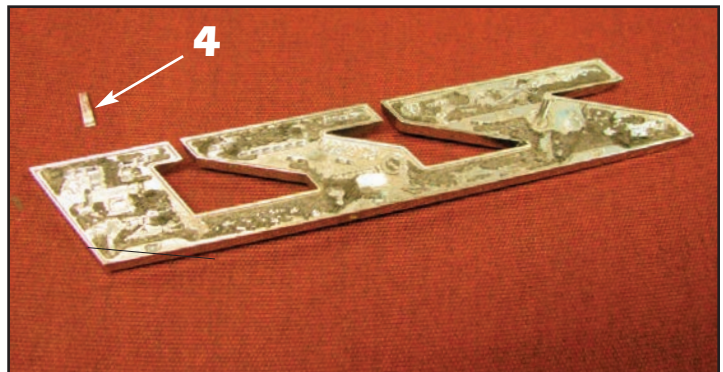


4. Remove the factory double faced tape from the back of the emblem along with the alignment pin behind of the number "1"




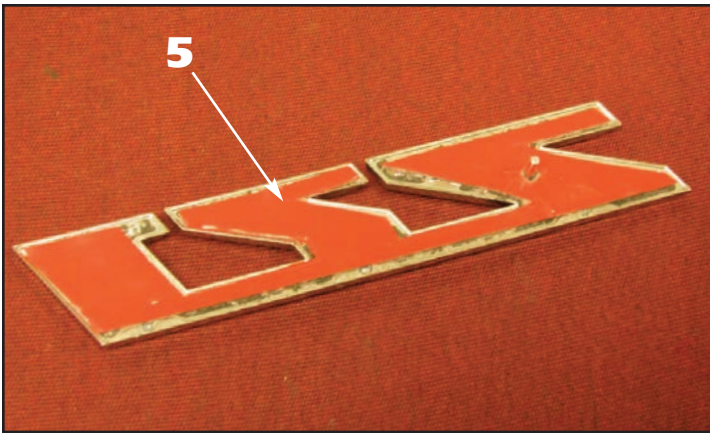

5. Using a razor blade or X-Acto knife, install the supplied double faced tape to the back of the "Z71" emblem as shown.

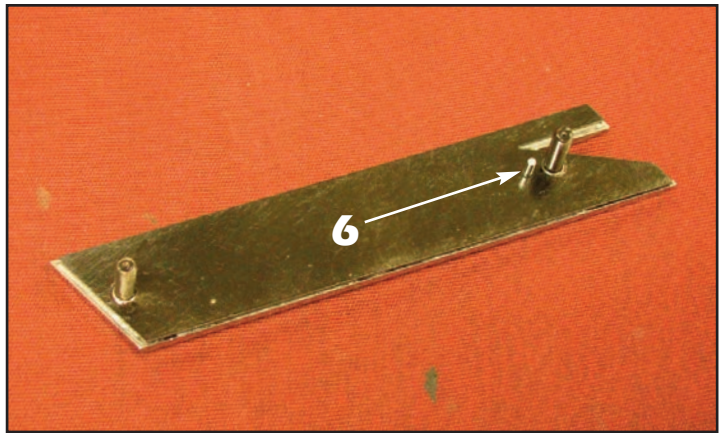


6. Install the supplied emblem mounting plate to the back of the "Z71" emblem as shown. Break off the remaining alignment pin once the emblem is pressed firmly into place to set the tape.

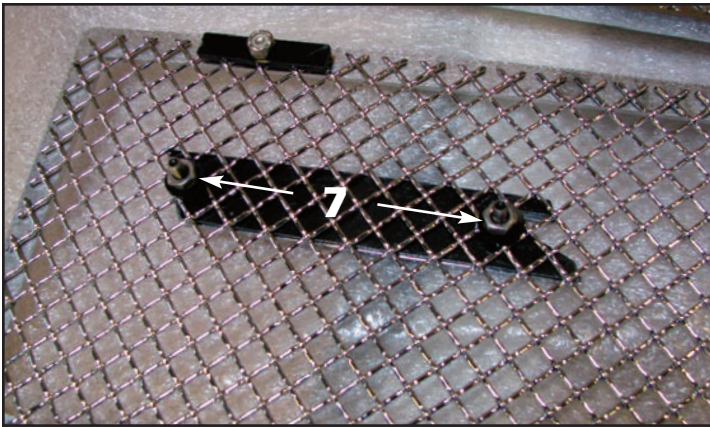


7. This photo shows the emblem installation using the supplied small black plastic washers, #10 S.S. lock washers and #8-32 S.S. hex nuts. Location is 2-1/4" over and 2-1/4" down from the upper left corner. Tighten until the emblem is snug against the mesh.




8. Align the mesh grilles into place and use wide masking tape to hold them in position for the following mounting hardware installation. Make sure the emblem mounting studs do not make contact with the factory grille (mesh grille shown, E-Power mesh grille similar).

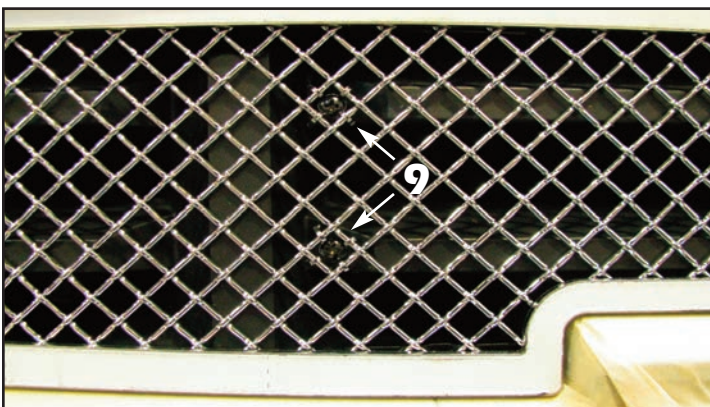


9. Start at the upper grille center. This photo shows the screws and 4-way mesh retainer locations that will secure the mesh sections to the factory grille inserts (either side of the factory emblem). The screws must be installed on the angled part where the factory grille is deep enough in order for the clips to hold the mesh tight against the factory grille insert. You can drill a 1/16" hole or allow the screws to self tap into the plastic.

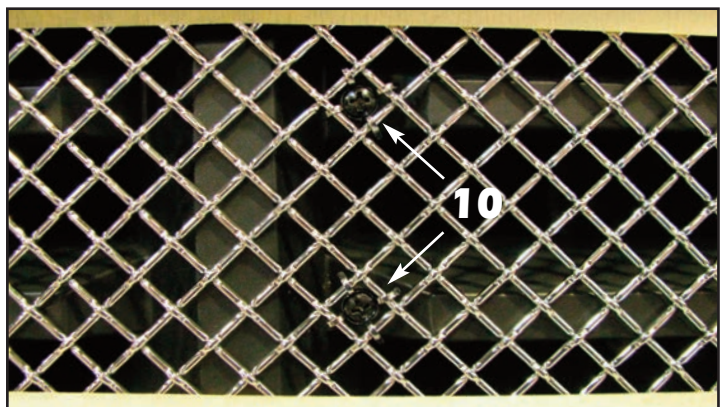


10. This photo shows the screws and 4-way mesh retainer locations that will secure the mesh sections to the factory grille inserts (centered between the middle and sides of the grille). The screws must be installed on the angled part where the factory grille is deep enough in order for the clips to hold the mesh tight against the factory grille insert. You can drill a 1/16" hole or allow the screws to self tap into the plastic.

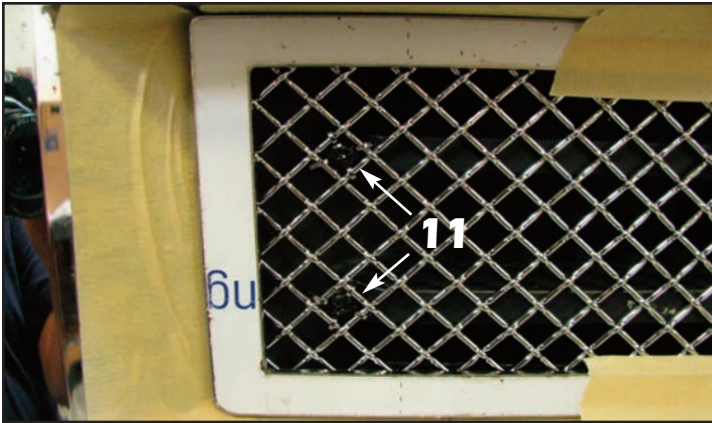


11. This photo shows the screws and 4-way mesh retainer locations that will secure the mesh sections to the factory grille inserts (at the sides of the grille). The screws must be installed on the angled part where the factory grille is deep enough in order for the clips to hold the mesh tight against the factory grille insert. You can drill a 1/16" hole or allow the screws to self tap into the plastic.

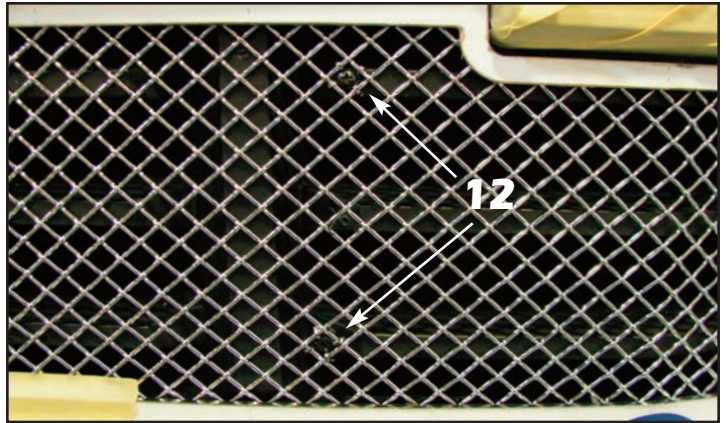


12. Start at the lower grille center. This photo shows the screws and 4-way mesh retainer locations that will secure the mesh sections to the factory grille inserts (left and right below of the factory emblem). The screws must be installed on the angled part where the factory grille is deep enough in order for the clips to hold the mesh tight against the factory grille insert. You can drill a 1/16" hole or allow the screws to self tap into the plastic.

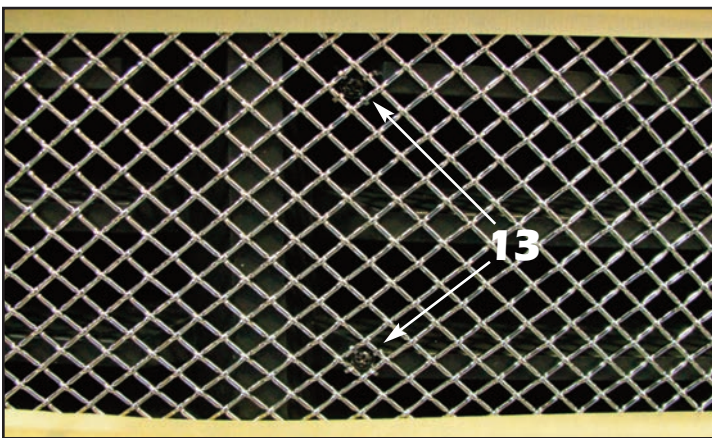


13. This photo shows the screws and 4-way mesh retainer locations that will secure the mesh sections to the factory grille inserts (centered between the middle and sides of the grille). The screws must be installed on the angled part where the factory grille is deep enough in order for the clips to hold the mesh tight against the factory grille insert. You can drill a 1/16" hole or allow the screws to self tap into the plastic.

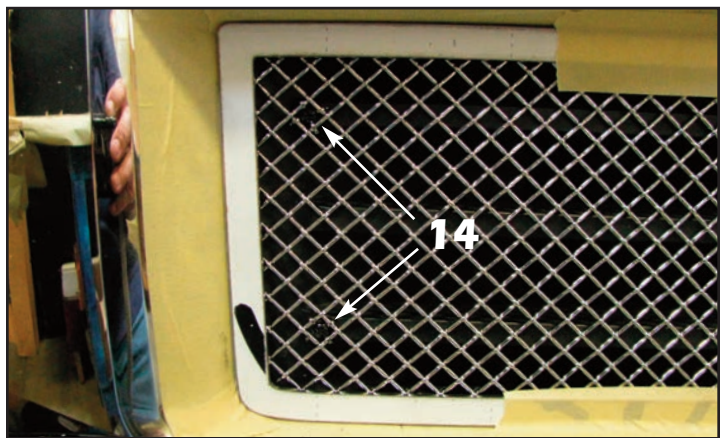

14. This photo shows the screws and 4-way mesh retainer locations that will secure the mesh sections to the factory grille inserts (at the sides of the grille). The screws must be installed on the angled part where the factory grille is deep enough in order for the clips to hold the mesh tight against the factory grille insert. You can drill a 1/16" hole or allow the screws to self tap into the plastic.

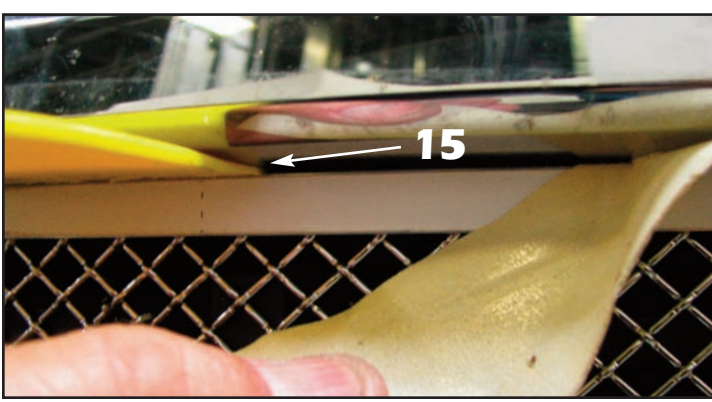

15. To remove the protective masking tape applied in Step 2, you might need to insert a plastic tool such as a squeegee to separate the factory chrome surrounds from the stainless steel surrounds and pull the tape back over itself to minimize breaking the tape.

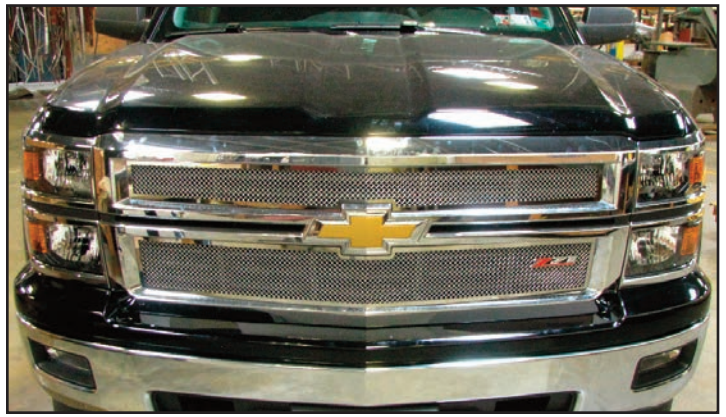

16. Peel off the protective covering from the grille surrounds and use a mild solvent and a soft, clean cloth to remove any glue residue. Use alcohol or glass cleaner and a soft, clean cloth to remove any solvent residue to finish the installation (not applicable on E-Power mesh grilles).

Fine Mesh Part #1022-010U-14Z

Quantity:	Description:	Part Number:
1	Upper Top Mesh Grille	*****
1	Upper Bottom Mesh Grille	*****
1	Installation Hardware Kit	1022-1903-14Z
24	4-Way Mesh Retainers	1999-0712-00
24	#4 x 3/4" Oval Head Screws	2999-9113-00T
5"	.045" x 3/4" Double Faced Tape	3004-9247-00
2	Small Black Plastic Washers	1999-0256-00
2	#8-32 Hex Nuts	1999-9072-00
1	Emblem Mounting Plate	1022-0158-14Z
2	#10 S.S. Lock Washers	1999-9555-00

Black Ice Mesh Part #1022-B10U-14Z

Quantity:	Description:	Part Number:
1	Black Ice Upper Top Mesh Grille	*****
1	Black Ice Upper Bottom Mesh Grille	*****
1	Installation Hardware Kit	1022-1903-14Z
24	4-Way Mesh Retainers	1999-0712-00
24	#4 x 3/4" Oval Head Screws	2999-9113-00T
5"	.045" x 3/4" Double Faced Tape	3004-9247-00
2	Small Black Plastic Washers	1999-0256-00
2	#8-32 Hex Nuts	1999-9072-00
1	Emblem Mounting Plate	1022-0158-14Z
2	#10 S.S. Lock Washers	1999-9555-00

E-Power Fine Chrome Mesh Part #1022-010U-14ZEP

Quantity:	Description:	Part Number:
1	E-Power Upper Top Chrome Mesh Grille	*****
1	E-Power Upper Bottom Chrome Mesh Grille	*****
1	Installation Hardware Kit	1022-1903-14Z
24	4-Way Mesh Retainers	1999-0712-00
24	#4 x 3/4" Oval Head Screws	2999-9113-00T
5"	.045" x 3/4" Double Faced Tape	3004-9247-00
2	Small Black Plastic Washers	1999-0256-00
2	#8-32 Hex Nuts	1999-9072-00
1	Emblem Mounting Plate	1022-0158-14Z
2	#10 S.S. Lock Washers	1999-9555-00

E-Power Fine Black Mesh Part #1022-010U-14ZEP

Quantity:	Description:	Part Number:
1	E-Power Upper Top Black Mesh Grille	*****
1	E-Power Upper Bottom Black Mesh Grille	*****
1	Installation Hardware Kit	1022-1903-14Z
24	4-Way Mesh Retainers	1999-0712-00
24	#4 x 3/4" Oval Head Screws	2999-9113-00T
5"	.045" x 3/4" Double Faced Tape	3004-9247-00
2	Small Black Plastic Washers	1999-0256-00
2	#8-32 Hex Nuts	1999-9072-00
1	Emblem Mounting Plate	1022-0158-14Z
2	#10 S.S. Lock Washers	1999-9555-00

