


ACS UNIVERSAL MOUNTING PLATE INSTRUCTION

APPLICABLE MODELS:
ALL

PACKAGE CONTENTS

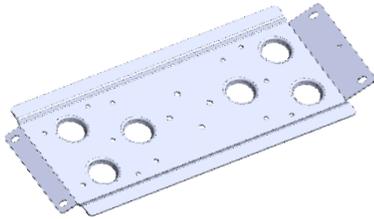

Universal mounting plate
(QTY.1)



M8 locknut
(QTY.4)



M8 T-Bolt
(QTY.4)

BEFORE INSTALLATION


READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING.

1 ASSEMBLE UNIVERSAL MOUNTING PLATE AND INSTALL

- 1) INSTALL TWO T-BOLTS INTO THE TOP RAIL AND TWO INTO THE BOTTOM.
- 2) ALIGN UNIVERSAL MOUNTING PLATE WITH T-BOLTS AND USING M8 LOCKNUT TIGHTEN TO 16 LB-FT. THE TOP OF THE PLATE IS MARKED WITH A SMALL TRIANGLE.



NOTE:

QUICKFIST CLAMPS ARE NOT INCLUDED IN KIT BUT CAN BE PURCHASED FROM WWW.ENDROAD.COM

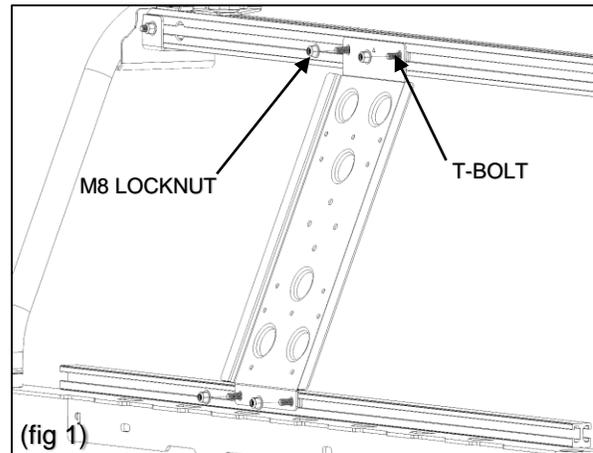


(fig 2)


2 APPLICATIONS FOR UNIVERSAL MOUNTING PLATE

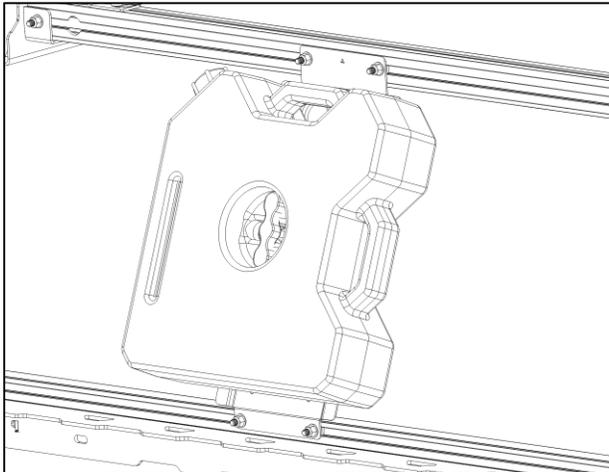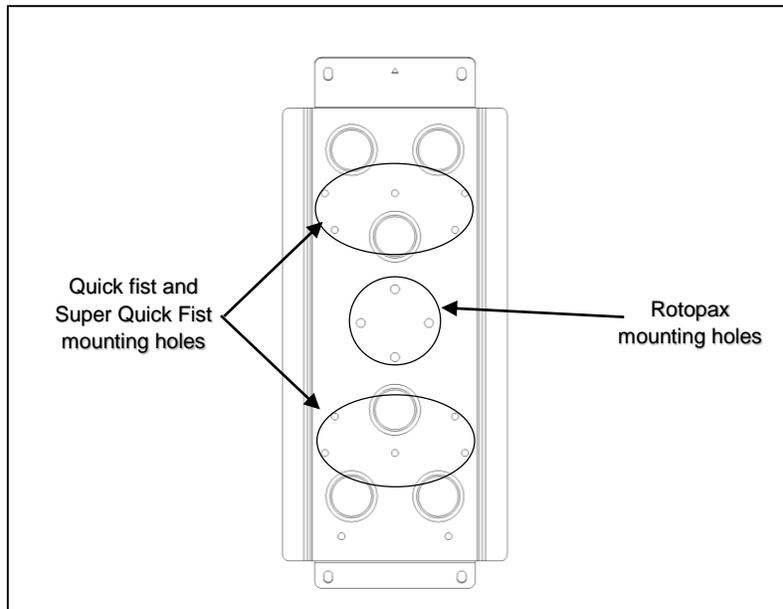

Rotopax mounted vertically

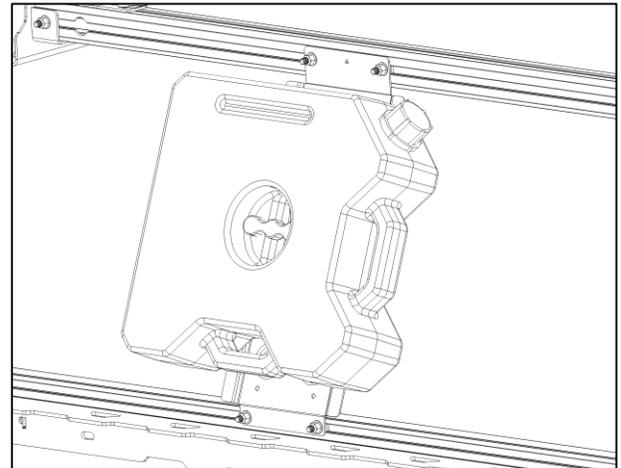

Rotopax mounted horizontally

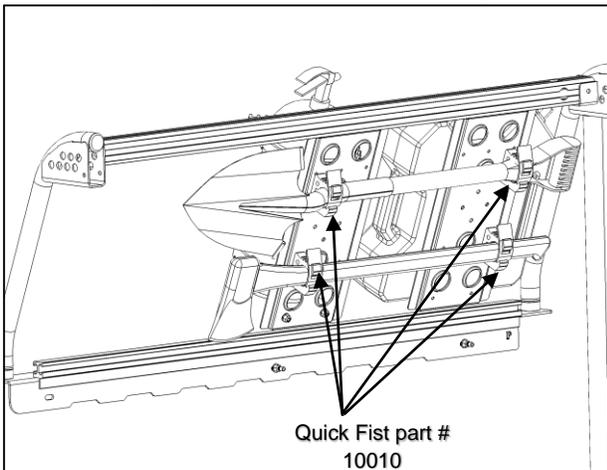

Using two Universal mounting plates and original Quick Fist you can mount a shovel and axe on inside