

ADDICTIVE DESERT DESIGNS

2003 – Current Chevy 1500/2500 ADD Lite Side Steps Installation Instructions

PREPARATION

1. Disconnect the negative terminal on the battery. Park the vehicle on level ground and set the emergency brake.
2. We recommend reading through the installation instructions in whole before performing the work.
3. Estimated Installation Time: **1 Hour**
4. You will need the following tools:
 - a. 3/4" Socket
 - b. Ratchet

Note: this installation requires 2 people for best results
5. Included in Kit:

Reuse Stock Hardware

INSTALLATION

1. Lay your Side Steps out and put them on the correct side of the vehicle. The raised mount goes towards the rear of the truck. (Fig A)



Fig A

2. On one side of your vehicle, find the cab mount bolts. There are three 3/4" Bolts that can be seen from underneath the vehicle. Refer to Fig B. Remove these three bolts.

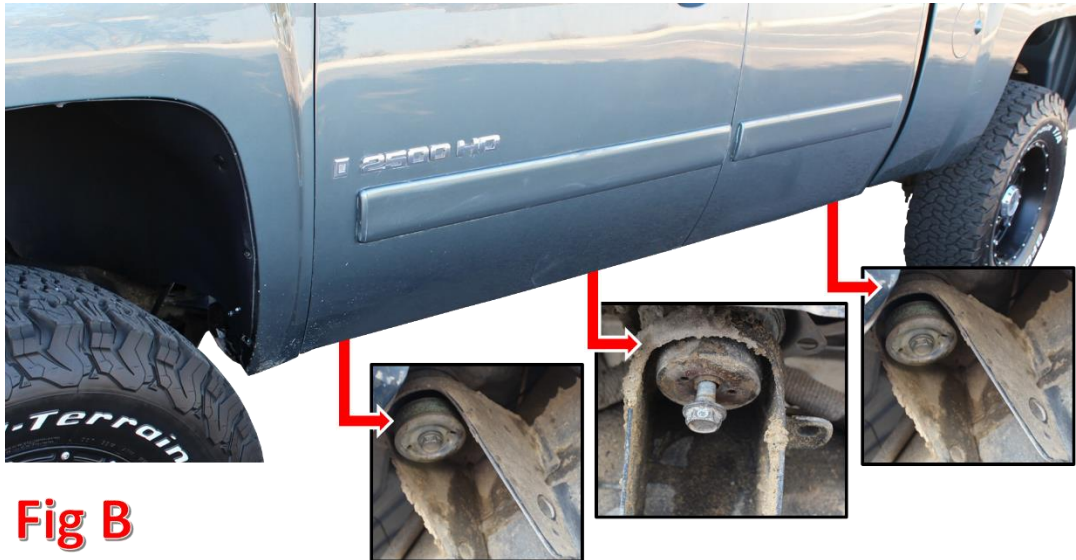


Fig B

3. Hold your step in place, then secure it to the frame using the bolts you removed in Step 2. (Fig C) If the rubber pucks dropped off the mounts when you removed the bolts, please arrange them as shown in Fig D



Fig C

Fig D

4. Align the Side Step so that it is centered left to right and sits straight in relation to the bottom of the doors. Then, tighten the mounting bolts to the manufacturer's specification.
5. Repeat Steps 2-4 on the other side of the vehicle.
6. Stand back and enjoy your new ADD Lite Side Steps.
7. Check and re-tighten if needed, all mounting bolts after 100 miles and periodically thereafter.



**For Additional Support or Technical Questions,
Please Call 480.671.0820 or
Email info@addictivedesertdesigns.com**

**Addictive Desert Designs
4840 E. Jasmine Street Suite 112
Mesa, AZ 85205
www.addictivedesertdesigns.com**