

IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !

Copyright © 2013 by E&G Classics, Inc. All right reserved. The reproduction or utilization of this work in any form or any electronic, mechanical, or other means, no known or hereafter invented, including xerography, photocopying, and recording, and in any information storage retrieval system is forbidden without written permission of owners.



2014 GMC Sierra "Denali" Style Q Grille Upper Overlay Part # 1091-0185-14




TOOLS REQUIRED Automotive grade masking tape, electric drill, 5/16" and 1/16" drill bits, razor blade or X-Acto knife, flat blade screwdriver, 9mm socket and ratchet, solvent, glass cleaner and soft, clean cloths. 09/10/2013

Notes to the Technician/Installer:


E&G is proud to present this package to you and reminds you that for technical information, contact technical assistance at 410-381-4900. Do not attempt the installation of any E&G product without first reading the detailed instructions. E&G Classics will not warrant damaged parts or the vehicle due to altered installation procedures.



1. Open the hood and use a flat blade screwdriver to remove the factory push pins securing the top of the factory grille center section to the radiator support panel.

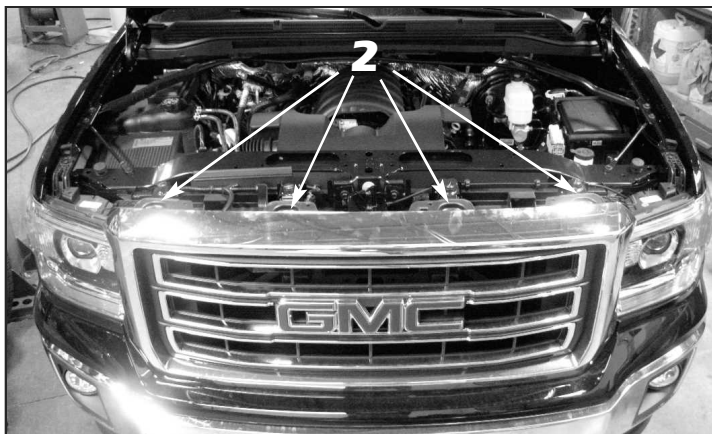

2. Remove the 10mm hex bolts from across the top of the factory grille.

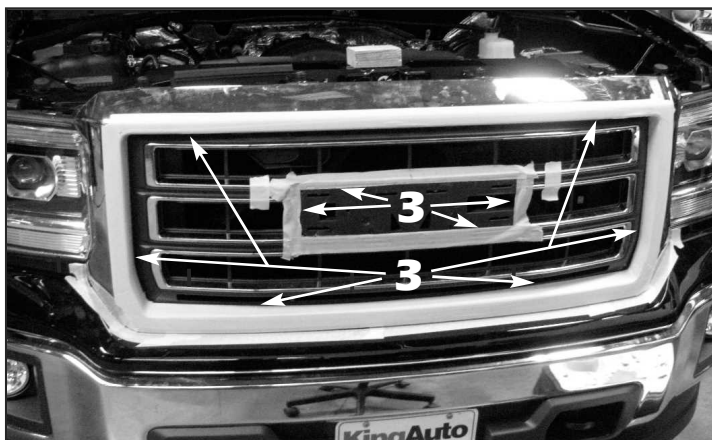

3. Apply masking tape around the factory GMC emblem and use a plastic clip removal tool to pry the emblem around the perimeter until the emblem releases (not shown). Once the emblem has been removed, apply masking tape to the factory chrome surround.




4. For customers requesting an emblem reinstallation: Carefully cut the factory mounting tabs from the back of the factory emblem.




Copyright 2013 by E&G Classics, Inc.

Visit us online today at www.egclassics.com

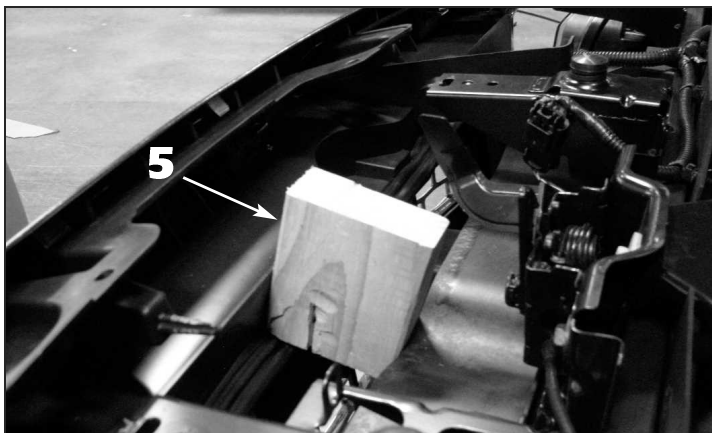


5. Cut a 4" section of 2 x 4, lift up and pull forward on the upper portion of the factory grille and place the 2 x 4 section where shown to allow access for hardware installation.

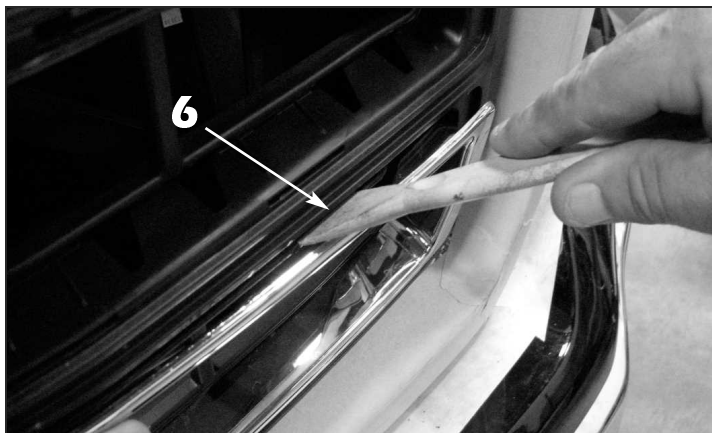


6. Remove the factory chrome inserts from the factory grille. Use a plastic clip removal tool to start the removal process.




7. Pull the factory mouldings out of the mounting slots in the factory grille to remove them. This will require extra effort.

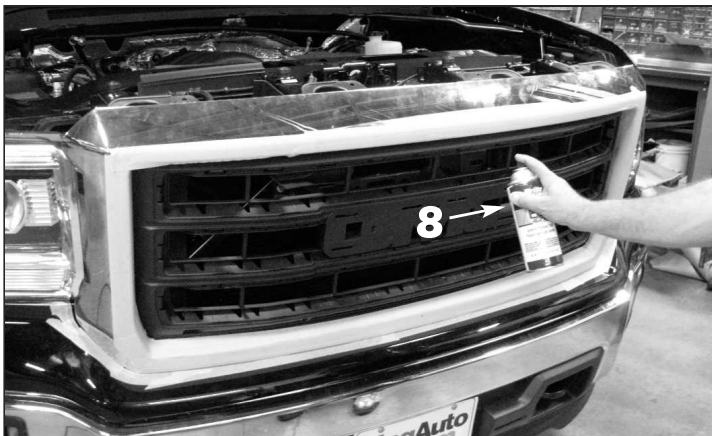

8. Apply flat or semi-gloss black paint to any areas on the factory grille that were stressed during the chrome moulding removal. The stressed plastic will appear light gray or white.

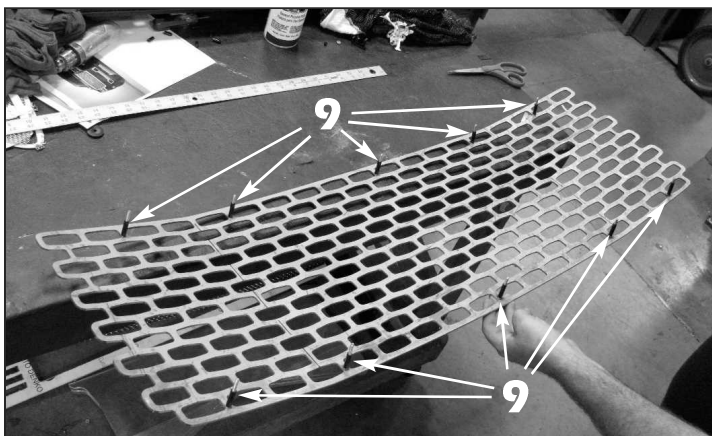


9. Trim the ends from the supplied black cap plugs and install them over the mounting studs on the back of the E&G grille.

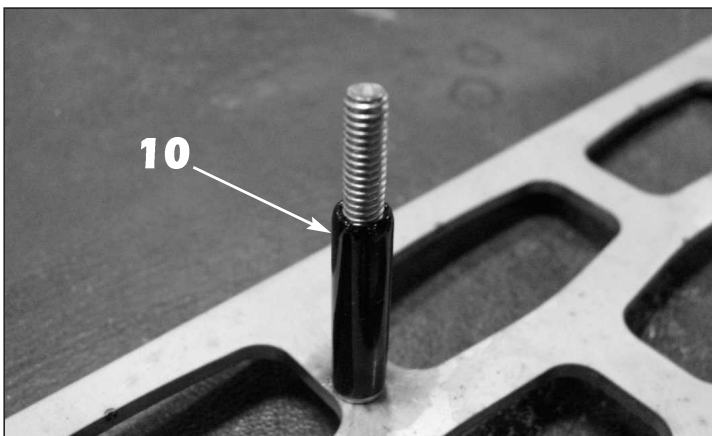


10. Close up of the installed black cap plugs.




11. Install the E&G grille over the factory grille making sure all mounting studs pass through the openings in the factory grille.

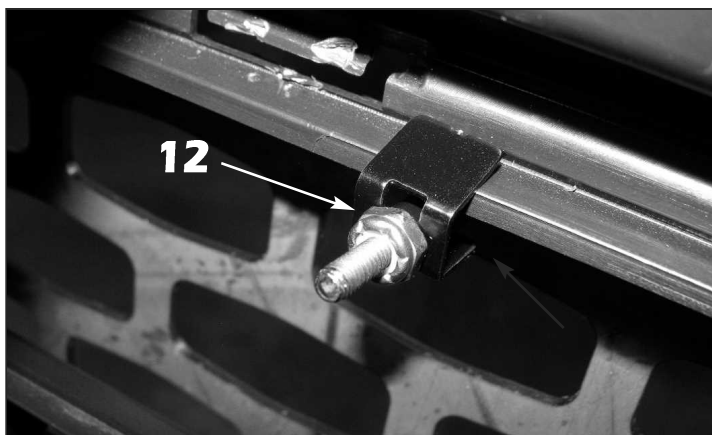


12. Install the grille upper mounting brackets using the supplied #8-32 ESNA half nuts (as shown) to all five upper mounting studs. Tighten until the E&G grille is snug against the factory grille.

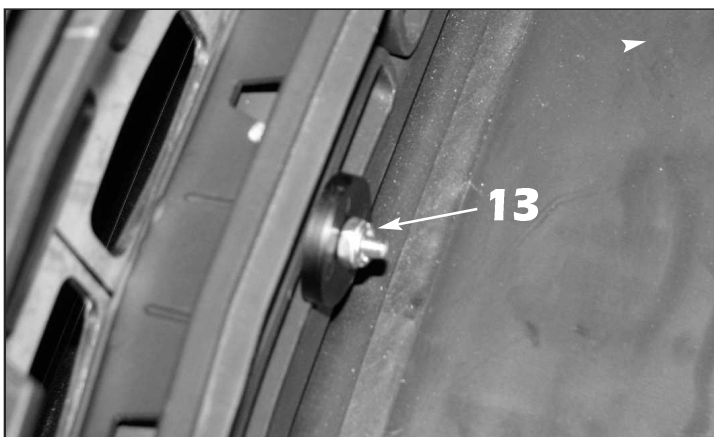


13. Install the supplied large black plastic washers across the bottom of the grille using the supplied #8-32 ESNA half nuts.

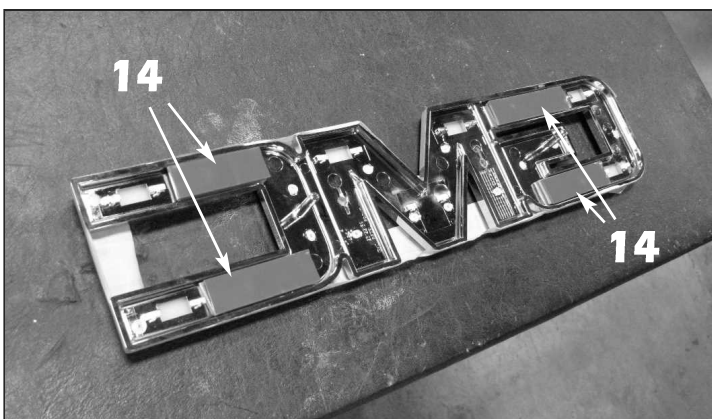


14. For customers requesting emblem reinstallation: Cut the supplied .090" x 1" double faced tape and the .045" x 1" double faced tape into 2-1/2" long strips and install the strips where shown on the back of the emblem. Stack 2 strips of the .090" thick tape with one strip of the .045" thick tape at each of the four locations.

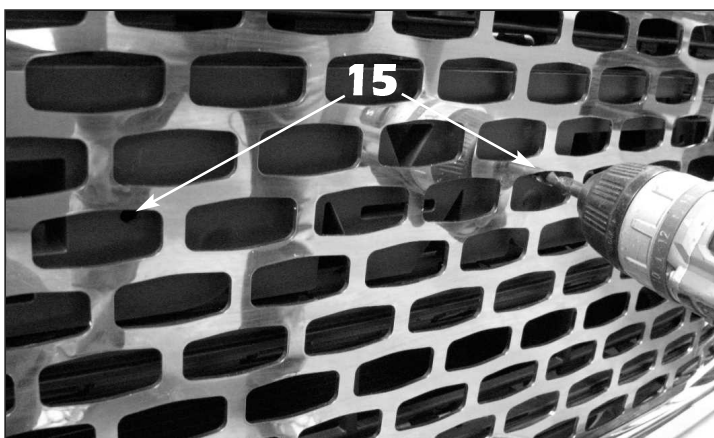


15. For customers requesting emblem reinstallation: Locate the existing alignment pin holes for the factory emblem. Use a 1/4" drill bit to drill new holes directly below the factory holes.

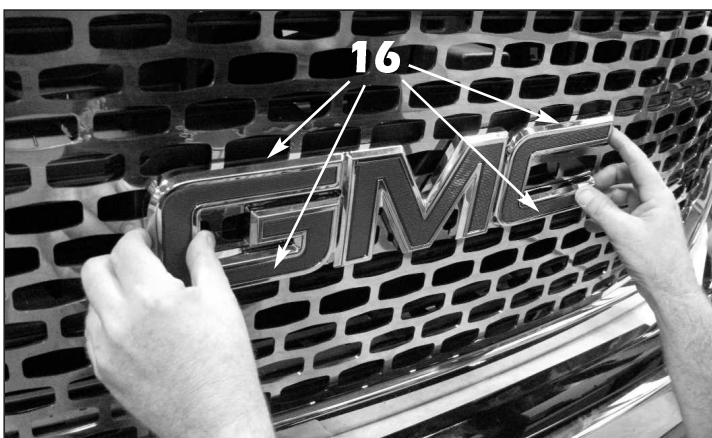

16. For customers requesting emblem reinstallation: Peel off the double faced tape backing from the tape installed in step 14. Align the factory emblem with the holes drilled in the previous step and press firmly enough to set the tape.

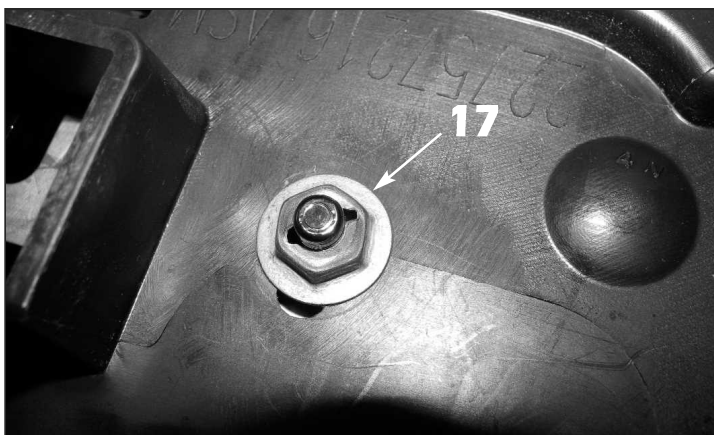

17. Install the supplied speed nuts onto the factory alignment pins and once started, turn the nut an additional 1/4 to 1/2 turn to secure.

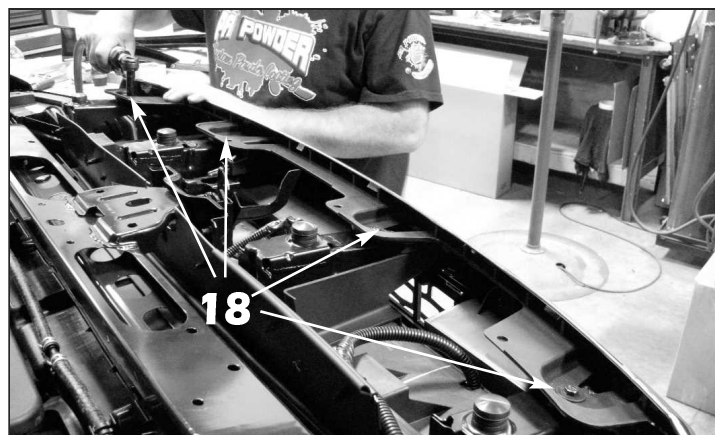

18. Reinstall the factory hardware across the top of the grille.



19. Align the factory radiator support panel back into place and install the plastic push pins and close the hood to finish the installation.

"Denali" Style Q Part #1091-0185-14

Quantity:	Description:	Part Number:
1	Denali Style Upper Grille Overlay	1091-1084-14
1	Installation Hardware Kit	1091-1902-14
5	Upper Grille Mounting Brackets	1402-0151-09
5	Large Black Plastic Washers	1999-0264-00
10	#8-32 ESNA Half Nuts	1999-0065-00
2	3/8" Hex Speed Nuts - 3/16" Stud	3999-9589-00
10	#8 x 1-1/4" Black Cap Plugs	1999-0311-00
20"	.090" x 1" Double Faced Tape	5999-0029-00
10"	.045" x 1" Double Faced Tape	3004-9244-92



E&G Classics Warranty Information:

E&G Classics, Inc. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Thirty-Six (36) months from the date of shipment by E&G. This warranty is limited to the repair or replacement, at E&G Classics option, of the defective part or product. Full E&G Classics warranty information is available online @ www.egclassics.com.

E&G Classic Product Returns:

Please contact the authorized E&G Classics Dealer where you purchased our product from in regards to any workmanship or warranty claims. All items returned to E&G Classics must have a return authorization number issued by us for inspection or a defective product and or warranty issue. All merchandise sent back to E&G Classics without proper paperwork or authorization will be rejected and returned.