

BED RAILS - STAKE HOLE MOUNT




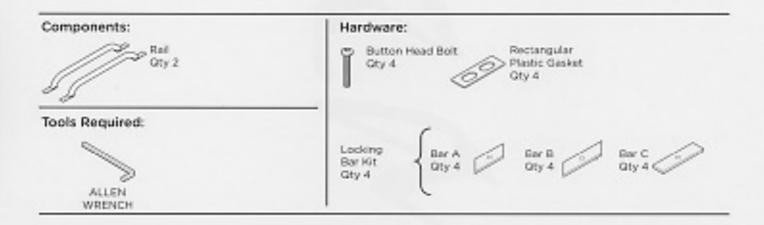

Note: When installing the Rails, all hardware must be left loose until all the items are attached.

 Read and understand instructions completely before beginning installation.

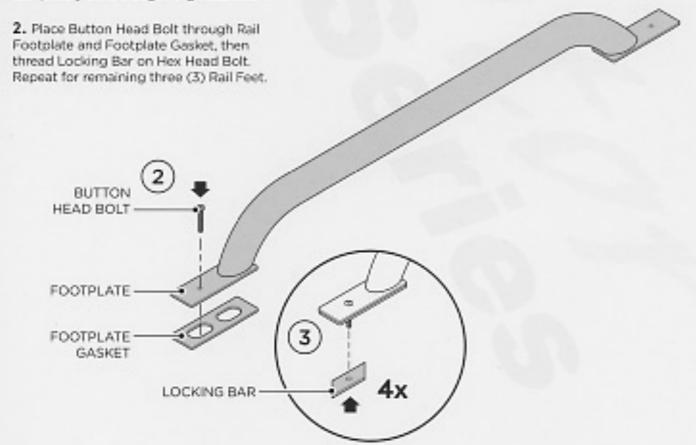

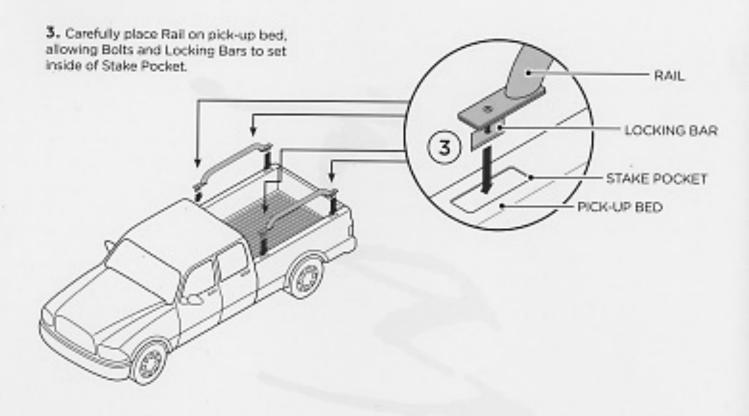

4. Slightly lift each end of Side Rail (4a) and tighten Bolt securely with Allen wrench (4b). As tightening, make sure the Locking Bar catches on both sides of the Stake Pocket Hole (4c).

