



INSTALLATION INSTRUCTIONS

97-03 FORD F150/F250 & 99-07 FORD SUPER DUTY F250/F350

TAIL LIGHT GUARDS


PART NUMBER 39-3090/39-3095

PARTS LIST:


1	Drivers side Tail Light Guard	1	Passenger Side Tail Light Guard
2	Support Brackets	2	4-0.7mmX15mm Screws
2	4mm Flat Washers	2	4mm Lock Washers

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Open the tailgate and loosen the passenger's side Torx (T50 size) Bolt that retains the tailgate cable $\frac{1}{4}$ " off of side of bed. (Fig 1).
- Remove the two screws holding the taillight assembly using a 10MM socket wrench (Fig 2). Grasp the taillight assembly with one hand and pull gently. Be sure to pull straight out to avoid possible damage (Fig 3) If it is too tight, then using a large standard flat screws driver and something like the cardboard backing of a note pad or towel to protect the paint from damage. Gently pry off the outside of the taillight assembly out from the bed. This is the same procedure required to change a burnt out taillight in the assembly.
- Install the small bracket over the bottom taillight locating stud and reinstall the tail assembly, hold on to the bracket so not to damage paint. (Fig 4)
- The top hole of the taillight guard mounting bracket is open ended to slide over the tailgate cable bolt, slide it behind the large washer and rotate the guard down to line up the bottom hole with the lower taillight assembly mounting screw position and reinstall the lower screw, reinstall the top assembly screw also leave both screws loose. (Fig 5)
- Install the 4mm screw, lock washer flat washer through front bracket and finger tighten, check fit, then tighten the small 4mm screw and all other screws and bolts. (Fig 6)
- Repeat process on opposite side of truck.

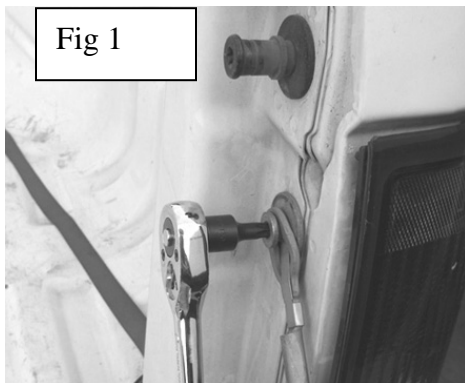

Passenger side cable

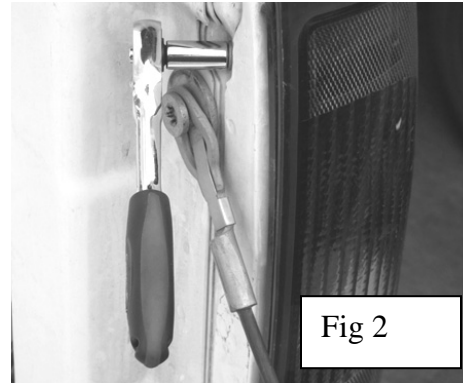

Taillight assembly removal

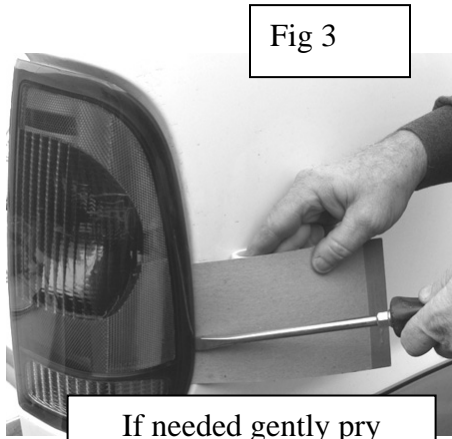


Fig 3

If needed gently pry Assembly off bed

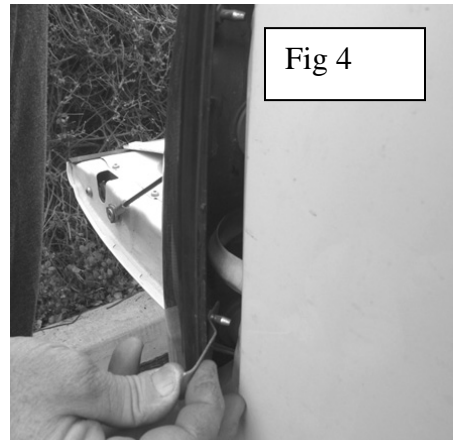


Fig 4

Place small mounting bracket on bottom stud and reinstall

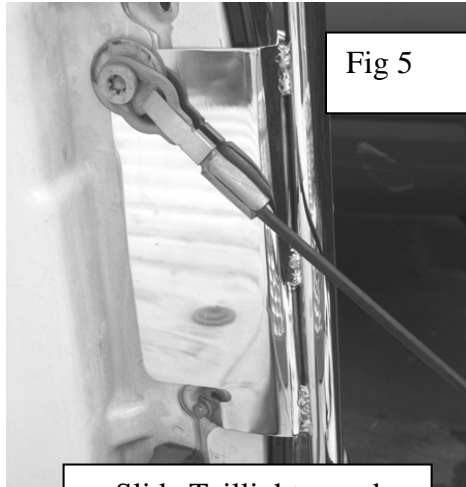



Fig 5

Slide Taillight guard behind large washer and rotate down into place



Fig 6

Tighten 4mm screw then tighten all screws

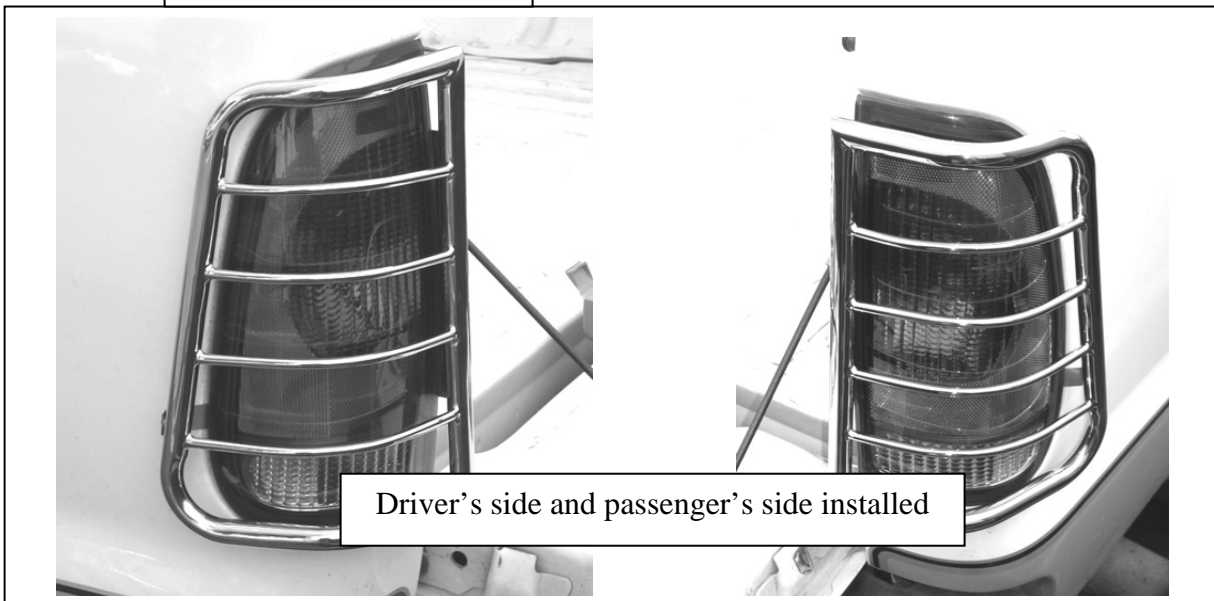

Driver's side and passenger's side installed



Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

Thank You for choosing Westin products
For additional installation assistance please call

Customer service (800) 345-8476 or (626) 960-6762