

Addictive Desert Designs

2010 – 2014 ford f150 series flat bar roof mount installation instructions

PREPARATION STEPS

1. Disconnect the negative terminal on the battery. With the vehicle on level ground and the emergency brake set.
2. You will need the following tools:
 - a. Drill
 - b. 1/4" Drill Bit
 - c. 1/4" Rivets (6)


Note: This installation requires 2 people for best results

3. Included in Kit:
 - a. Right Mount(1)
 - b. Left Mount(1)



INSTALLATION INSTRUCTIONS

1. Mount light bar into both Roof Mounts to create an assembly.
2. Carefully remove the weatherstrip from the door Jams.

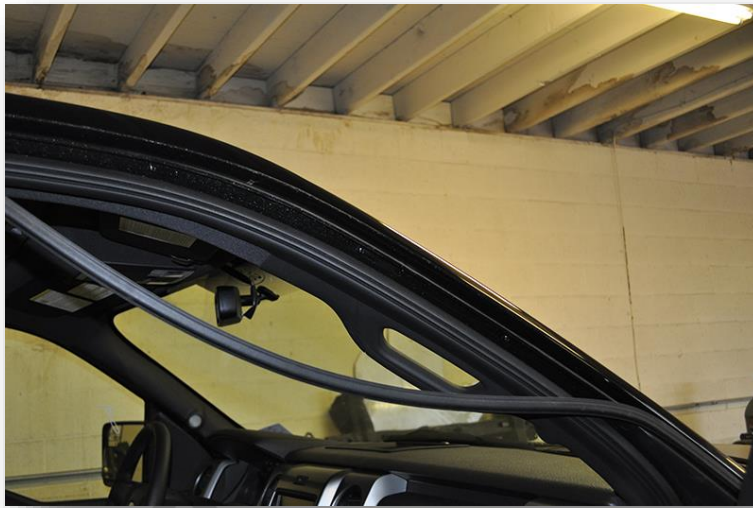

3. Carefully align top of mounts to top of the rivet located inside the door jamb, under the weatherstrip. Do this for both sides of the truck.



4. With the bracket in position, mark and drill the three holes with the 1/4" drill bit and install the rivets and bracket according to the rivet tool manufacturer's instructions. Repeat for the other side.



5. Replace the molding on both sides and wire the light according to instructions included with the light.



6. If you drive a 2013-2014 Ford Raptor your windshield wipers should look like the picture below and trim 2" off top edge of driver and passenger side as shown.



7. Stand back and enjoy your A.D.D. Light Mount.



For additional support or technical questions,
please call 480.671.0820 or
email info@addictivedesertdesigns.com

Addictive Desert Designs
4840 E. Jasmine Street Suite 112
Mesa, AZ 85205
www.addictivedesertdesigns.com