

NOTE: ALUMINIZED SYSTEMS USE SADDLE CLAMPS

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

\$5258 © 03/15 PAGE 1 OF 4



01/16/2015

Figure 1



Figure 2



Figure 4



Figure 5



Figure 6

Removal of Stock System:

- 1. Apply a penetrating lubricant liberally to all hangers and rubber insulators.
- 2. Loosen the factory clamp in front of the muffler.
- 3. Loosen the factory extension pipe flange bolts.

Refer to Figure 1.


4. Rotate the factory extension pipe to release the factory muffler inlet locking boss.

Refer to Figure 2.

- 5. Remove the factory muffler assembly from the hangers and remove from the vehicle.
- 6. Remove the factory extension pipe bolts and remove the factory extension pipe from the vehicle.

Installation of MBRP Inc. Performance Exhaust:

1. Determine the overall length of the **Extension Pipe** (if required). **Refer to figure 3**.

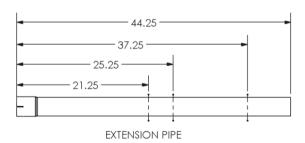

WHEELBASE	EXTENSION PIPE LENGTH
122" RC 6.5' BOX	NONE
141" RC 8' BOX	21.25"
145" EC 6.5' BOX/ SC 5.5' BOX	25.25"
157" SC 6.5' BOX	37.25"
164' EC 8' BOX	44.25" (NO CUT)

Figure 3.

2. Slide the **Flange** onto the **Front Pipe** and loosely install the **Front Pipe** using the supplied **Hardware**.

Refer to Figure 4.

3. Install the appropriate length **Extension Pipe** onto the front pipe using a **3" Clamp**.

Refer to Figure 5.

\$5258 © 03/15 PAGE 2 OF 4





Figure 7



Figure 8



Figure 9



Figure 10



Figure 11

4. Install the **Hanger Clamp** onto the **Extension Pipe** and into the factory isolator.

Refer to Figure 6.

- 5. Install the **Muffler** onto the **Extension Pipe** and lightly secure with the **Hanger Clamp**. **Muffler** outlets will be at a 45° angle viewed from the rear, with the passenger-side outlet at the bottom. **Refer to Figure 7.**
- 6. Place a **2.5**" Clamp over each Muffler outlet and insert the Driver-Side Over-Axle Pipe into the left upper Muffler outlet and factory isolator. Refer to Figure 8.
- 7. Install the **Passenger-Side Over-Axle Pipe** into the lower right **Muffler** outlet. Snug but do not completely tighten the **2.5**" **Clamp**. **Refer to Figure 9.**
- 8. Install the **Hanger Assemblies** using the supplied **Hardware** through the large holes in the rear of the frame. Tighten the hardware enough to support the pipe but leave the final tightening until the final step. The **Hanger Assembly** attachment allows for some height adjustment to align the **Tail Pipes**. **Refer to Figures 10 and 11.** (Driver-side shown)

\$5258 © 03/15 PAGE 3 OF 4





Figure 12

Refer to Figure 12.

10. Install the Driver-Side Tail Pipe into the Driver-Side Hanger Assembly and onto the Driver-Side Over-Axle Pipe using a 2.5" Clamp. Refer to Figure 13.

9. Install the Passenger-Side Tail Pipe onto the Passenger-Side Over-Axle

11. Install the **Exhaust Tips** and adjust to your liking. **Refer to Figure 14 and 15.**

Pipe and into the Passenger-Side Hanger Assembly.

- 12. Once everything is aligned, completely tighten ALL **Clamps** and **Hardware**.
- 13. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



Figure 13



Figure 14



Figure 15



Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your *MBRP Inc.* performance exhaust system. We know you will enjoy your purchase.

\$5258 © 03/15 PAGE 4 OF 4