

# WeatherTech®

## Ford F150 Side Window Deflector Instructions

**WARNING** Accessories that are not properly fitted can be dangerous. Read the instructions carefully before installation, and comply with the instructions at all times.

**NOTE** Deflector may take longer to acclimate below 60° F / 16° C



**1** Make sure that windows are clean and dry. Then, lower windows all the way.

**2** Pull down the weatherstrip from the upper right corner of the window opening as shown.



**3** Remove and discard the L-shaped foam pad inside the weatherstrip, then push the weatherstrip back into place.

**4** Insert the front of the deflector as shown; ensure edge rests on the top of the outer window sill.



**5** Bow the deflector outward to slip the rear flange into the window channel, making sure the window gasket is not folded over.


**6** Starting from the front of the deflector, begin tucking the flange into the window channel.

**View Easy Installation Video**

[WeatherTech.com/install](http://WeatherTech.com/install)

**Questions? Call customer service at 630 769 1500**

**Monday - Friday: 9 a.m. to 5 p.m. Central Time**

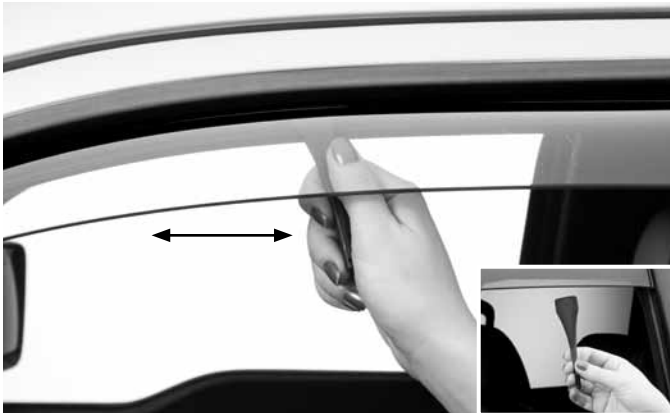

**7** Insert flange seating tool into the window channel and run it back and forth fully to seat the deflector.



**8** Very slowly raise the window; do not activate the window's auto-up feature.



**9** While the window is fully up; carefully work the rear end of the deflector up and down, making sure not to cut the gasket.



**10** Leave the window up for at least 48 hours allowing the deflector to acclimate to ensure proper operation.

**11** Repeat steps 1-10 on the passenger side of your F-150.  
**CONGRATULATIONS!** Your WeatherTech® Side Window Deflectors have been properly installed.

**View Easy Installation Video**  
[WeatherTech.com/install](http://WeatherTech.com/install)

**Questions? Call customer service at 630 769 1500**  
**Monday - Friday: 9 a.m. to 5 p.m. Central Time**