

# Running Board Installation Instructions 83052 & 83053 (1" Drop)

Ford F150 2015-Current

Read all instructions before beginning installation.

## INSTALLATION PACKAGE

Running Board	2
Brackets (Driver Front / Passenger Middle)	2
Brackets (Passenger Front / Driver Rear)	2
Bracket (Driver Middle / Passenger Rear)	2
Bolt Pack (Boards & Brackets)	2



## Necessary Tools

Combination wrench or sockets with 13mm  
Safety glasses


Bolt Pack Brackets	
5/16 or 1/4" USS Flat Washers	16
8mm Serrated Nuts	16

Bolt Pack Running Boards	
5/16" x 3/4" Hex Bolt	16
5/16" Serrated Flange Nut	16


**Step 1:** Reference picture of bracket positions for later steps (Fig 1 thru 3)  
Crew cab will use all 6 brackets. Super cab will use only 4 brackets  
(Driver & Passenger Middle brackets are not used). Regular cab will use  
only 4 brackets (Driver & Passenger Rear brackets are not used).

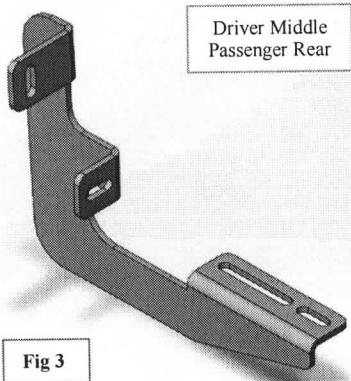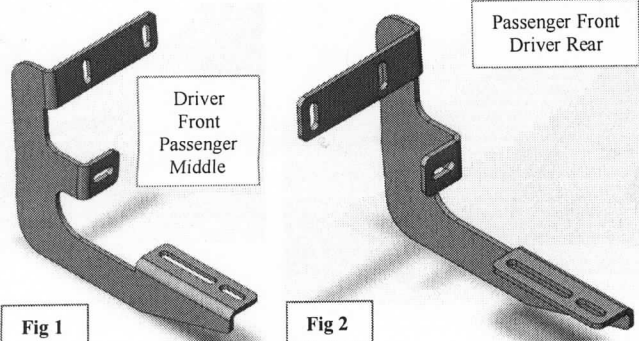


**Step 2:** Install Driver Front (shown) & Passenger Middle brackets using 8mm nuts with washers leaving them snug not tight as shown (Fig 5).

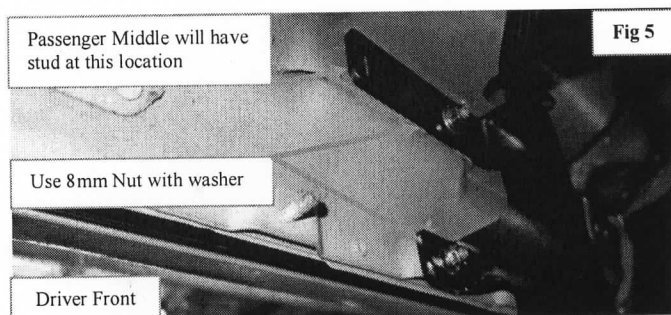


**Step 3:** Install Passenger Front (shown) & Driver Rear brackets using 8mm nuts with washers leaving them snug not tight as shown (Fig 6).

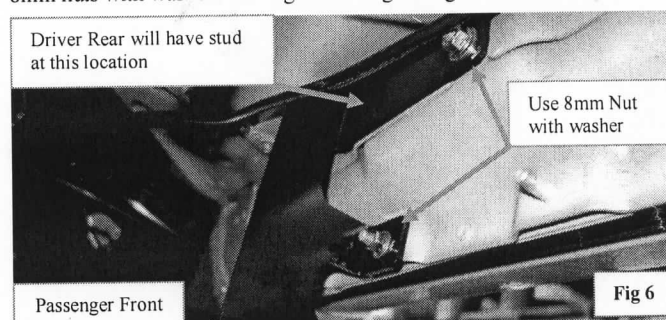

**Step 4:** Install Driver Middle (shown) & Passenger Rear brackets using 8mm nuts with washers leaving them snug not tight as shown (Fig 7).

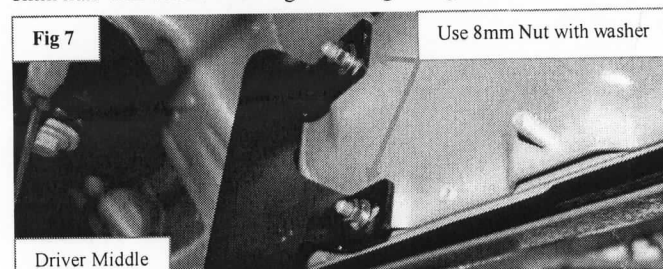

**Step 6:** Now install running boards on brackets. You may have different boards than shown. However, they will have the same type of mounting unless additional installation instructions are provided. Obtain the bracket to board bolt pack. Take out the provided 5/16" x 3/4" bolts. Slide the head of the bolts down the channels on the underside of the board.

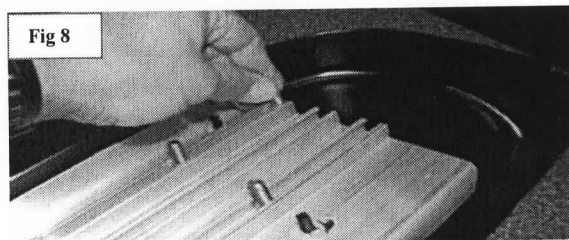

**Step 7:** Now with everything installed. Take a look at the board on your vehicle. There is a lot of adjustment in the kit to get the board where you like them. Adjust boards in and out and side to side with the slots on the bracket where board mounts. Adjust the front and rear brackets first and finish with the middle. Once the boards are in place to your liking, tighten all fasteners on the boards and brackets. This will complete your installation. Enjoy!