



INSTALLATION INSTRUCTIONS

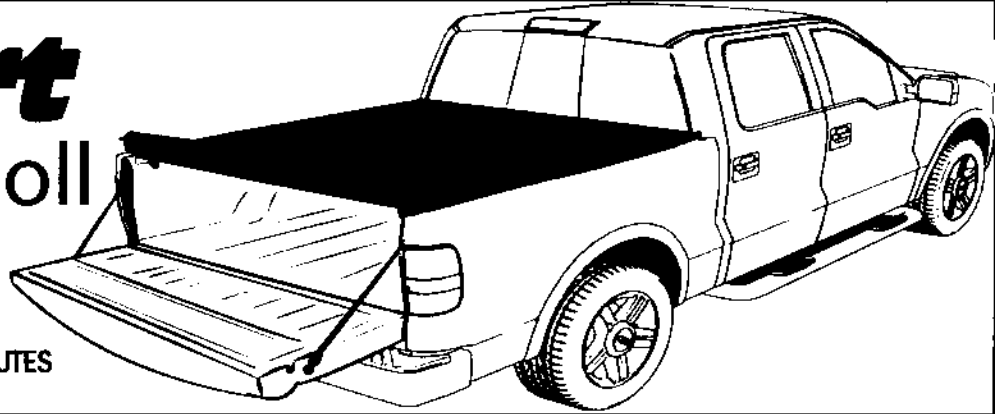


INSTALLATION TIME: 5-10 MINUTES
INSTALLATION DIFFICULTY: EASY

TOOLS REQUIRED

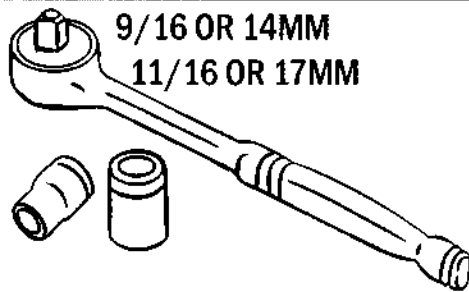

9/16 OR 14MM
11/16 OR 17MM

RATCHET & SOCKETS

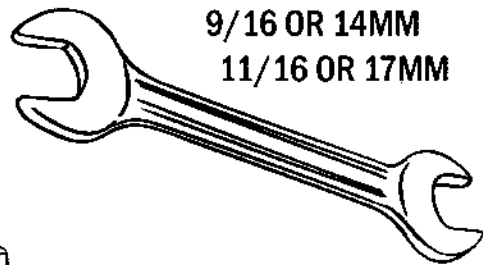


9/16 OR 14MM
11/16 OR 17MM

WRENCH


PACKAGE CONTENTS

MINOR COMPONENTS OMITTED


1) SPRING CLAMPS (X2)

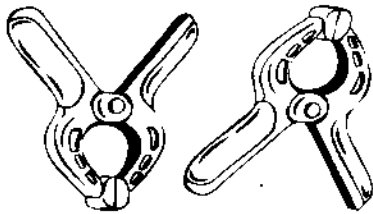


2) RAIL CLAMPS (X6)

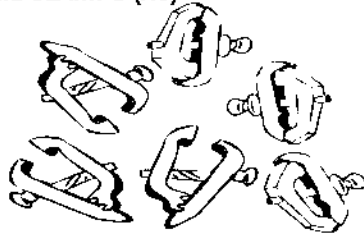


3) TAILGATE SEAL

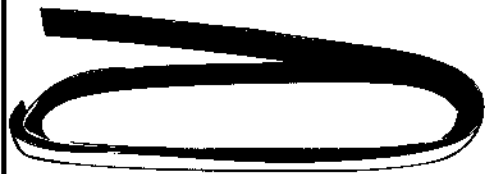

4) NUTS, BOLTS, WASHERS (X2/E)

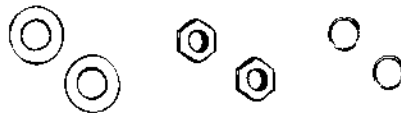

5) RAILS (X2)

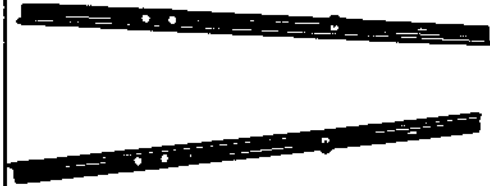

ENSURE ALL CONTENTS ARE IN PACKAGE PRIOR TO INSTALLATION. CHECK PRODUCT FOR DAMAGE. REPORT ANY DAMAGE OR MISSING COMPONENTS TO CUSTOMER SERVICE: 1 (888) 554-TRUX (8789)



PLEASE NOTE YOUR PRODUCTS SERIAL NUMBER, ON THE BOX AND FRAME.


REGISTER YOUR PRODUCTS WARRANTY AT WWW.TRUXMARTCOVERS.COM. FAILURE TO REGISTER MAY VOID YOUR PRODUCTS WARRANTY.

Truxmart

AAA-5555

1| WASH & DRY YOUR TRUCKS BED

2| INSTALL FRONT BULKHEAD SEAL *IF REQUIRED*

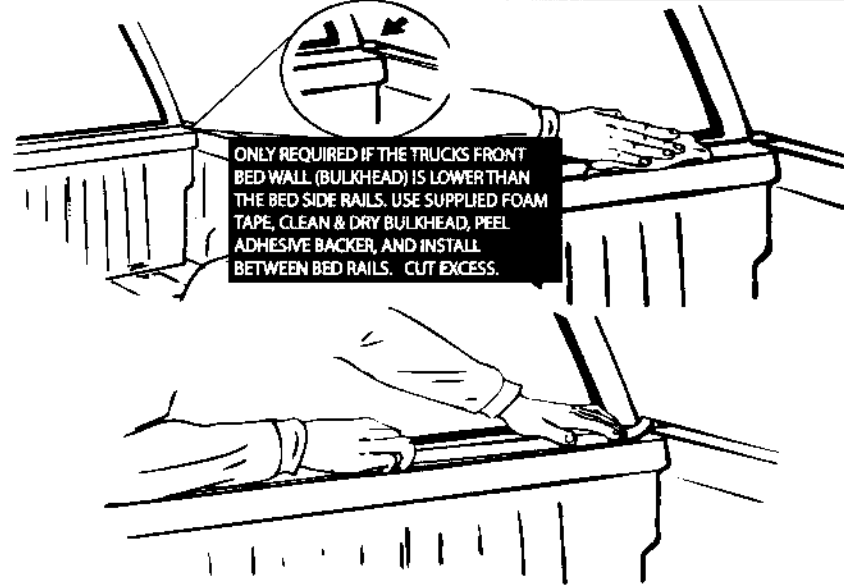


ONLY REQUIRED IF THE TRUCKS FRONT BED WALL (BULKHEAD) IS LOWER THAN THE BED SIDE RAILS. USE SUPPLIED FOAM TAPE, CLEAN & DRY BULKHEAD, PEEL ADHESIVE BACKER, AND INSTALL BETWEEN BED RAILS. CUT EXCESS.

3| INSTALL RAILS




PLACE ONE TRUXMART SMART ROLL RAIL AGAINST TRUCK BED RAIL. TEMPORARILY HOLD IN PLACE WITH TWO SUPPLIED SPRING CLAMPS. ENSURE RAIL GASKETS ARE MAKING CONTACT ON YOUR TRUCKS BED RAILS AND THAT THE PLASTIC COVER GUIDES ARE CLOSEST TO THE TAILGATE.

3 | INSTALL RAILS *CONTINUED*

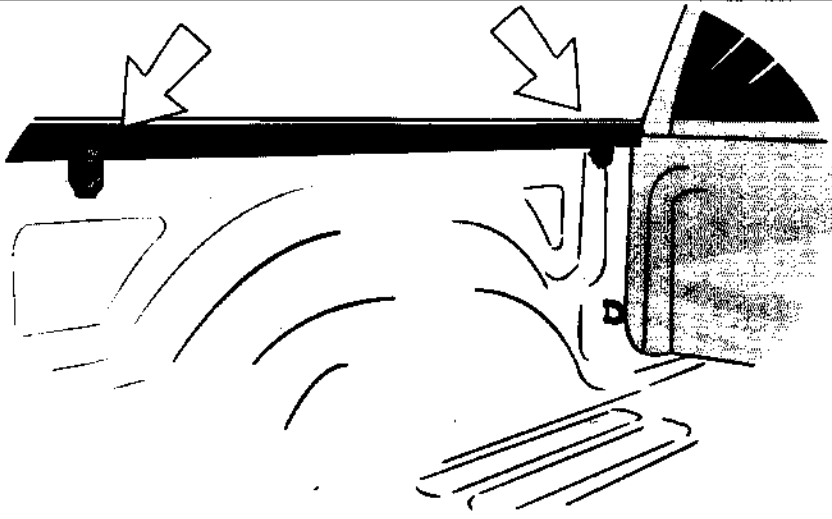


INSTALL THREE (3) EVENLY CLAMPS ON EACH RAIL, EVENLY SPACED. TIGHTEN UNTIL SNUG - DO NOT OVER TIGHTEN. REPEAT THIS STEP ON OTHER SIDE.

4 | POSITION COVER

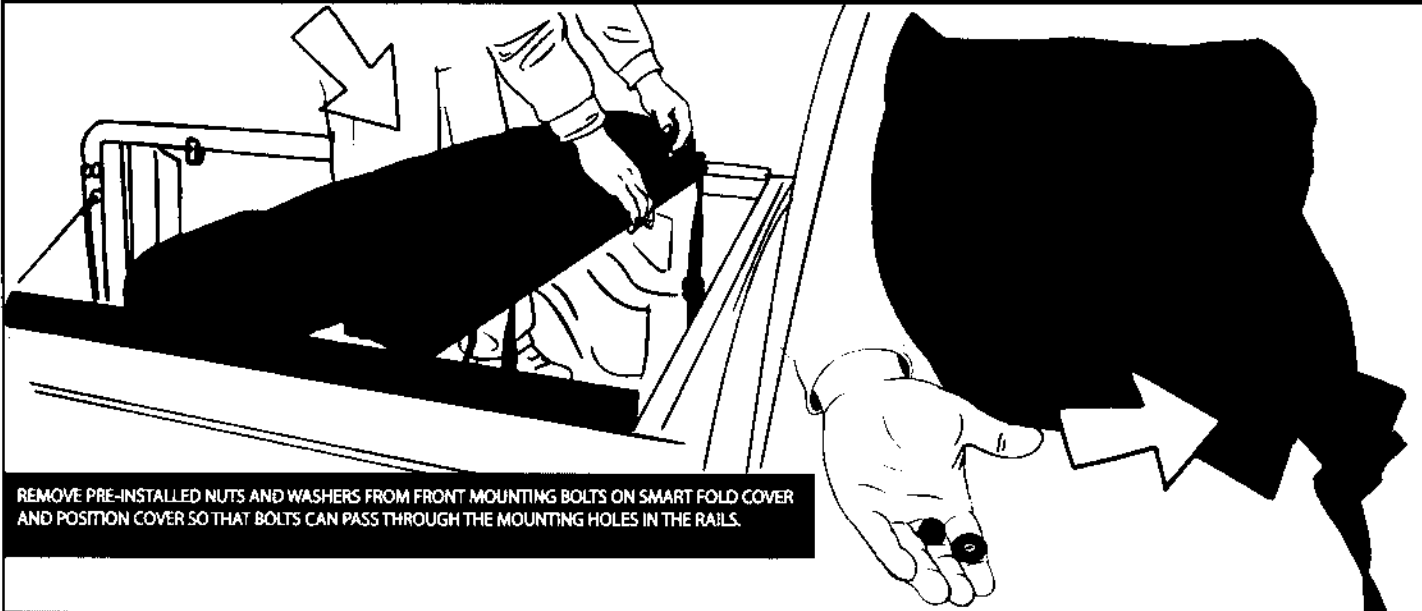


REMOVE PRE-INSTALLED NUTS AND WASHERS FROM FRONT MOUNTING BOLTS ON SMART FOLD COVER AND POSITION COVER SO THAT BOLTS CAN PASS THROUGH THE MOUNTING HOLES IN THE RAILS.

5 | MOUNT COVER TO RAILS

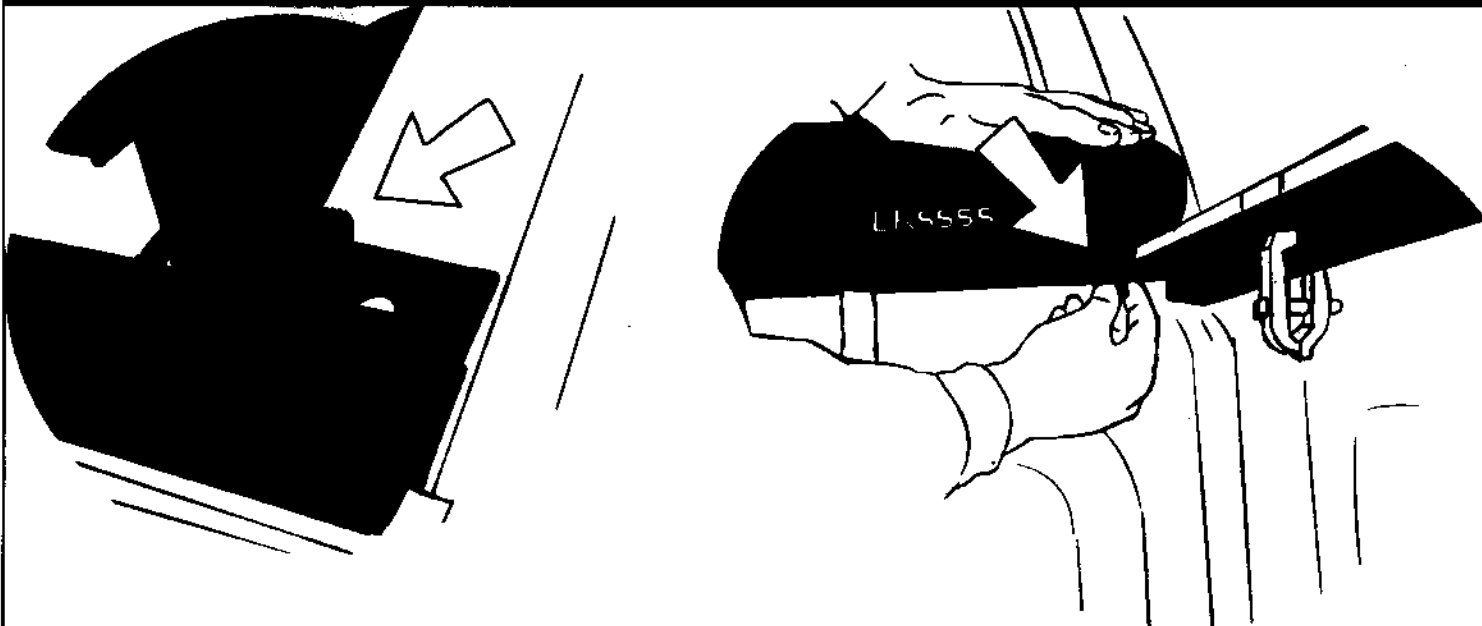



PLACE COVER ON RAILS SO THE BOLTS PASS THROUGH THE RAILS. ENSURE THAT THE FRONT RUBBER LEAF SEAL IS SITTING ON TOP OF YOUR TRUCKS FRONT BED WALL. RE-INSTALL WASHER AND LOCK NUT FROM THE BOTTOM OF THE RAIL. TIGHTEN UNTIL SNUG. PERFORM THIS STEP FOR BOTH SIDES OF THE COVER.

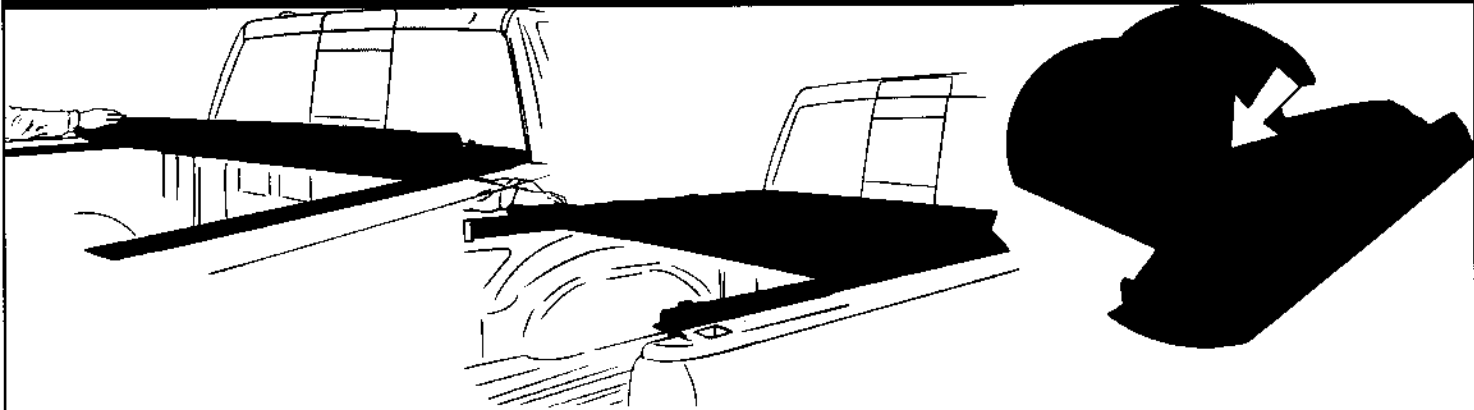

ROLL COVER TOWARDS TAILGATE AND CLOSE, ENGAGING BOTH LATCHES. ENSURE THAT THE COVERS LATCH PANEL SITS IN THE PLASTIC LATCH GUIDE, MOUNTED TO THE RAILS. ONCE COVER IS FULLY CLOSED, PEEL HOOK AND LOOP SIDES OFF RAIL, PULL COVER TIGHT, AND REAPPLY COVER TO RAIL - THIS KEEPS COVER TIGHT AND REMOVES AND WRINKLES IN COVER SURFACE. ALLOW COVER TO ACCLIMATE FOR THREE TO FIVE DAYS.

WARNING, TROUBLESHOOTING, AND GENERAL INFORMATION

THE TENSION OF THE COVER CAN BE EASILY ADJUSTED. TO DO SO, SIMPLY LOOSEN THE TWO BOLTS LOCATED ON THE BOTTOM SIDE OF THE PLASTIC LATCH GUIDE, MOUNTED TO THE RAILS - TIGHTEN BOLTS WHEN FINISHED. SLIDING LATCH GUIDE TOWARDS CAB OF TRUCK WILL LOOSEN COVER. SLIDING LATCH GUIDES TOWARDS TAILGATE WILL INCREASE COVER TENSION. USE THE MARKERS AS A REFERENCE TO ENSURE THAT BOTH LATCH GUIDES ARE SET TO THE SAME LOCATION. TENSION SHOULD BE ADJUSTED SEASONALLY (FOUR TIMES PER YEAR)

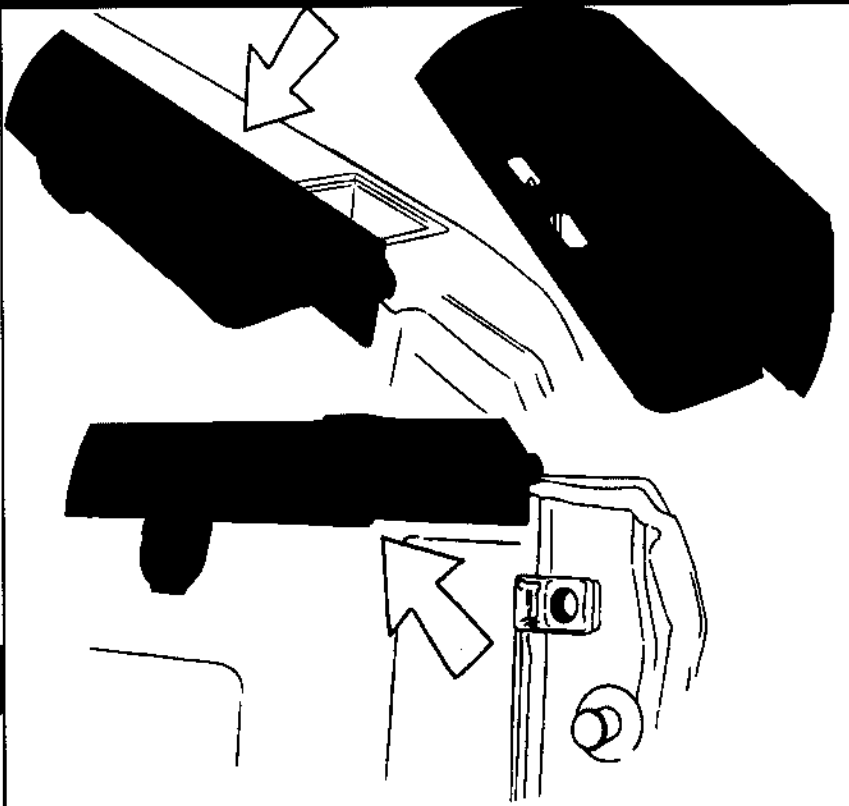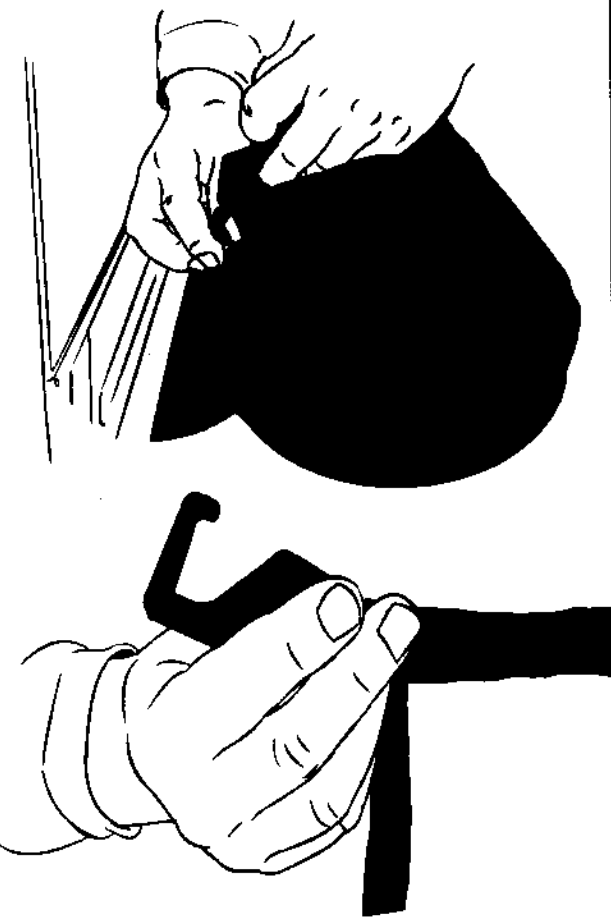

REMOVE ALL SNOW, ICE, DEBRIS, OR FOREIGN MATTER FROM COVER. DO NOT CLEAN VINYL TARP WITH SILICONE BASED PRODUCTS. INSPECT CLAMPS AND HARDWARE REGULARLY. ENSURE ALL CARGO IN TRUCK BED IS SECURE BEFORE DRIVING. DO NOT PLACE ANY ITEMS ON VINYL TARP. COVER MUST BE FULLY CLOSED AND SECURE THROUGH ANY AUTOMATIC CAR WASH.

ENSURE THAT COVER IS SECURED WITH BOTH STRAPS BEFORE DRIVING WITH COVER FULLY OPEN. PLACE THE HOOK THROUGH THE LOOPS SEWN TO THE COVER AND PULL STRAP UNTIL TIGHT AND FULLY SECURED.



WWW.TRUXMARTCOVERS.COM

SALES@TRUXMARTCOVERS.COM

TONNEAU COVERS **1(888)554-8789 - TOLL FREE**

USA
4392 BROADWAY
DEPEW, NY
14043

CANADA
8820 JANE ST
VAUGHAN, ON
L4K 2M9