


Custom Auto Works Store

2015-2016 Raptor light kit Plug & Play

Remove 10 push pins from plastic radiator cover. Remove 4 large push pins on top front portion of the grille. Remove 2- 10 mm nuts on each end of the grille behind the rubber flap. Attach string to mounting tabs on bracket – While holding string pull out on grille and slide bracket down through the top opening turning light sideways manipulating the light, and pulling out on grill to get it in. Pull up on string to bring light bracket to top of grille. Now reach you hand through the front of the grille and push mounting tabs into place install 2 large push pins (light bracket tabs will now be sandwiched between grill shutter tab and grille tab) Run wire over to passenger side headlight unplug top marker light plug . Plug in Y adaptor push connector in and make sure locking tab snaps in. You will need to push up on locking tab to lock tab in place now connect raptor light. . If you have any problems with the install you can e mail me at

Rredroush@aol.com or Call Randy 315-767-6916

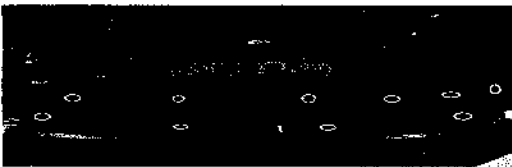

10 push pins 2 large pin



4 large pins

Install videos at customautoworksstore.com