



09-14 F150 Raptor Style Grille w/ Lights

KIT INCLUDES

Raptor style grille with 3 amber lights
Wiring harness

TOOLS NEEDED FOR INSTALLATION

10mm Wrench
T25 Torx Wrench
Plastic Prybar

OPTIONAL
Electric Screw gun with
#2 Phillips head bit

PRIOR TO INSTALLATION

- Make sure the kit is complete and you have read the instructions thoroughly before beginning installation.
- Ensure you have the correct grille for your truck before beginning the installation process.
- **NOTE:** The grille comes complete with LED lights and a wiring harness which need to be connected to a power source. If you are not qualified to safely make the proper connections we highly recommend that you contact an expert to complete the installation safely. The wiring harness is included for your convenience, but your specific installation may require additional wiring or other components not supplied in our hardware kit.

Removing the OEM Grille

Step 1. Removal of OEM grille

- Cover the hood around the grille shell with masking tape to protect the finish of the hood when removing the factory grille shell and installing the Grille. **Fig 1**
- Open the hood and use a 10mm socket wrench to remove the (6) factory hex nuts from across the top of the factory grille shell. **Fig 2**
- Use a T-25 Torx wrench to remove the (6) screws from across the bottom of the factory grille shell. **Fig 3**
Save these screws for later use.
- Slightly pull on one of the top corners of the factory grille shell and carefully slide a plastic pry bar between shell and hood. **Fig 4**
- Carefully pull the shell away from the hood with pry bar. Start on one side and work your way across the opposite side of the grille shell, then remove grille shell from vehicle.

FIG 1

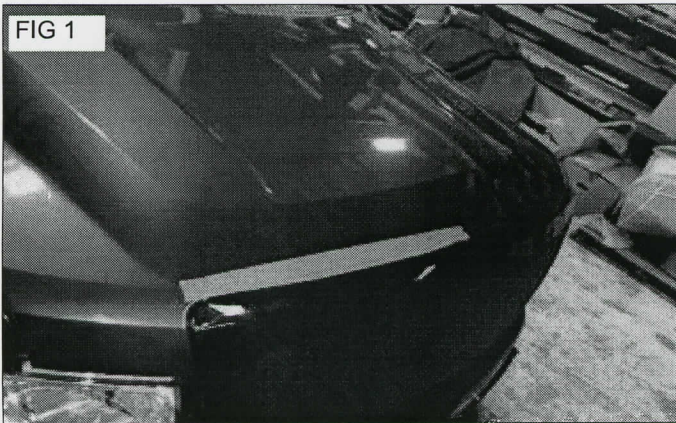


FIG 2

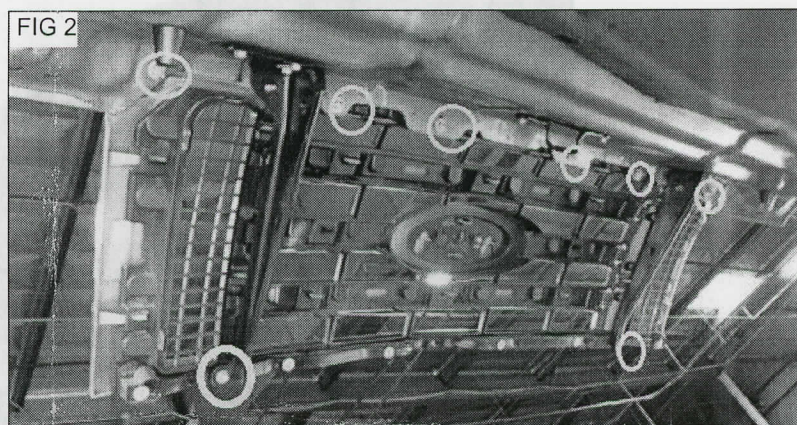


FIG 3

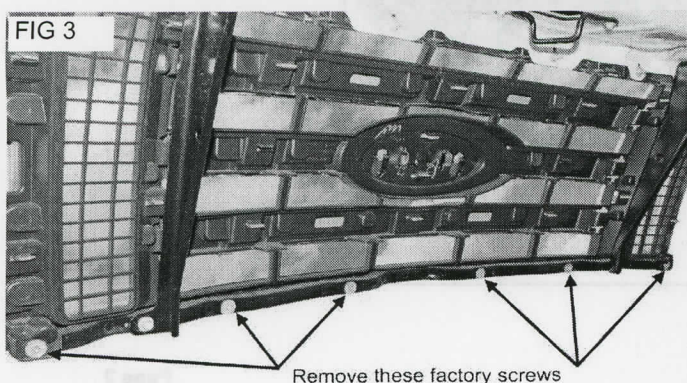


FIG 4



Step 1.

- Position Grille over vehicle cavity and attach the top of the Grille to vehicle by inserting the metal clips into the same factory grille shell mounting locations (**Fig 5**). **IMPORTANT!** Make sure the carriage bolts on the top of the grille are in place and aligned with the holes in the hood, and then carefully push on the top of the Grille until the top metal clips are fully engaged.
- Secure the top of the grille with OEM hardware from the removal process. Do not tighten at this time.
- Proceed to secure the bottom of the Grille to previous factory grille shell mounting locations. Align Grille and then tighten the (6) factory Torx Screws saved from the removal process. (**Fig 6**)
- Tighten all hardware at this time.
- The installation process is complete.

Page 1

