

BARRICADE

OFF-ROAD ARMOR

2009-2014 Pocket Style Fender Flares

Features:

Injection molded fender flares made from light-weight, impact resistant, non-cracking, non-warping, 100% UV-resistant Polypropylene.

Use of factory holes when possible - some models may require drilling.

Injection molded smooth matte black finish.

Professional installation is always recommended.

Step 1 -

Before installation:

- A. Fit: Fit to the vehicle should be confirmed. Some filing, sanding, or cutting may be adopted for proper fit if necessary.
- B. Painting: (Optional) If paint is desired it must be done prior to installation. Follow good painting practice, prep the flare accordingly.
- C. Metal Protection: Apply rust resistant paint on any and all exposed fasteners and bare metal.


TOOLS FOR EASY INSTALLATION

- Utility Knife
- Electric Drill
- 1/4" Drill Bit
- #2 Phillips Driver
- 1/2" Wrench
- Socket Wrench
- 7/32" Socket
- 10 mm Socket
- Grease Pencil


Hardware Kit:




SW1-0067,
5/16 x 18 x 3/8"
SS Torx Screw,
38 pcs



WA1-0012,
320 x 700 x 03
SS Washer,
38 pcs



NU1-0019,
5/16-18 Jam Fin,
Nylock Nut,
38 pcs



SW1-0002,
T-45 Torx Bit,
1 pc



GP1-0005,
Large Wiper Style
Edge Trim,
360 inches




CL1-0011,
10A-4 Magni
Black Clip,
2 pcs




CL1-0009,
Long "U" Clip,
Magni 565
12 pcs



MT1-0014,
1" x 1.5" x .01"
Black Tab,
12 pcs



RV1-P001,
1/4" Black Nylon
Retainer,
8 pcs



SW1-0058,
#10 x 5/8" Phillips
SS Truss Screw,
14 pcs



ET1-0002,
Edge Trim Tool,
1 pc

Component List:



Front Left Flare



Front Right Flare



Rear Left Flare



Rear Right Flare



Front Left Inner Piece



Front Right Inner Piece

Front Flare Installation Procedures (Driver's Side):

STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0005) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).

B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.




Pocket Hardware Installation:



Put a Washer (WA1-0012) on each Bolt (SW1-0059).



Put each Bolt/Washer combination through a pocket hole in the flare.

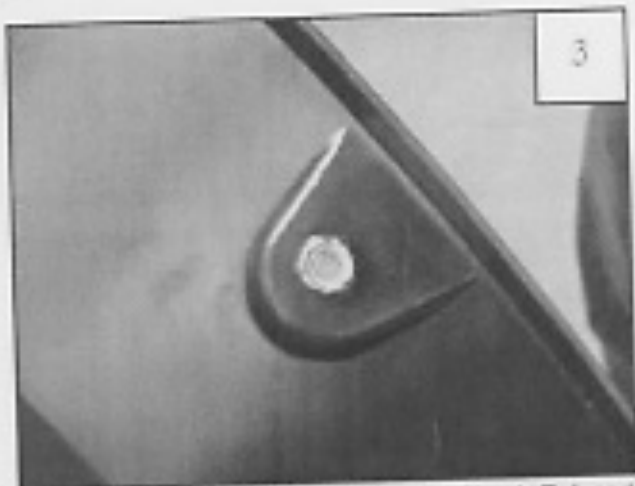

Place a Nut (NU1-0019) over the end of each Bolt and tighten.

Front Flare Installation Procedures (Driver's Side):



Remove three factory screws with a 7/32" socket wrench. Save screws for reinstallation.



Install Clip (CL1-0011) over fender wheel well lip. See step 6.



Place Clip (CL1-0011) over existing factory hole.



Line up the holes in the inner piece with the two uppermost factory holes and the Clip (CL1-0011). **NOTE:** Driver's side inner piece is marked with an "L" and passenger's side inner piece is marked with an "R".



8
Using a Phillips screw driver, start a factory supplied screw through center hole in inner piece and through the Clip (CL 1-0011) over the fender wheel well lip.



9
Using a 7/32" socket wrench, reinstall the factory screws through the inner piece.




10
Position and hold flare on fender and reinstall rear-most factory screw using a 7/32" socket wrench



11
Still holding flare in position on fender, drill through bumper cover with a 1/4" drill bit using the forward most hole in the flare as a guide.



12
Still holding flare to fender, install Retainers (RV1-P001) using a Phillips screw driver. See step 13.

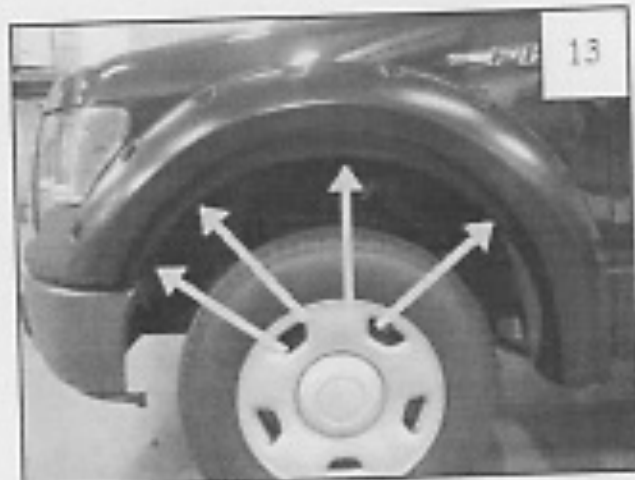

13
Retainer (RV1-P001) locations.



19

Hold flare to vehicle and start Screw (SW1-0058) through the two topmost holes in wheel well. Then start Screws through remaining four holes in flare. Tighten all Screws.



20


Using a 10 mm socket wrench, reinstall factory bolts.



21


Completed rear flare installation.

Edge Trim Tool Procedures:

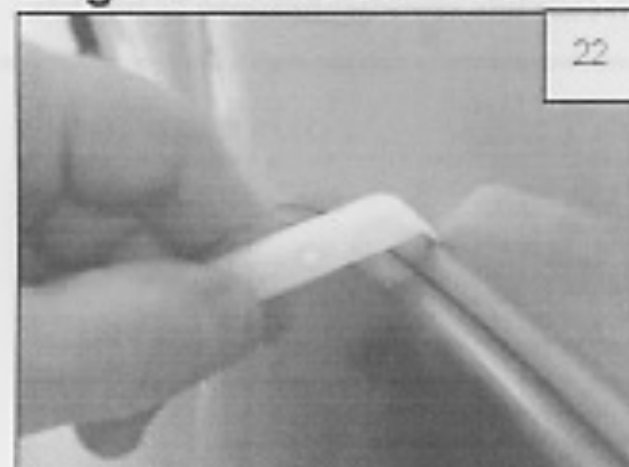

22

Using supplied Edge Trim Tool (ET1-0002), seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.

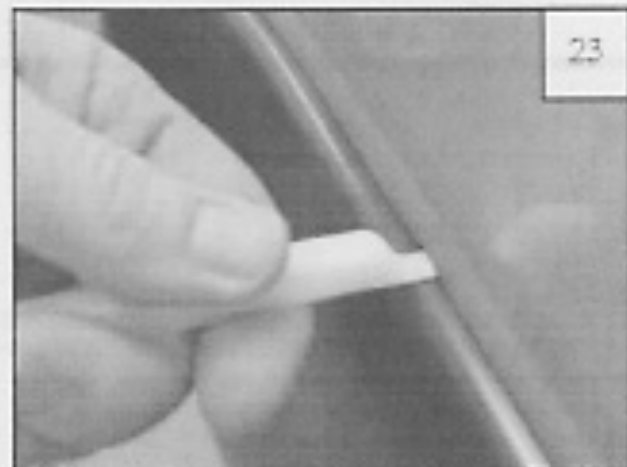

23

Using flat end of supplied Edge Trim Tool (ET1-0002), seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.