

# **SCRUBBLADE**

## **Installation Guide**


---

**Step 1:** Thank you for your purchase. Now remove your old, faded, cracked, useless windshield wipers and recycle them because we here at Scrubblade care about the environment and you should too.


**Step 2:** Open up the attractive Scrubblade package; Slowly pull your brand new shiny, strong, functional and always useful Scrubblade wiper out from the top noticing how well your new Scrubblade wiper has been made. Show it off to your friends if you want .

**Step 3:** After you have shown it off to your friends, install the Scrubblade on your vehicle using the guide below based on your cars wiper assembly. Now feel good about buying a Scrubblade that actually works.


Hook type arm

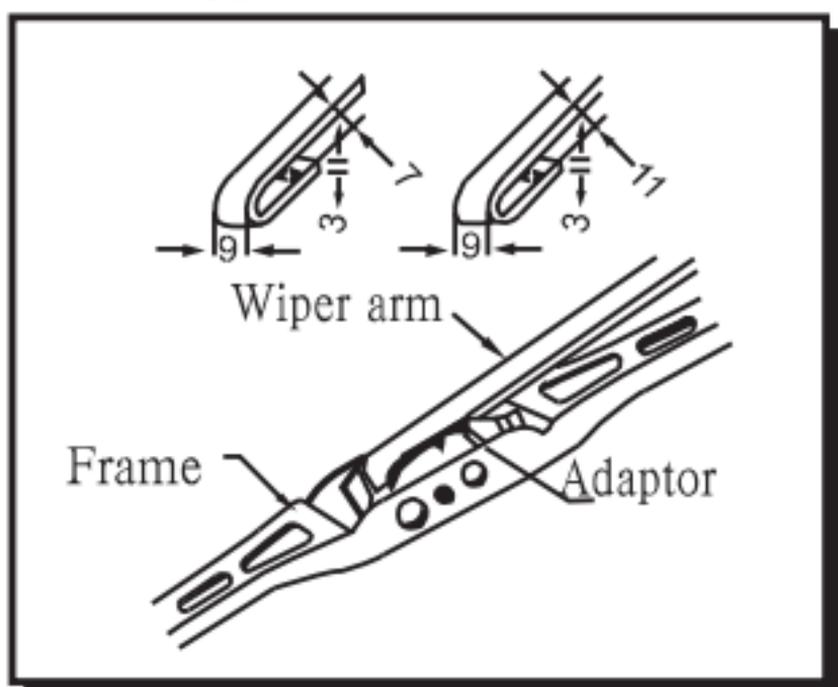

Bayonet type arm

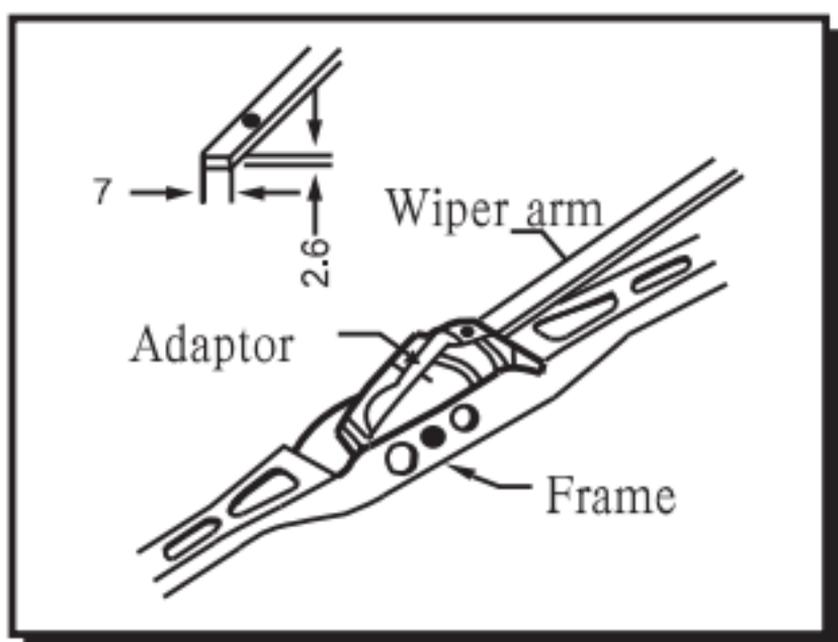

Male pin type Arm

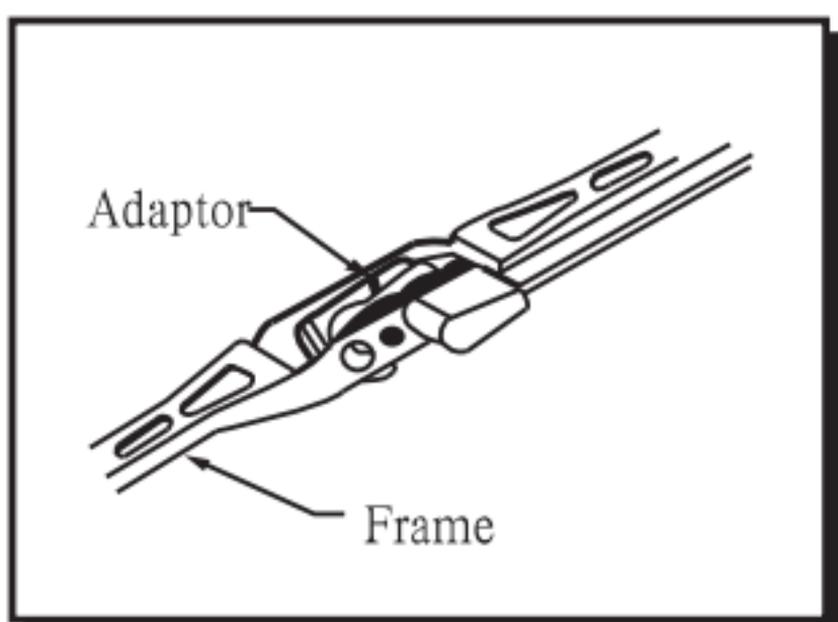

# CH-618 PLATINUM FLAT BLADE INSTALLATION INSTRUCTIONS

**NOTE: Remove Yellow Safety Clips**

## UNIVERSAL ADAPTION SYSTEMS

## SPECIFIC ADAPTION SYSTEMS

### Hook Arm: 9x3mm & 9x4mm



- 1 Open Anti Snow Lid
- 2 Insert the Hook Arm
- 3 Attach Hook Arm and pull to click together
- 4 Close up the Anti Snow Lid

### Pin Arm: 1/4" & 3/16"



- 1 Tilt Internal Connector Up
- 2 Insert Pin into Hole
- 3 Click Down the Connector on Pin

### Bayonet Arm: 1/4" & 3/16"



- 1 Tilt Internal Connector Up
- 2 Insert the Bayonet Arm into the Slot of Connector
- 3 Click to Lock the Connector on Bayonet Arm

### Exchanging the Mounting Base from X3 to X4

- 1 Pinch to Release the Fasten Buckles Underside of Blade
- 2 Take off the X3 Mounting Base from Bracket
- 3 Set the 4X Mounting Base at Pre-Install position as Shown
- 4 Click the X4 Mounting Base Down to the Bracket

### 3B-A (22mm) Specific Wiper Arm



- 1 Insert the Pin Socket on to the Pin
- 2 Fasten the Pin Socket in Position as Shown
- 3 Snap on the Pin Socket Base onto 4X Mounting Base
- 4 Set the Assembled Pin Arm+Socket at Pre-Install Position as Shown
- 5 Set the Assembled Pin Arm+Socket onto the Pin Socket Base

**WARM REMINDER:**  
The pin socket has specific structure to hold the pin firmly. Pliers might be needed for an easier installation procedure.

### 3B-B (19mm) Specific Wiper Arm



- 1 Insert the Pin Socket on to the Pin
- 2 Fasten the Pin Socket in Position as Shown
- 3 Snap on the Pin Socket Base onto 4X Mounting Base
- 4 Set the Assembled Pin Arm+Socket at Pre-Install Position as Shown
- 5 Set the Assembled Pin Arm+Socket onto the Pin Socket Base

**WARM REMINDER:**  
The pin socket has specific structure to hold the pin firmly. Pliers might be needed for an easier installation procedure.

### 3D Specific Wiper Arm





- 1 Insert the Arm from the Back Slot of Connector
- 2 Lock the Tip Hole of Arm by the Buckle at the Front Connector
- 3 Set the Assembled Arm+Connector at Pre-Installation Position as Shown
- 4 Snap Assembled Arm+Connector onto the X4 Mounting Base

# CH-618 PLATINUM FLAT BLADE INSTALLATION INSTRUCTIONS



**NOTE: Remove Yellow Safety Clips**

## UNIVERSAL ADAPTION SYSTEMS

### 3H-A (22mm) Specific Wiper Arm

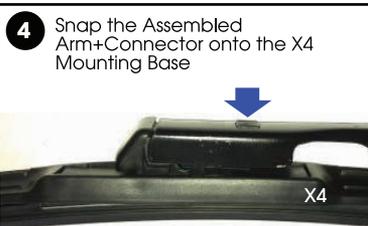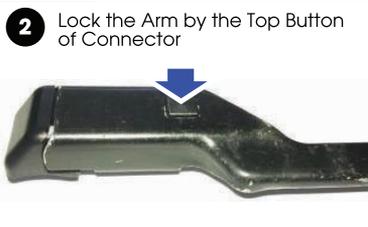


### 3H-B (19mm) Specific Wiper Arm

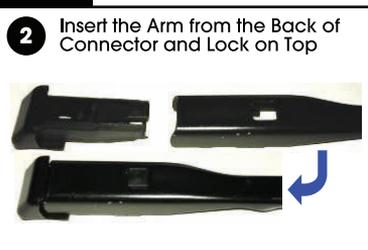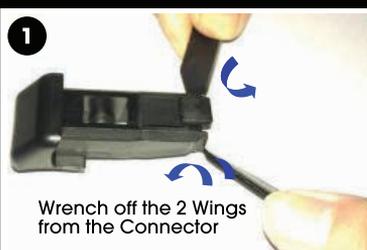


## SPOILER POSITION

For LHD (Left Hand Drive) Type Vehicle

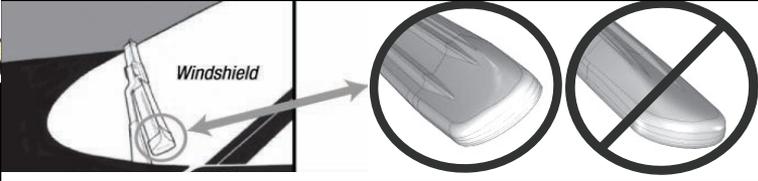


For LHD (Right Hand Drive) Type Vehicle

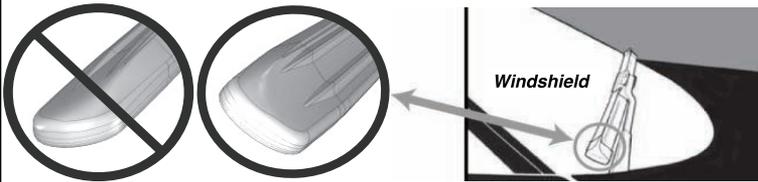

## OPPOSING WIPING PATTERN VEHICLE

For Universal Adaption Systems

\* If vehicle has "opposed" wiping pattern as shown, follow these instructions **FOR PASSENGER SIDE BLADE INSTALLATION ONLY.**



For Specific Adaption Systems

\* If vehicle has "opposed" wiping pattern as shown, follow these instructions **FOR PASSENGER SIDE BLADE INSTALLATION ONLY.**

