


**★ RBP™**  
**ROLLING BIG POWER**

**2015 FORD**


**PART #258577-C**

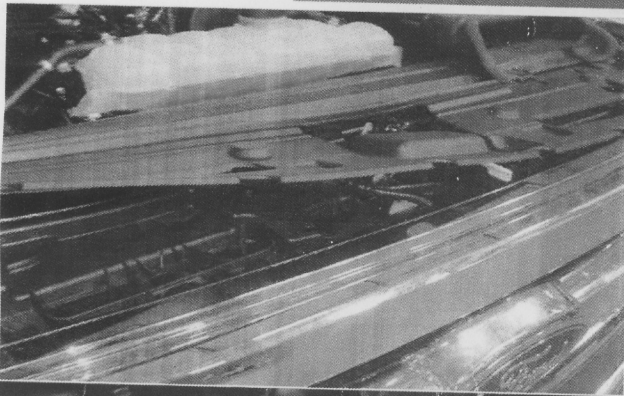

STEP 1. USING BLUE PAINTERS TAPE COVER THE GRILLE FRAME. THEN REMOVE RADIATOR COVER ABOVE GRILLE HELD BY PUSH ON TABS.




STEP 2- REMOVE SIDE PLASTIC PUSH ON TABS THAT HOLD PLASTIC GUARD TO GRILL

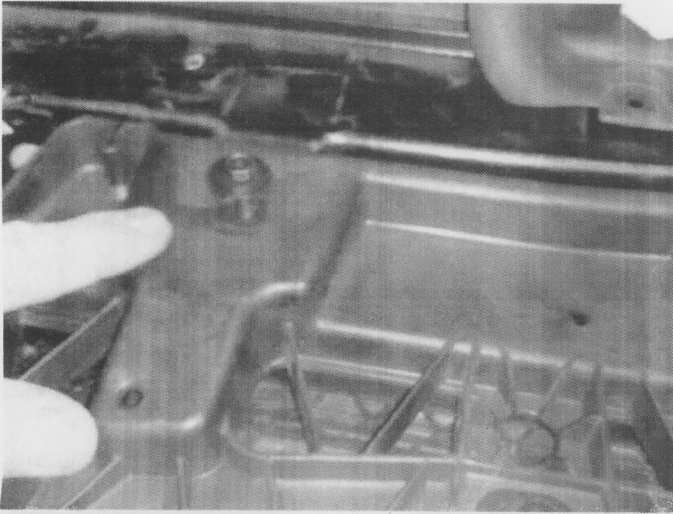

STEP 3. REMOVE THE FOUR 10MM SCREWS THAT HOLD THE GRILL TO THE RADIATOR SUPPORT.




STEP 4. VERRY CAREFULLY REMOVE HEADLIGHT MOLDINGS BY PULLING BACK GENTLY AND THEN REMOVE THE 10MM SCREWS LOCATED UNDER.

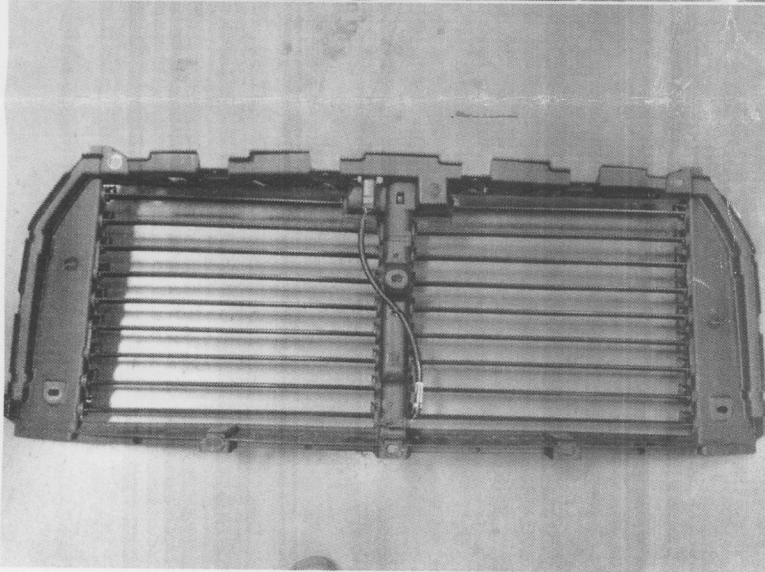



STEP 5. AFTER REMOVAL OF THE GRILL, SEPARATE THE AIR DUCT FROM THE GRILL.




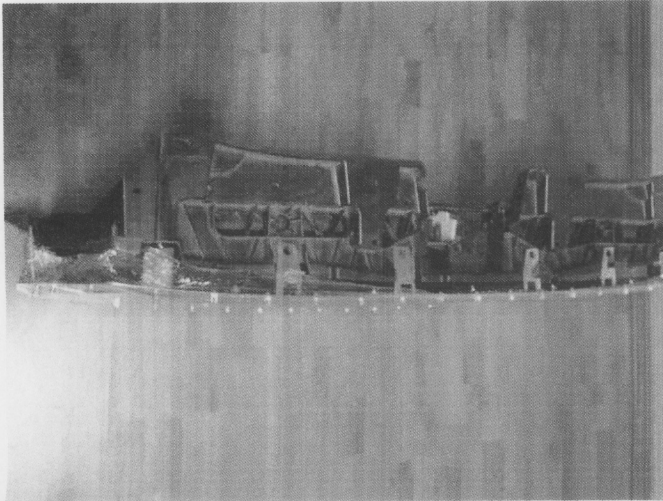

STEP 6. REMOVE HARDWARE FROM RBP GRILLE THEN PLACE RBP GRILLE OVER RADIATOR SHROUD.

- A) FIRST SECURE THE TWO TOP CORNERS PLACING WASHERS AND NUTS.
- B) RELOCATE PUSH ON TABS ON TOP PART.
- C) SECURE SIDE AND BOTTOM PARTS USING HARDWARE SUPPLIED.

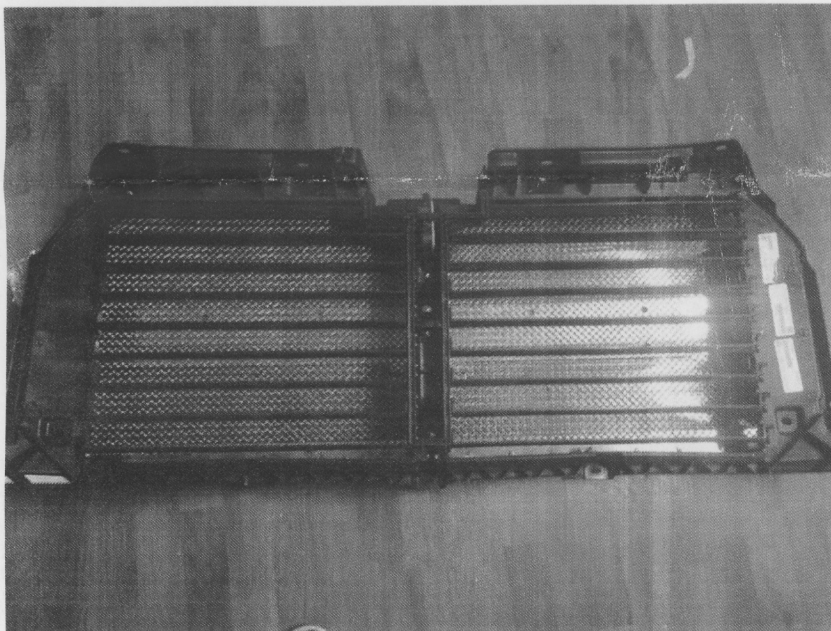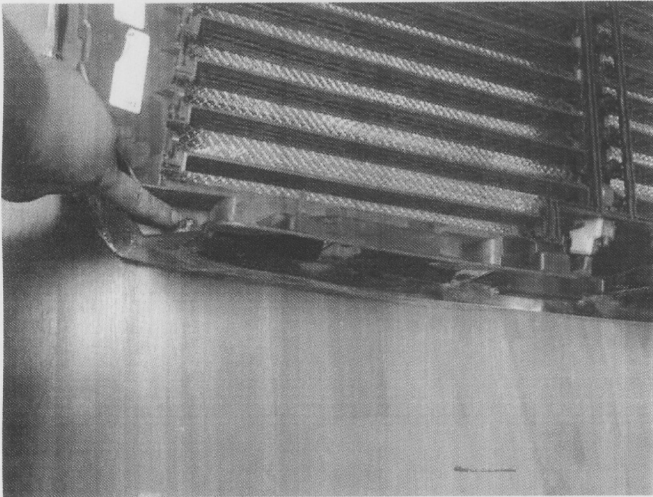

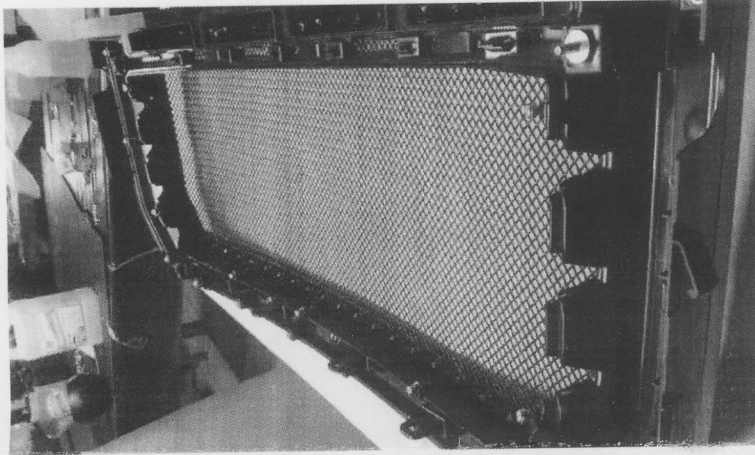

STEP 7. REINSTALL RADIATOR SHROUD WITH RBP GRILLE ONTO TRUCK AND ALIGN, FINALLY TIGHTEN TOP NUTS AND REINSTALL ALL OTHER NECESSARY PARTS TO FINISH INSTALLATION.

IF YOU HAVE ANY ISSUES OR QUESTIONS REGARDING INSTALLATION, PLEASE CONTACT CUSTOMER SERVICE.

**CUSTOMER SERVICE 1-800-237-7560**

